 


EKEA

E900_{WT}

Wireless Gaming Headset

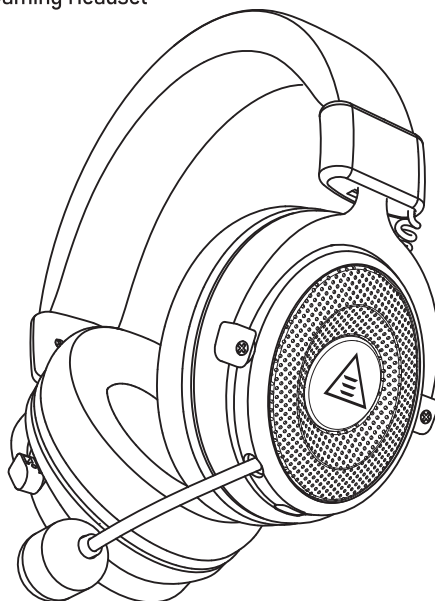

User Manual




Language Guide

English	1
Français	7
Deutsch	13



Package Contents

 - ① EKSA E900 WT Wireless Gaming Headset
- ② 3.5 mm Audio Cable
- ③ Type C Charging Cable
- ④ USB & Type-C Dongle
- ⑤ User Manual

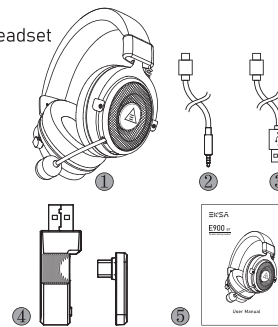

Specifications

Brand: EKSA
Product: E900 WT
Model: E900 WT
Speaker Size: 50 mm
Unit Impedance (Ω): 32 Ω
Frequency Range: 20 Hz -20kHz
Sensitivity (dB/mW) : 122 $\pm$ 3 dB
Battery Specifications: DC 3.7 V, 1200 mAh, 4.44 Wh
Battery Type: Lithium-ion Battery
Use Time: Up to 60 hours
Input: 5 V $\overline{=}$ 1 A
Charging Time: 3 h
Charging Temperature Range: 0°C - 45°C
Operating Frequency: 2402-2480 MHz
Maximum Transmit Power: < 20 dBm
Mic Type: Condenser Mic
Polar Pattern: Bidirectional Microphone
Sensitivity: -42 $\pm$ 3 dB
Impedance: 2.2 k Ω

Operation Guide

Volume Control Wheel:

-   Scroll upward:
Volume +
-   Scroll downward:
Volume -

Mic Button:

-   x1 Single Click: Mic On/Off
-   x2 Double Click: Switch Between
2.4G and Bluetooth
-   8" Press and Hold for 8 Seconds:
2.4G/Bluetooth Pairing
-   1.5" Press and Hold for 1.5 Seconds:
Turn On/Off The Light

Power Button:

-   3" Press for 3 seconds:
Power on / off
-   x1 Single Click:
Play/Pause

Wired Mode:


When the 3.5 mm audio cable plugs in, the headset will turn off automatically. Only the volume control works while all the other buttons don't.

Bluetooth Pairing/ Connection:

For the first pairing, the headset automatically enters Bluetooth mode by default after powering on and switches to pairing mode. If no connection is established within 5 minutes, the headset will power off.

If the headset has a pairing record, it automatically enters Bluetooth mode by default after powering on and switches to reconnection mode. If reconnection is not established within 10 seconds, the headset will enter pairing mode. If no connection is established within 5 minutes, the headset will power off. If the headset successfully pairs and connects with a device within 5 minutes, it will enter the connected state.

When the headset is powered on, it automatically enters Bluetooth mode by default. Press and hold the mute button for 8 seconds to clear the Bluetooth pairing records. After clearing the records, the headset will automatically enter pairing mode. Release the button after the voice prompt "Pairing", and the pairing indicator will flash red and blue alternately at a fast pace.

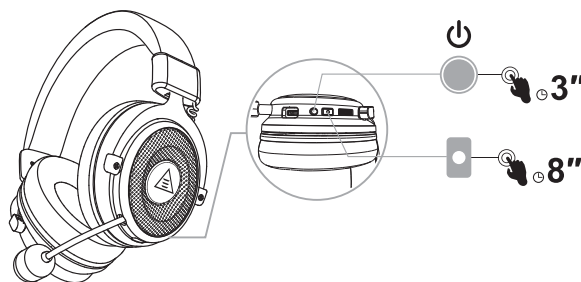


USB Dongle Settings


Follow the steps below to ensure your EKSA E900 WT headset is the default audio device.

Windows®:


Audio Settings:

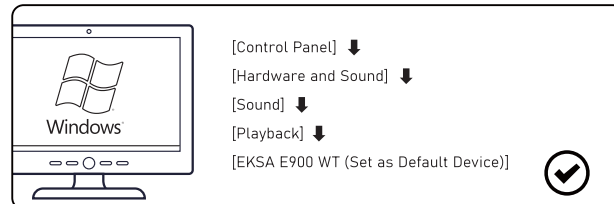

Microphone Settings:

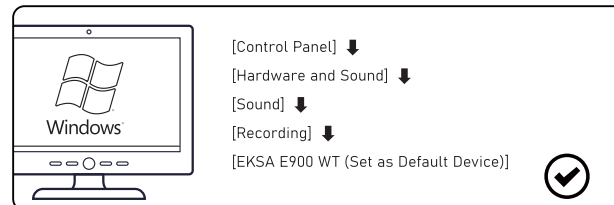

macOS:

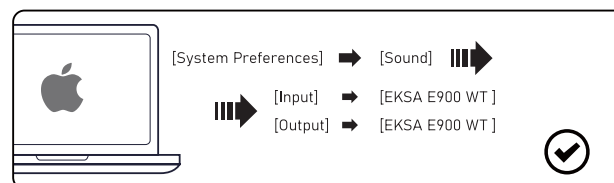 

FAQ

Question 1: There is no sound from the microphone or headset, or the sound is low.

- A:** **(1)** First, make sure your headset is correctly connected to the device. If not, check your audio settings to ensure the speakers are enabled and not muted. Also, check the volume levels on both your device and headset to ensure they are set appropriately.
- (2)** Unplug the transmitter or 3.5mm audio cable and reconnect it. Clean any dust or dirt from the transmitter's port. Reconnect the transmitter to the device and check if the microphone is functioning properly.
- (3)** Please check the sound settings (for detailed steps, refer to pages 4).

Question 2: I cannot use the microphone of the headset when connecting to my computer.

- A:** **(1)** Go to Control Panel > Hardware and Sound > Sound. Disable the built-in microphone on your computer and set the headset microphone as the default.
- (2)** Check that the microphone is not muted.

FAQ

Question 3: The person on the other end of the call cannot hear my voice.

A: (1) Check that the microphone is not muted.

(2) In the audio settings, ensure that your headset is set as the default audio device. For more specific sound settings, please refer to pages 4.

(3) Make sure your device is compatible with the headset. Older versions of Xbox® One may require an additional Microsoft adapter (not included).

(4) If all the above have been confirmed and the headset is compatible with your device, but the microphone still doesn't work, please feel free to contact us at info@eksa.net.

Question 4: The headset cannot connect to the transmitter.

A: (1) Check if the transmitter is properly inserted into the device and verify that the indicator light on the transmitter is working. If the transmitter is functioning, power on the headset, switch it to 2.4G mode, and then press and hold the microphone mute button for 5 seconds until the red and blue status lights flash alternately or you hear the "Pairing" voice prompt. Release the button at this point. The headset's pairing status LED will flash alternately in red and blue. Once you hear the "Connected" prompt, it indicates the headset has successfully paired with the transmitter, and the headset's status LED will blink two blue flashes every 2 seconds.


(2) If the issue persists after following the above steps, please feel free to contact us at info@eksa.net.

FR



Contenu du colis

- ① Casque de jeu sans fil EKSA E900 WT
- ② Câble audio 3,5 mm
- ③ Câble de charge de type C
- ④ Clé USB
- ⑤ Manuel d'utilisation

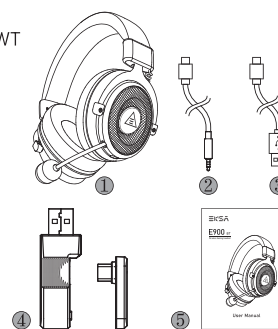

Caractéristiques

Marque: EKSA
Produit: E900 WT
Modèle: E900 WT
Taille du haut-parleur: 50mm
Impédance (Ω): 32 Ω
Bande de fréquences: 20Hz - 20kHz
Sensibilité (dB/mW): 122 $\pm$ 3dB
Caractéristiques de la batterie: 3,7V CC, 1200mAh, 4,44Wh
Type de batterie: Lithium-ion
Autonomie: Jusqu'à 60 heures
Entrée: 5V $\equiv$ 1A
Temps de charge: 3h
Plage de températures de charge: 0°C - 45°C
Fréquence de fonctionnement: 2402-2480MHz
Puissance d'émission maximale: <20dBm
Type de micro: Micro à condensateur
Direction polaire: Microphone bidirectionnel
Sensibilité: -42 $\pm$ 3dB
Impédance: 2,2 k Ω



Guide d'utilisation



Molette de contrôle du volume :



Défilement vers le haut:
Volume +



Défilé vers le bas:
Volume -



Bouton micro :



Clic simple:
Activation/Désactivation du micro



Double clic: Basculement entre
2,4GHz et Bluetooth



Appui long de 8 secondes:
Couplage 2,4GHz/Bluetooth



Appui long de 1,5 seconde:
Allumage/Éteindre la lumière



Bouton d'alimentation:



Appuyer 3 secondes:
Marche/Arrêt



Clic simple:
Lecture/Pause

Mode filaire:

Lorsque le câble audio 3,5 mm est branché, le casque s'éteint automatiquement. Seul le contrôle du volume fonctionne, les autres boutons étant inopérants.



Connexion Bluetooth/ Couplage:


Lors du premier appairage, le casque passe automatiquement en mode Bluetooth par défaut après la mise sous tension et passe en mode appairage. Si aucune connexion n'est établie dans les 5 minutes, le casque s'éteint.

Si le casque possède un historique d'appairage, il passe automatiquement en mode

Bluetooth par défaut après la mise sous tension et en mode reconnexion. Si aucune reconnexion n'est établie dans les 10 secondes, le casque passe en mode appairage. Si aucune connexion n'est établie dans les 5 minutes, le casque s'éteint. Si le casque se connecte à un appareil dans les 5 minutes, il passe en mode connecté.

Lorsque le casque est allumé, il passe automatiquement en mode

Bluetooth par défaut. Maintenez le bouton de sourdine enfoncé pendant 8 secondes pour effacer les enregistrements de couplage Bluetooth. Après cela, le casque passe automatiquement en mode couplage. Relâchez le bouton après l'invite vocale «Couplage»; le voyant de couplage clignotera alors rapidement en rouge et en bleu alternativement.

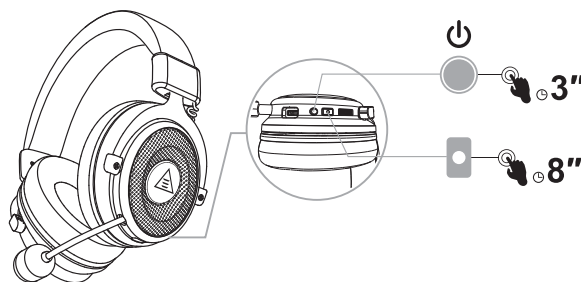


Paramètres de la clé USB


Suivez les étapes ci-dessous pour vous assurer que votre casque EKSA E900 WT est le périphérique audio par défaut.

Windows®:

paramètres audio:

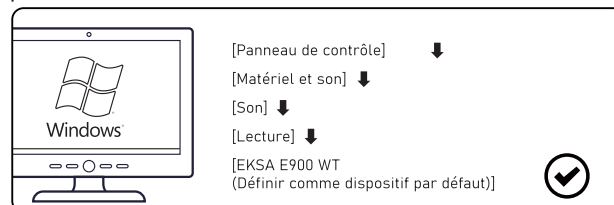

Paramètres du microphone :

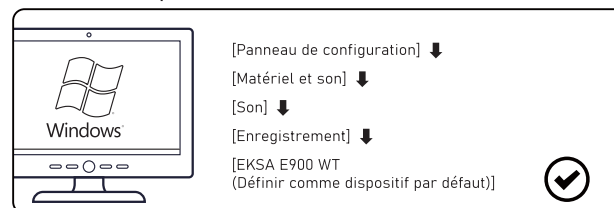

macOS:

