 


User Manual

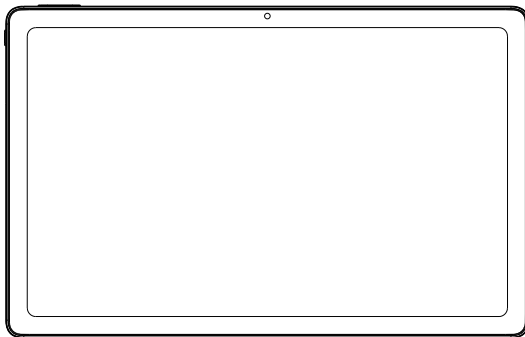

11.97" Tablet PC

 
Please read this manual before operating your device
and keep it for future reference.

Since the tablet software updates regularly, the user manual may not cover all aspects of new features.

We would like you to have a safe and enjoyable experience, please read the following instructions and notices before using your tablet.

1. Please fully charge the tablet before the first use.
2. The tablet is not moisture/water-resistant, please don't use it around sources of water.
3. Avoid using the tablet in extremely hot, cold, dusty, damp or wet environments.
4. Do not use alcohol, thinner or benzene to clean the surface of the tablet. Use only cleaning products designed for computer tablet devices.
5. Do not drop or hit the tablet against a hard surface or the screen may be damaged or cracked.
6. Do not use the tablet while driving or walking.
7. While using earphones, if the volume is excessively high it may cause hearing damage. Please adjust the volume to a safe level and moderate use.
8. Do not disconnect the tablet suddenly when updating, uploading or downloading data, this may lead to program errors.
9. Do not dismantle the tablet.
10. Do not use other accessories except specified or provided by the manufacturer (such as the power adapter, battery etc).

What's In The Box



Tablet



Instruction
manual



 
Charger



USB cable

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

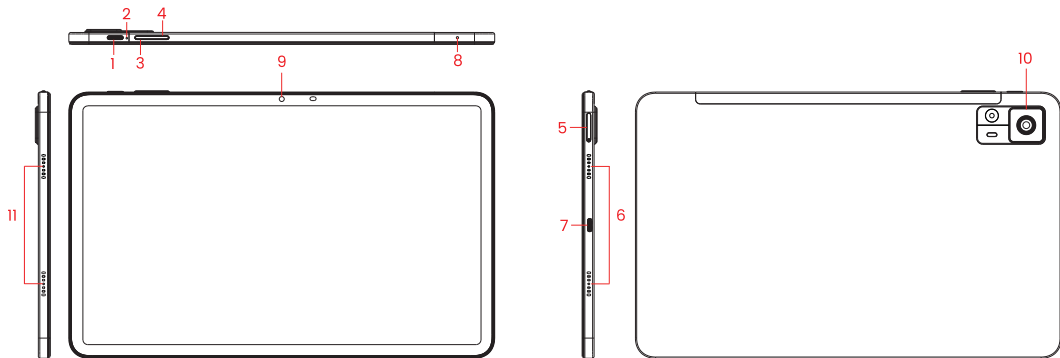

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

Device description

- | | |
|-----------------------|-----------------|
| 1. POWER/LOCK | 7. TYPE-C |
| 2. RESET | 8. MIC |
| 3. VOLUME + | 9. FRONT CAMERA |
| 4. VOLUME - | 10. REAR CAMERA |
| 5. SIM CARD + TF CARD | 11. SPEAKER |
| 6. SPEAKER | |

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

Starting up

1. Before you switch on for the first time, ensure that:
2. Your tablet is fully charged.
3. You have a good WiFi connection (ideally your usual WiFi zone).
4. You have your WiFi name and password to hand.

Charging

Connect the supplied charger to the device and to a wall outlet. The device will start charging. You can use the device whilst on charge.

When the battery is fully discharged, this tablet may take up to 8 minutes to charge before will boot.

Turning the device on

Press the ON/OFF button for 2-3 seconds.

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

How to format a SD card

Warning: Formatting an SD card will wipe any and all data inside SD card, please transfer all onto a computer before formatting a SD Card.

 
 
The SD card should be specifically formatted before the option to install or transfer Apps.

1. Insert a SD card into the SD Slot.
2. Go to 'Storage' from tablet settings and choose "SD card".

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

3. Click ":" drop down menu to choose "Storage settings".

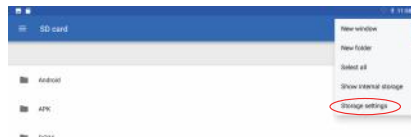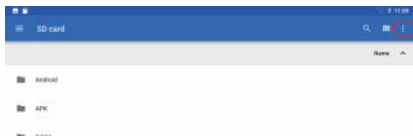

4. Click "Format as internal" option and follow up "Erase & Format" process to complete.

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

Turning the device off or reboot the device.

Press the ON/OFF button for 2-3 seconds.

Then touch Power off to turn off the device.

or touch Reboot to restart the device.



Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

Sartup Wizard

He first time you start up your device, the startup wizard will help you set up your device:

Language

Date & time

WiFi connection

Location service options

Third-party applications

We strongly recommend that you open a Google account (In all languages, the Ain Google Account should be capitalized) and we recommend that you answer yes to backing up your tablet to the Google account. This will save your files and settings in case you need to restore your tablet to factory defaults at any point.

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

 
Connecting to a WiFi network

⚠ Make sure that you are in a WiFi zone.

1. Touch "Settings" to open the WiFi settings menu.
2. If the Wifi is "OFF" slide the Wifi switch to the "ON" position.

Once the WiFi is "ON", the device will scan for WiFi networks in range.

3. Touch the name of network you want to connect to. Private networks are shown with a lock icon and will require you to enter your password.

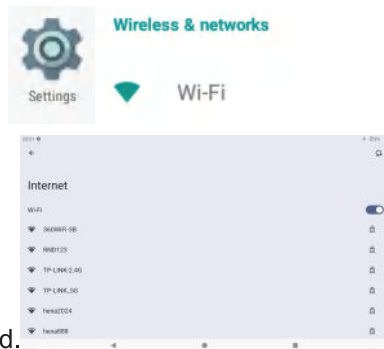

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

4. When entering a WiFi password, Select “Show password” so you can see the characters you are typing.

 


- To get the correct WiFi password (or settings) for the network, contact the WiFi network provider.
- If your WiFi is on and you are in range of a network that you previously connected to, your device will automatically attempt to connect to it.

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

The Android interface:

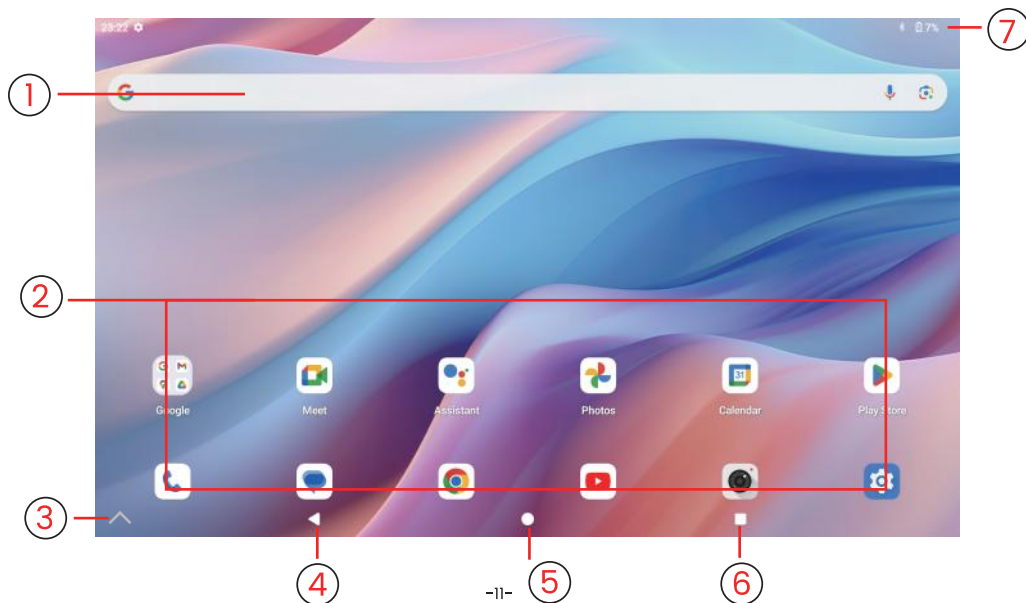

Getting to know your 11.97" Tablet PC

 
You'll be up and running in no time.

- ① Google Search
> Touch "Google" for text search or touch the microphone icon for voice search.
- ② Permanent Android apps shortcuts
> Touch to start an application.
- ③ All Apps button
> Slide up to show all the applications and widgets installed on your device.
All your downloaded applications are here.
- ④ Back button
- ⑤ Home button
- ⑥ Recent apps buttons
- ⑦ The status bar
> Displays notifications and quick settings.

Getting to know your 11.97" Tablet PC

You'll be up and running in no time.

The Android interface :

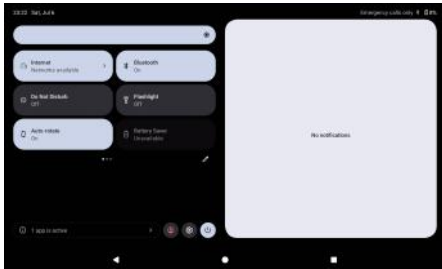

The quick settings

Touch the top of the screen and pull down to open the notifications. Pull down one more time to open the quick settings menu.

1. Brightness: To adjust the screen brightness.
2. Tap on the icon to turn on/off your WIFI connection.
3. Tap on the icon to turn on/off your WIFI Bluetooth connection.
4. Alarms only.
5. Auto-rotate screen: To activate/deactivate automatic screen orientation as you turn your tablet.
6. Battery status.
7. Tap to turn on/off all data, network and wireless connections.
8. Cast screen to device.
9. To access all your settings.

Getting to know your 11.97" Tablet PC


You'll be up and running in no time.

The Android interface

The recent apps

Opens a list of thumbnail images of apps you've worked with recently:

 - To open an app, touch it.
- To close an app, swipe it left or right.

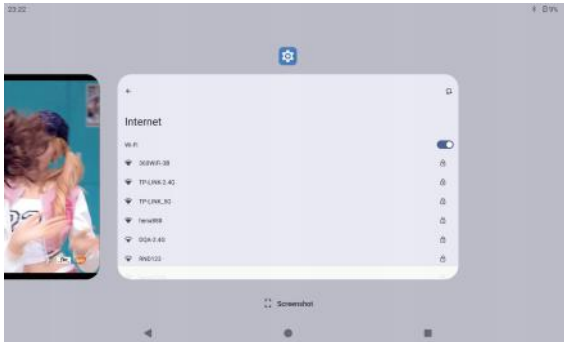

Specification


Display	11.97"
Resolution	1200 x 2000 IPS HD
Operation System	Android 14
CPU	T616
RAM	8GB RAM
Storage	256GB ROM
Battery	8000 mAh
Housing Material	Metal
Front Camera	5 MP
Rear Camera	13 MP
Ports	Type-c, MicroSD Slot
Wi-Fi	2.4G/5G
Bluetooth	BT 5.2
Power Supply	DC 18V

Using your 11.97" Tablet PC

Let's get started.



 Moving a home screen icon: Touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.

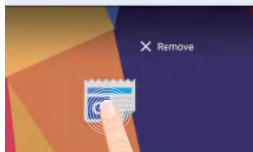

Removing a home screen icon: Touch and hold it, slide your finger towards the top of the screen and drop it over the 'Remove' icon.

 


Uninstalling an application: You can only uninstall downloaded third-party applications, applications built into the firmware such as some Google apps (e.g. clock, calculator, settings etc.) cannot be deleted


but some may be disabled in "Settings". Apps downloaded during the initial set up or afterwards may be deleted to free up memory space. From the "All apps" screens, touch and hold the app icon, slide your finger towards the top of the screen and drop it over "Uninstall" bin. To check which applications are downloaded or built-in, go to "Settings" then "Apps". You can also uninstall apps in "Settings" and move them from internal memory to SD card etc.

Using your 11.97" Tablet PC

Let's get started.



 Creating application folders: To organise your apps, drop one app icon over another on the home screen and the two icons will create a folder. You can add many more apps in it. To remove one app from a folder, touch, hold, and drag it to “Remove” (appearing on the top of the screen). Tap on “Unnamed Folder” to name it.

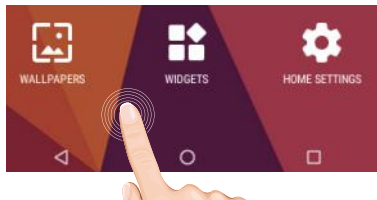

Changing your wallpaper and widgets: Hold your finger on the home screen at an empty location, then touch “Wallpapers” or “Widgets” and choose from the list.

Using your 11.97" Tablet PC

Let's get started.



Locking the touchscreen: From the quick settings dashboard in the status bar, touch “Settings”. In “Settings”, scroll down and touch “Security”. Touch “Screen lock”. Touch the type of lock you would like to use. After you set a lock, a lock screen is displayed whenever your screen wakes up, requesting the pattern, pin or other specified key.

Downloading new apps:



Google Play es tu entretenimiento sin límites.
que te gusta y te ayuda a explorarlo de nuevas formas, en cualquier momento y lugar.

Using your 11.97" Tablet PC

Transferring files to your tablet:

From a computer, use the USB lead provided in the package box.

From a USB device with a standard male USB connection, you will need to purchase a female USB to micro USB lead in order to connect it

(e.g. USB card reader, USB connection from a camera etc.).

Via e-mail, simply add attachments to e-mail messages and send to your Google e-mail address. Then open Gmail, open the message and save the file from e-mail to your tablet memory.

Improving security on your tablet

Online

In order to avoid online threats we recommend that you install antivirus and security software on your device and keep these and your browser and other software up to date to take advantage of security fixes.

Physical theft

If you store valuable information on your tablet including passwords and logins for personal accounts etc. you may want to enhance the security of your tablet in case it is stolen or lost.

Using your 11.97" Tablet PC

Let's get started.

Setting a PIN or password

You can set a pin code (4-8 digit numerical code) or you can set a password which is 4 to 17 characters. We recommend you set a password, the longer and more complex it is the harder it is to break. For the best passwords use a mixture of upper and lower case letters, numbers and special characters such as %, # and *. In "Settings", select "Security", then "screen lock", then select PIN or Password.

Encryption

In order to protect your personal data on this tablet, in the event of the device being stolen, you can encrypt your tablet. Go to "Settings" - "Security & location" - "Encryption & credentials" - "Encrypt tablet", Make sure to follow correctly the onscreen instructions.

⚠ Please note that your tablet cannot be decrypted by the same process. To decrypt you must return the tablet to factory settings which will erase all of your files and downloaded apps (securely). To reset to factory defaults go to "Settings" - "System" - "Reset options", Choose "Erase all data (Factory reset)", then "Reset tablet".

Using your 11.97" Tablet PC

Let's get started.

Erasing your personal data

If you sell your tablet on, or discard it you should erase the data in memory, before you do so, using a file eraser program that actively writes to every record in the memory. This securely erases your data so that it cannot be recovered. Please note that simply returning your tablet to factory settings is not a reliable way of erasing your personal data (unless you have first encrypted your data). To download a file eraser go to Google Play , select a file eraser program such as Remo File Eraser – download and install. Open the app and follow instructions to securely erase your data.

Further Advice

For further advice on how to stay safe there are government lead initiatives such as Get Safe Online <https://www.getsafeonline.org/> which give good advice about a how to avoid a range of security threats. Don't let security issues spoil your enjoyment of your tablet.

Product support

Help is always at hand.

Troubleshooting

If your device is frozen:

Press the ON/OFF button for at least 10 seconds or use the hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

If your device doesn't turn on:

Charge your device then switch on normally. If this does not work, press the ON/OFF button for at least 10 seconds or use the hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

If you want to extend the life of your battery:

Decrease the screen brightness and turn off the wireless connections if not in use.

If your device is functioning too slowly:

Close all apps which are not currently being used.

Product support

Help is always at hand.

If your WiFi reception is poor:

Make sure you are not far from the WiFi hotspot.

Update the firmware of the device.

Factory reset your device and reconnect to your network.

Contact your WiFi connection provider.

If you want to restore your product (erase all your settings? forgotten password?):

If your device is turned on:

1. Go to “Settings”- “System”-“Reset options”.
2. Choose “Erase all data(Factory reset)”, then “Reset tablet”: this will erase all your files, settings and applications, so make sure you have backed-up your data in your Google account (see page 41) or a hard drive.
3. When you restart your tablet it will open the Startup wizard again, follow the onscreen instructions (see page 29). The wizard will not download the free apps that were downloaded the first time you did this but most of these are available for free from Google Play Store.
4. Access your Google account to retrieve your backed-up data in Google.

Product support

Help is always at hand.

If your device doesn't turn on:

1. Hold the ON/OFF button and Volume+ button until a black screen with options is displayed, then release.
2. Press Volume+ button to scroll down to 'Recovery' and Volume- button to select.
3. If you want to exit the recovery system without selecting any action, scroll down to select "Reboot system now" or "Power off" then press ON/OFF button.
4. Use the Volume+/- buttons to scroll up/down to 'wipe data/factory reset' and the ON/OFF button to validate the chosen action. This will erase all your files, settings and applications.
5. Please note, if you have set a password and registered a Google account on your tablet this will have activated Google's 'Device Protection' feature. This powerful security feature prevents your device being used without it being signed into your Google account, even if it has been reset to factory settings. If you want to pass the tablet to another user or sell it on, you need to disable the feature by turning your password off before you reset your tablet.

Product support

Help is always at hand.

Environmental Considerations



Protection of the environment is an important concern to . In order to put this concern into tangible actions, has consciously included a set of methods that favour a respect for the environment into the entire cycle of its products; from fabrication to consumer usage, to final disposal.



Battery: If your product contains a detachable battery pack, you should only dispose of it in a designated collection point for used batteries.

The Product: The crossed-out wheellie bin symbol on your product signifies that it falls into the category of electric/electronic equipment. Products of this type contain substances that are potentially dangerous to the environment and to human health. Therefore, you should not dispose of the Alba electronic device in a regular trash. As such, the current European directives ask that this device be collected:

At places of distribution in the case of a purchase of a similar electronic product.

At locally created disposal areas (waste disposal centres, sorted trash system, etc.)

By doing this, you are actively participating in the reuse and recycling of disposed electronic and electric equipment that could have potential effects on the environment and human health.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device AT1201 (FCC ID: 2A27O-AT1201) has been tested against this SAR limit. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should be maintained to the user's bodies