
U4

4*6 Thermal Printer



Quick Start Guide

CONTENT

01) Quick Start Video Guide	01
02) Product Overview	02
03) Printer usage flow	04
Step 1: Get your printer started	
Step 2: Label Loading	
04) App download	07
Print via mobile devices	
05) Driver Download and Installation	10
For MAC	10
Mac: Driver Installation	
Mac: Printer Setup	
For Windows	14
Windows: Driver Installation	
Windows: Printer Setup	
Windows: Delete Windows Drivers	
06) Button & Status Light Instructions	23
07) Upkeep & Maintenance	24
Maintenance	
Tips for Preparation	
Safety Notices	

Quick Start Video Guide



Scan the QR code to watch
the operation video.

Product Overview

The Logistics Label Printer is a very capable printer. You can print barcodes, shipping labels, name badges, warehouse labels, food nutrition labels, amazon FBA labels and labels of all sizes with it. It prints without the need of ink or cartridges. It's the perfect partner for your business with its economical, reliable and high-efficient features.


Printer and Accessory Kit

Package contents:

Printer ×1, Power Adapter ×1, USB Cable ×1, Instruction manual x1, Test Label ×1, Power Cord ×1 (There are differences among different countries)



Printer Component Description

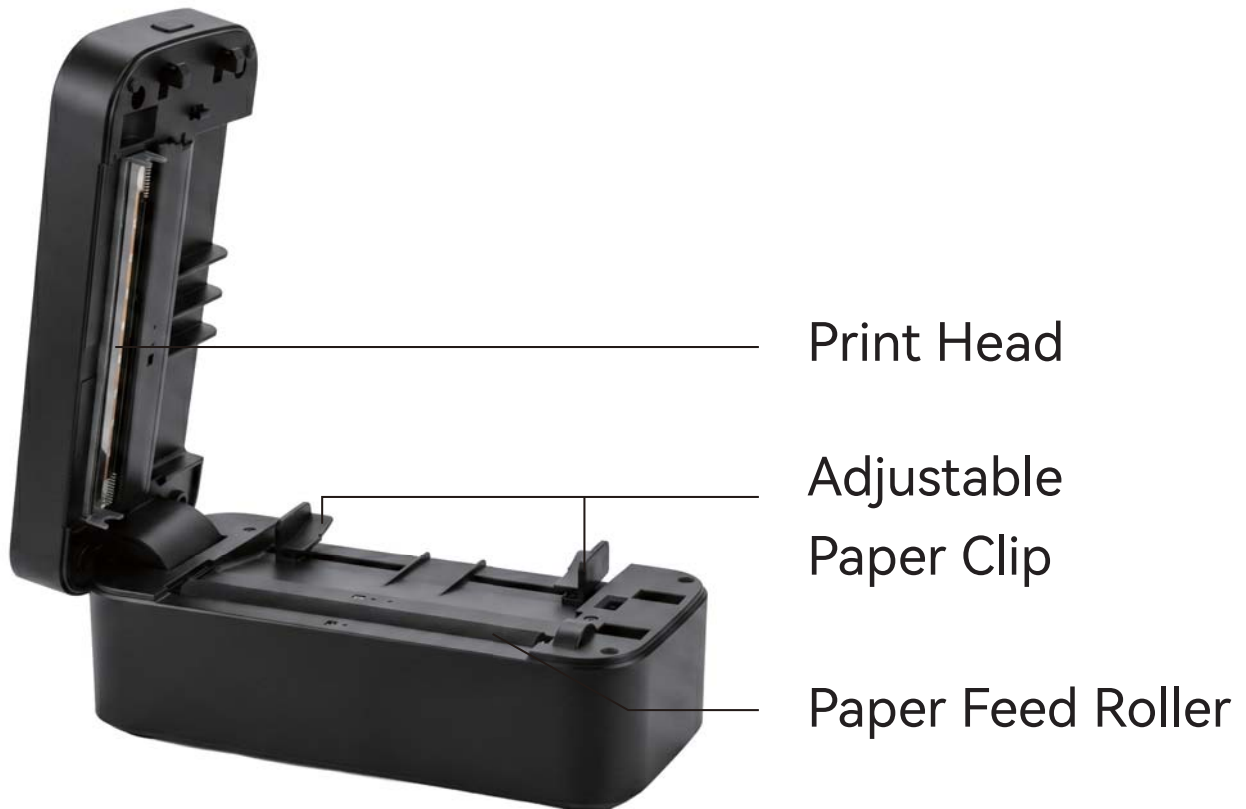

Please take a moment to read this user guide carefully. Improper operation may result in damage to the printer or personal injury

STEP 1 Get the printer started



①

Ensure that the printer is OFF. The power switch is switched to 0. (1:On; 0:Off)



②

Attach the power cord to the adapter.



③

Plug the adapter cable into the circular DC adapter connector of the printer.



④

Plug the power cord into socket.

STEP 2 Label Loading

The label printer is capable of working with label width range from 1" to 4.6" (30 to 110 mm). To print on different labels correctly, the printer needs to identify your label size before it starts printing.

> To run the automatic label identification, please follow these steps:



①

Turn on the printer.
(I:On; O:Off)



②

Adjust the paper guide to match the label size.



③

Insert label and ensure it is straight and smooth as shown. **Note: The print side should face up.**



④

Make sure the label is automatically caught by the printer.



⑤

Press and hold the Power Button. Release the button once the paper feeds automatically.



⑥

The printer feeds paper back and forth for 300mm, and automatically detects label gaps and other parameters.



Please run the label size identification every time you change your label.
(See picture 5 & 6)

> Download the APP

App download

App Download

(1) please scan the QR Code to download the App.



IOS



Android

(2) Search "Marklife" on App Store or Google Play to get the App.




Download on the
App Store



Get it on
Google Play


Print via mobile devices

(1) Search and download "Marklife", Turn on your phone's Bluetooth and open the "Marklife" app.

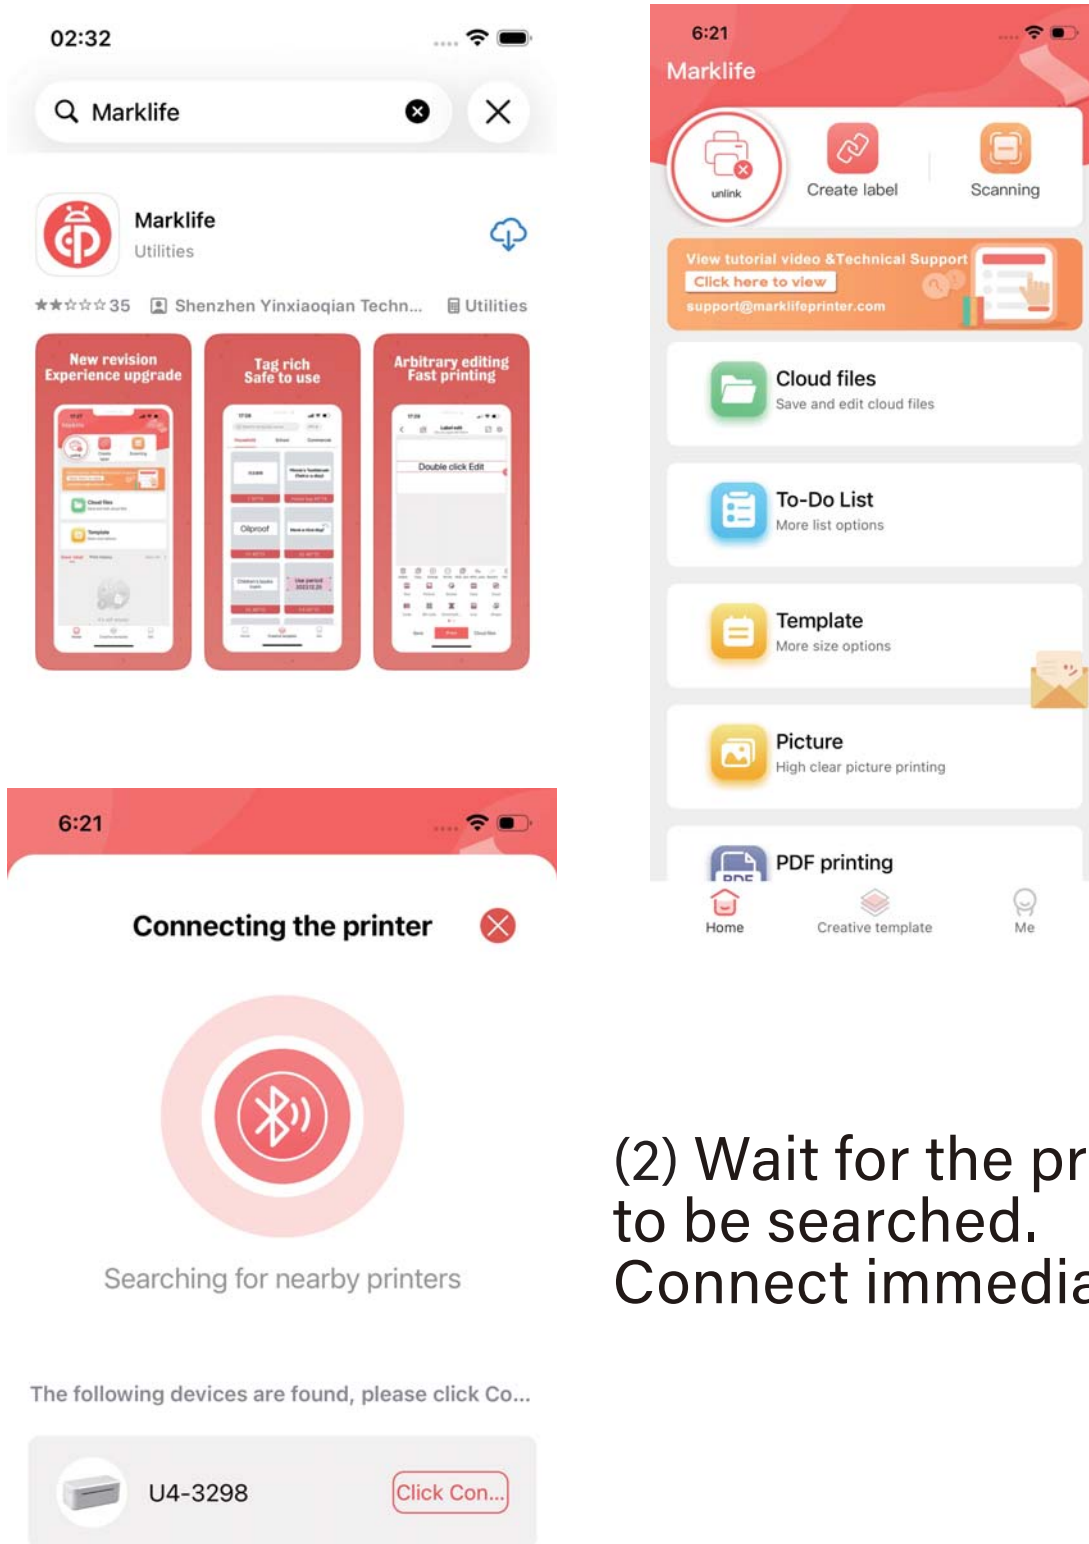

(2) Wait for the printer to be searched.
Connect immediately.

(3) The printer is connected .Start printing

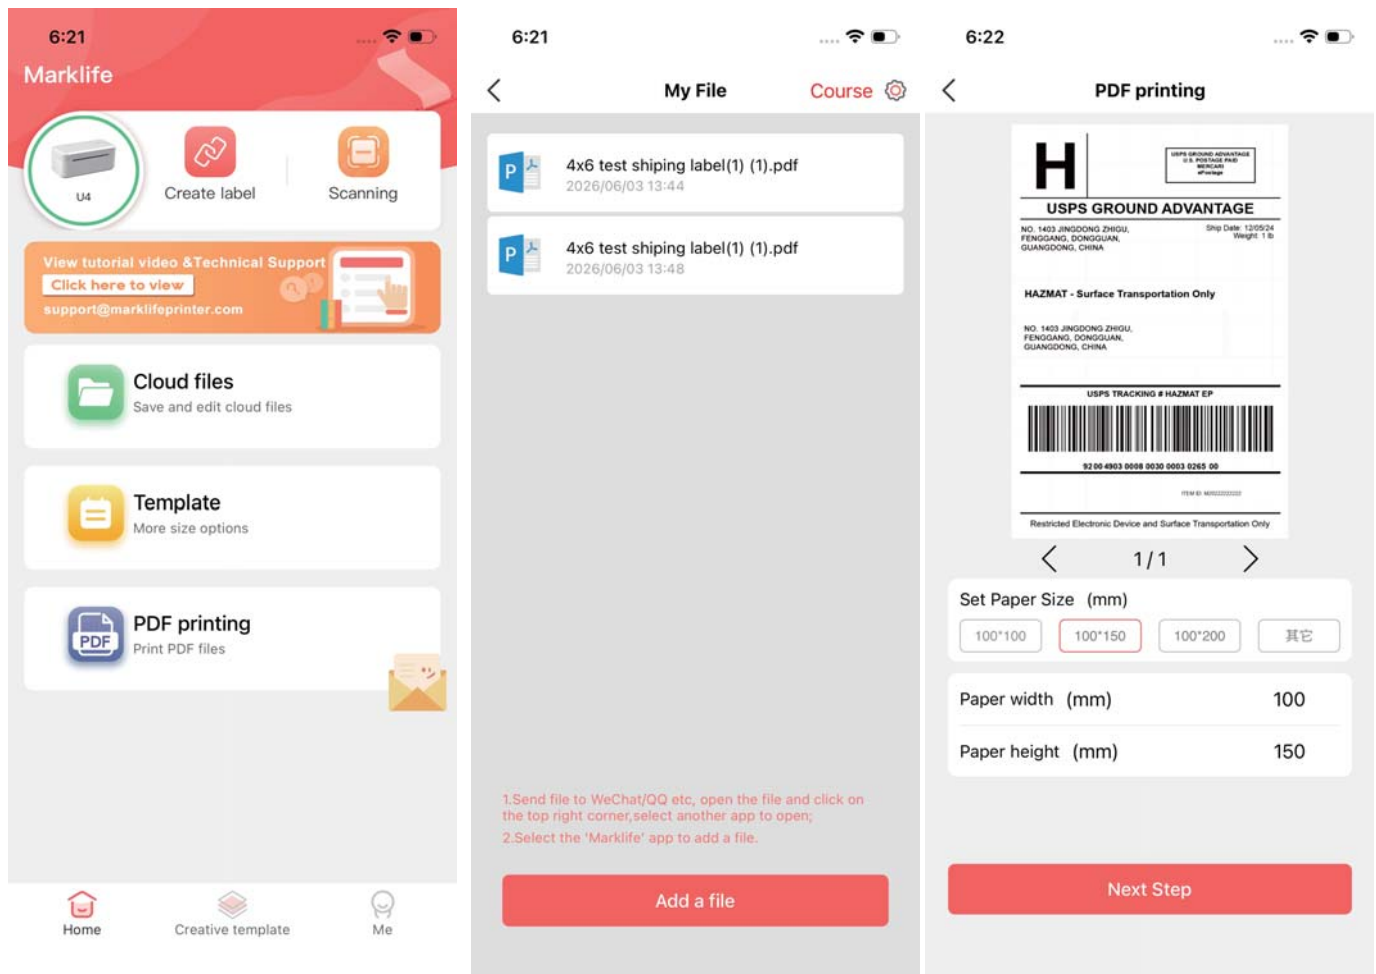

> Continue to Driver Installation

Please run the downloaded software and follow the hints to complete the installation.
(Mac Driver Installer) / (Win Driver Installer)



Please ensure the printer is connected and turned on when downloading & installing the driver.



Connect the USB cable to the printer



Connect the other end of the USB to the PC.




The machine lights up green.
The printer is powered on.

Driver Download and Installation

MAC: Driver Installation

Visit Official Website

(<https://www.marklifeprinter.com/download/Marklife-Printer-Driver-U4-MAC.html>)

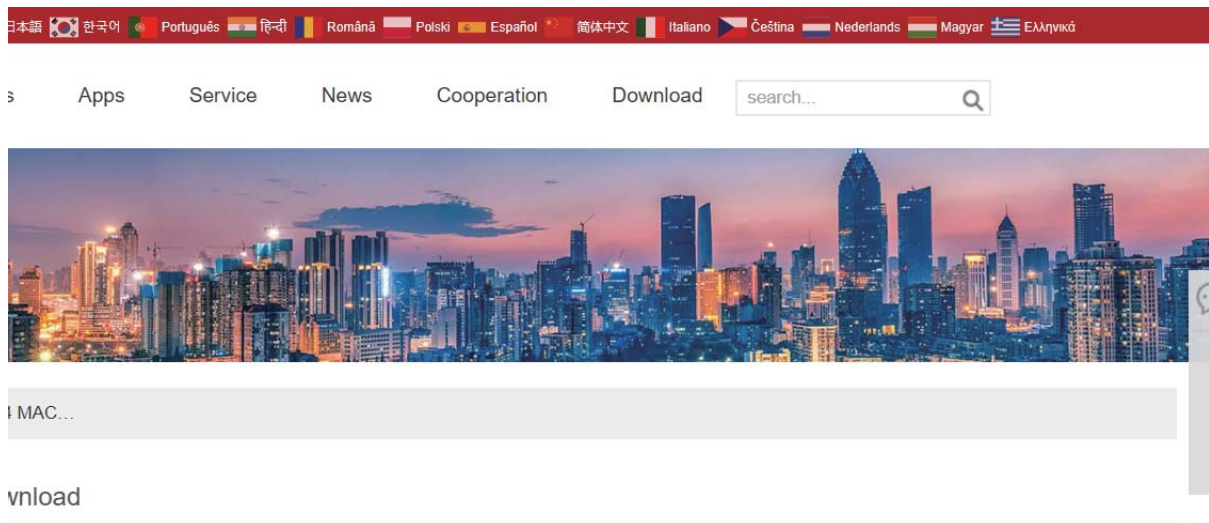


Marklife Printer Driver U4 MAC



↓ DOWNLOAD



Navigate to the download page, locate the Mac driver, download it, and double-click the driver file. Install the software.




LabelPrinter-1.0.6
.pkg

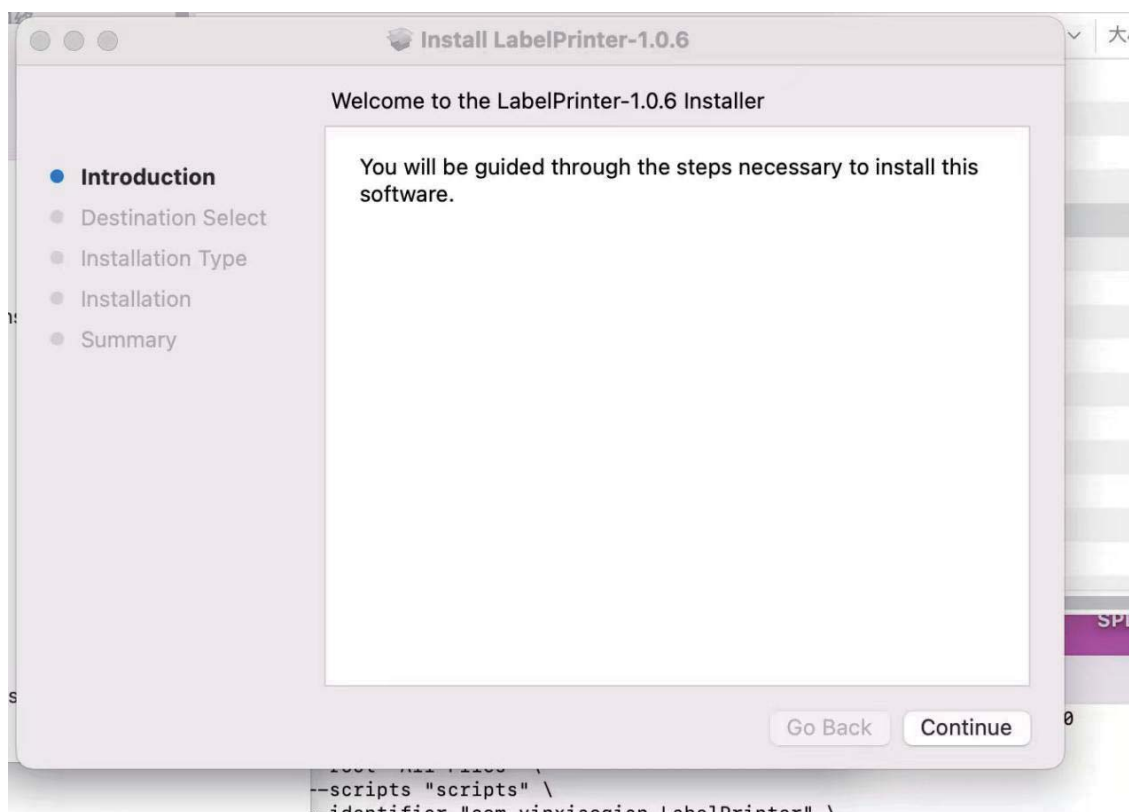

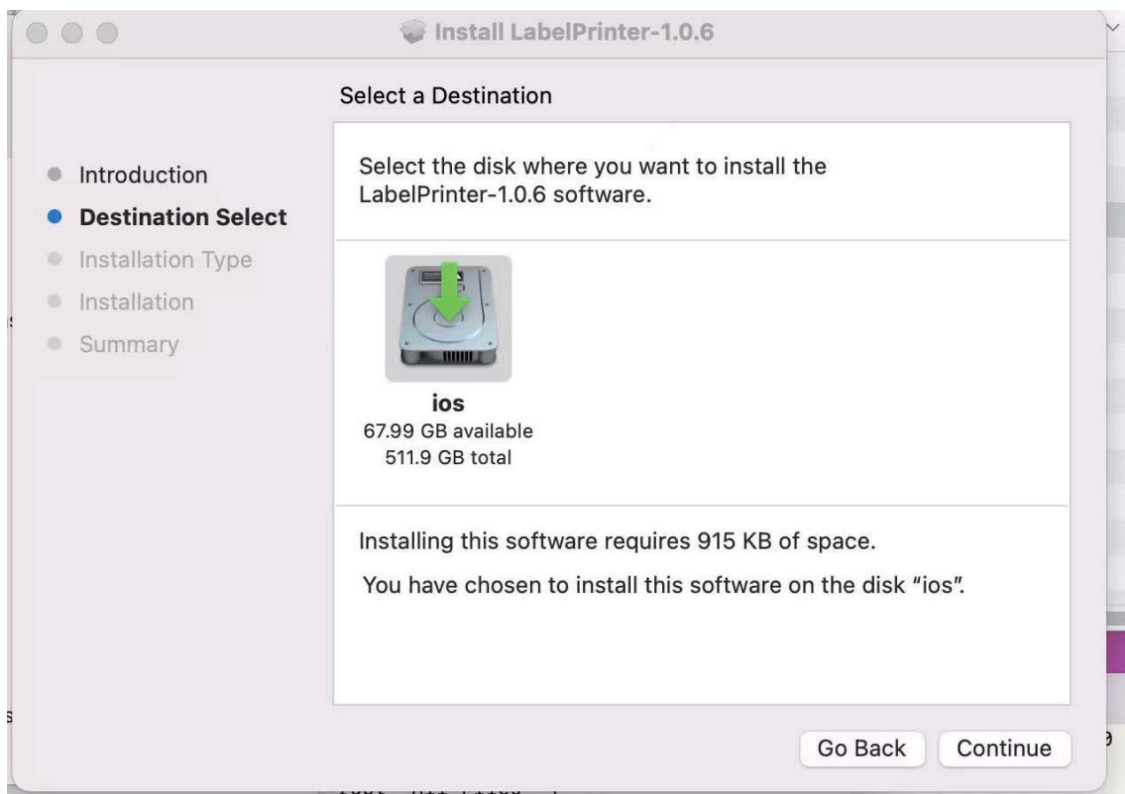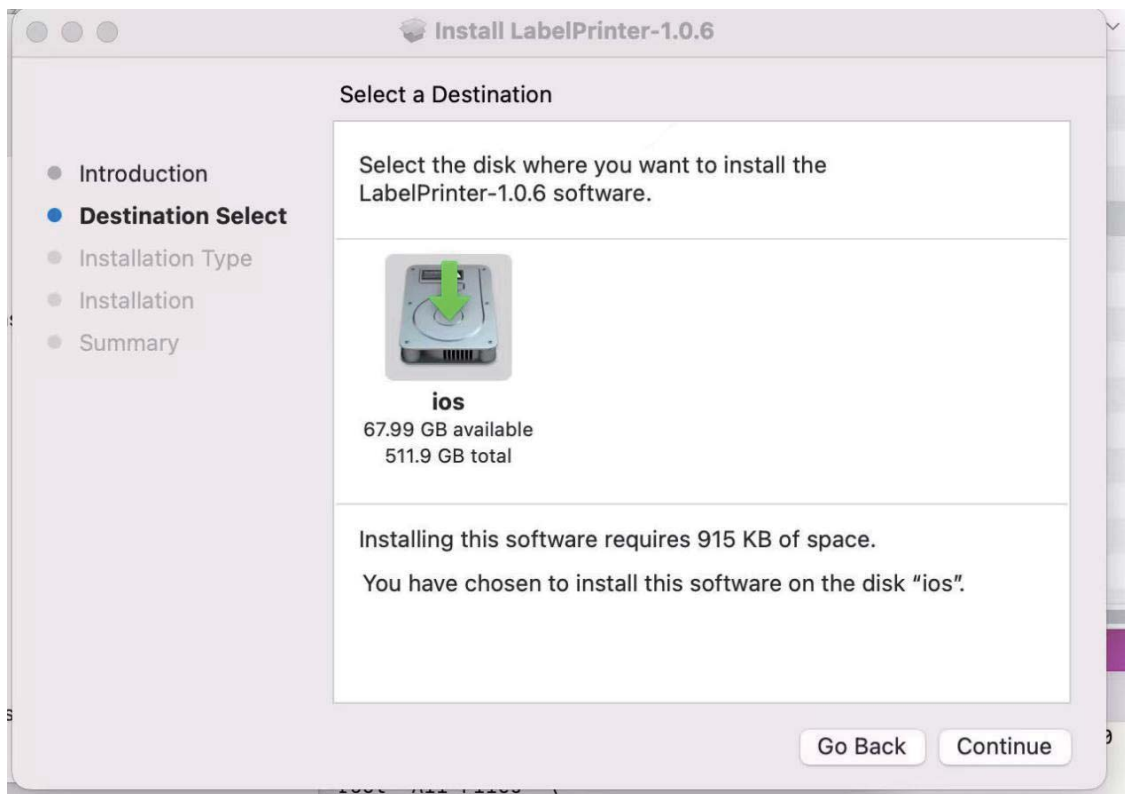

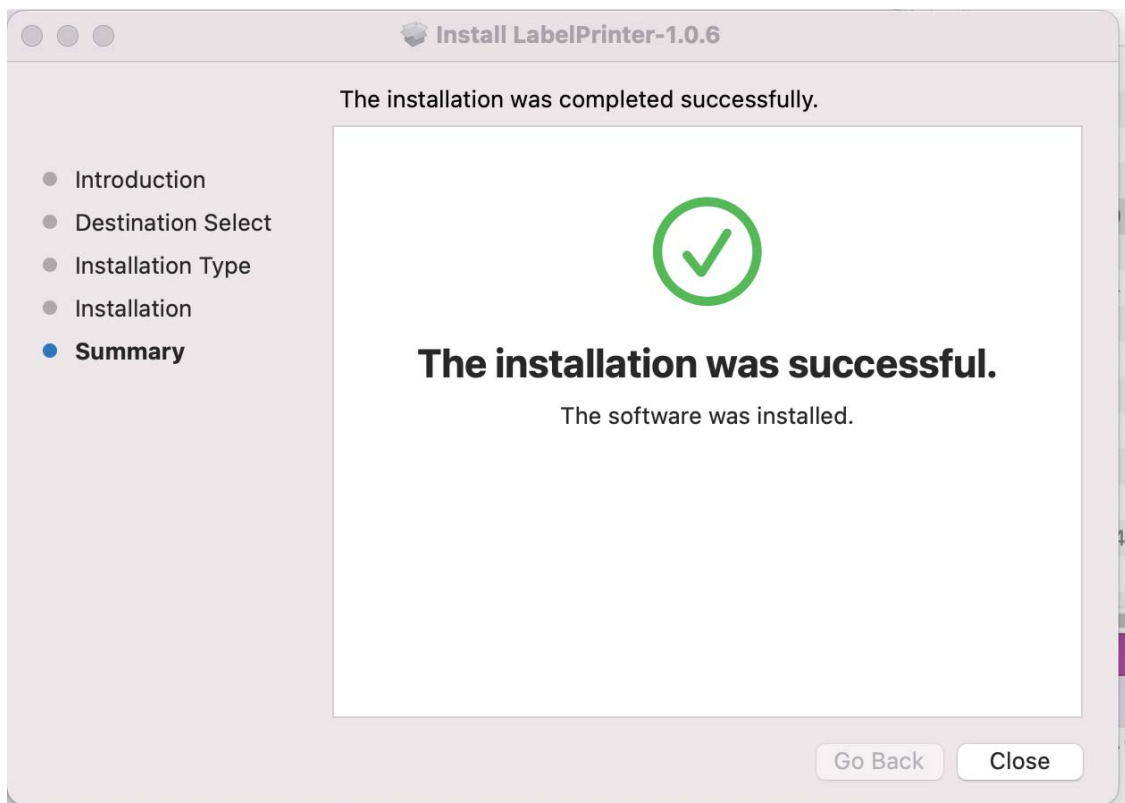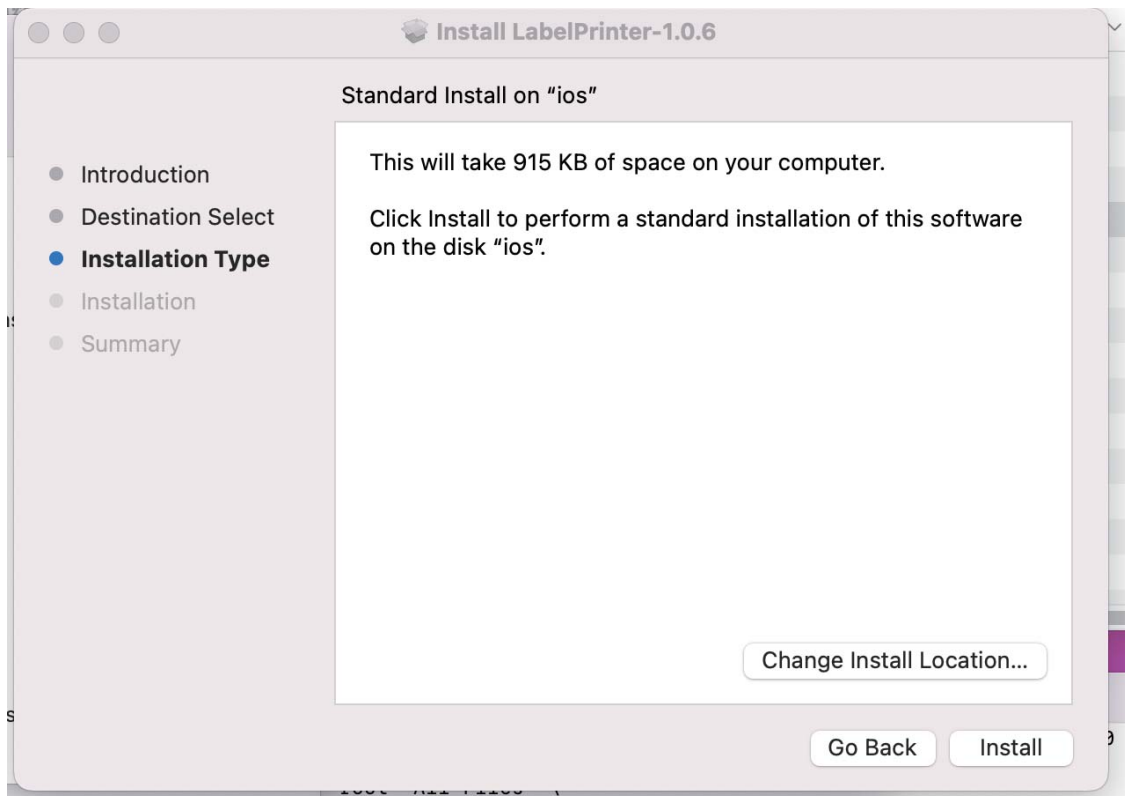

Mac: Printer Setup

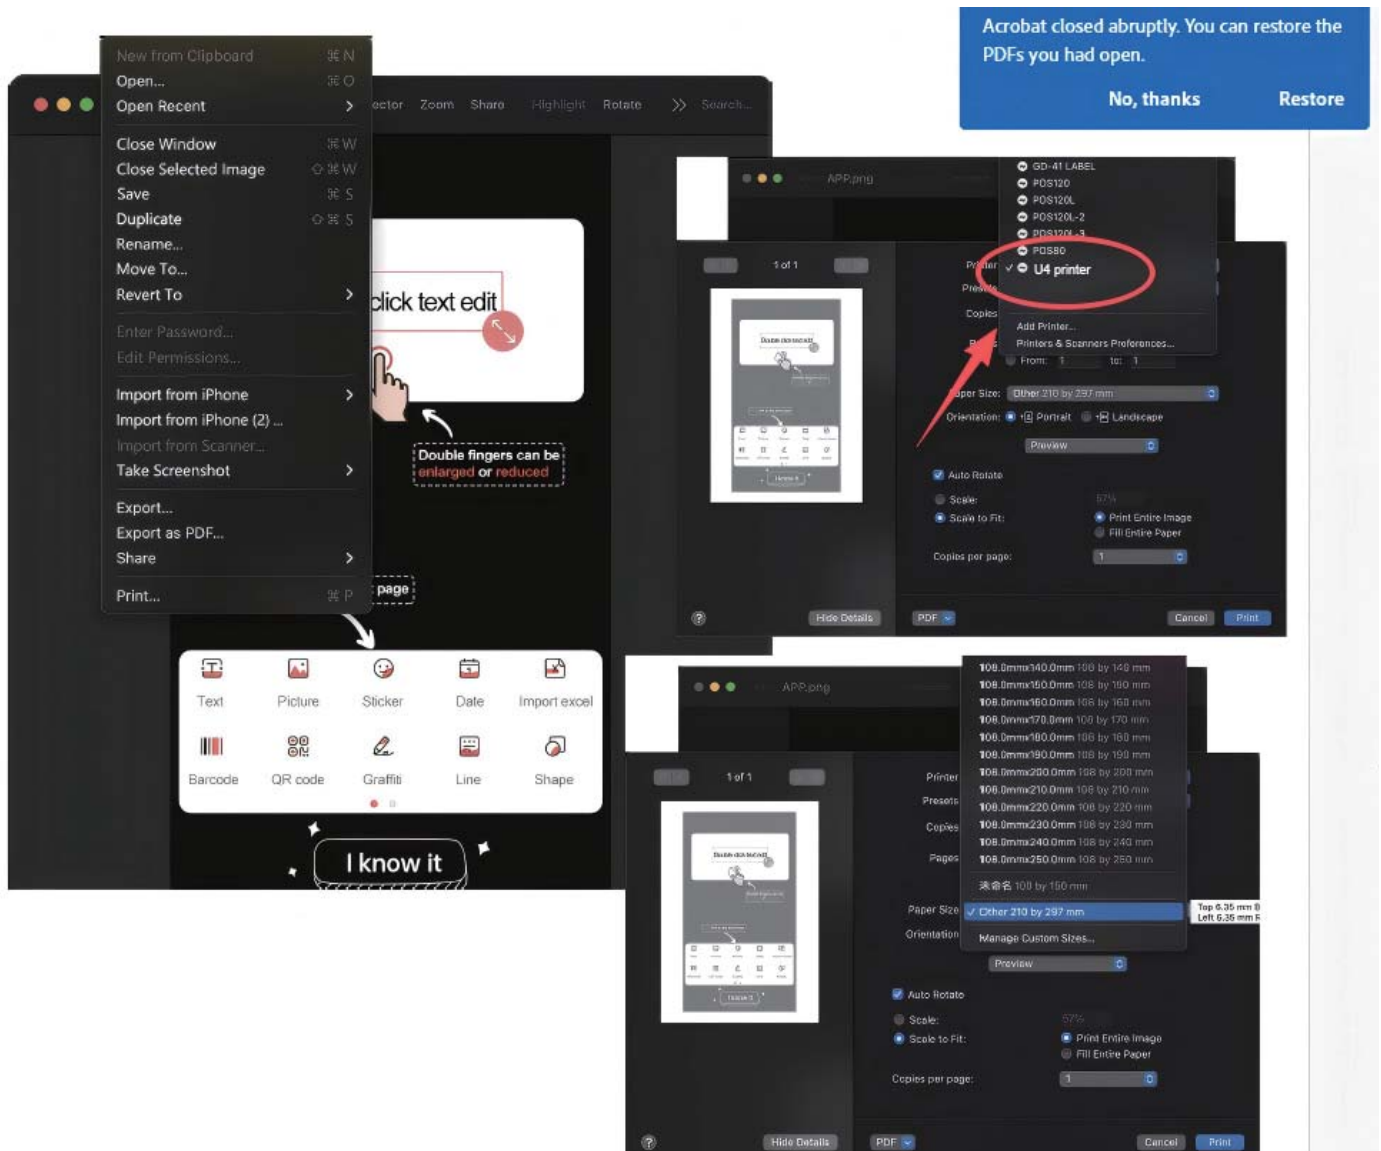


Instructions for Adding Mac Drivers

Windows: Driver Installation

Visit Official Website

(<https://www.marklifeprinter.com/download/download-0-605.html>)


Navigate to the download page, locate the Windows driver, and unzip the file once the download is complete.

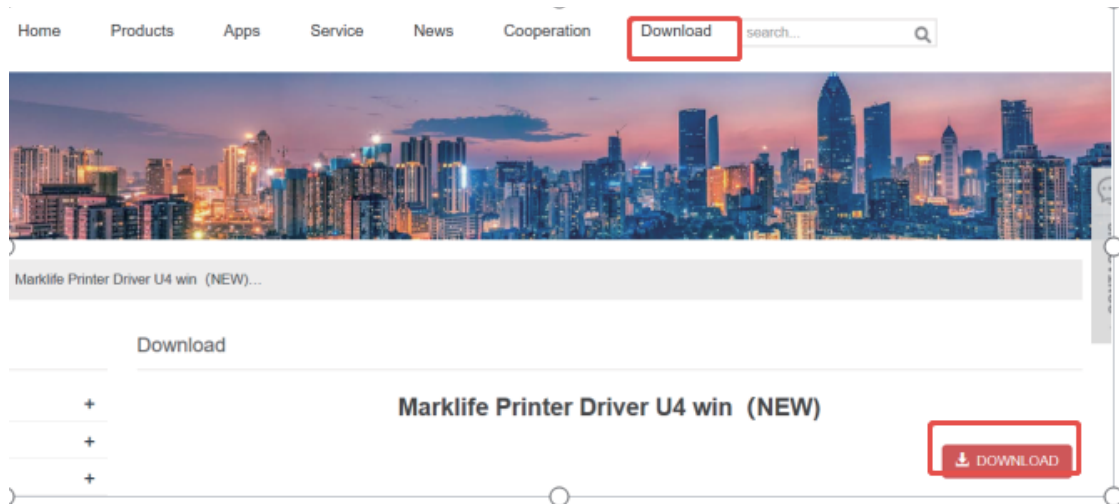


1. Double-click the Windows driver installation software.

(PS: If your system has security software installed, you will be prompted to disable the security software before proceeding with the installation.)


2. Double-click the driver, select your language, and click [Next].

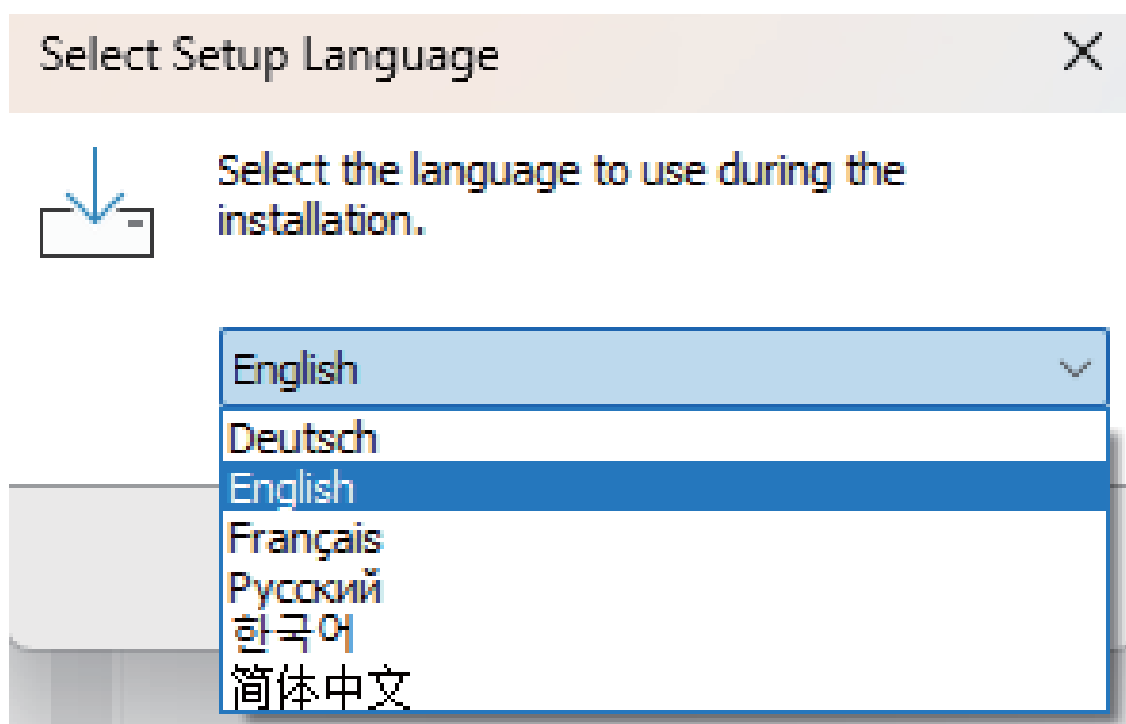


3. Select the connection method, then click [Next].

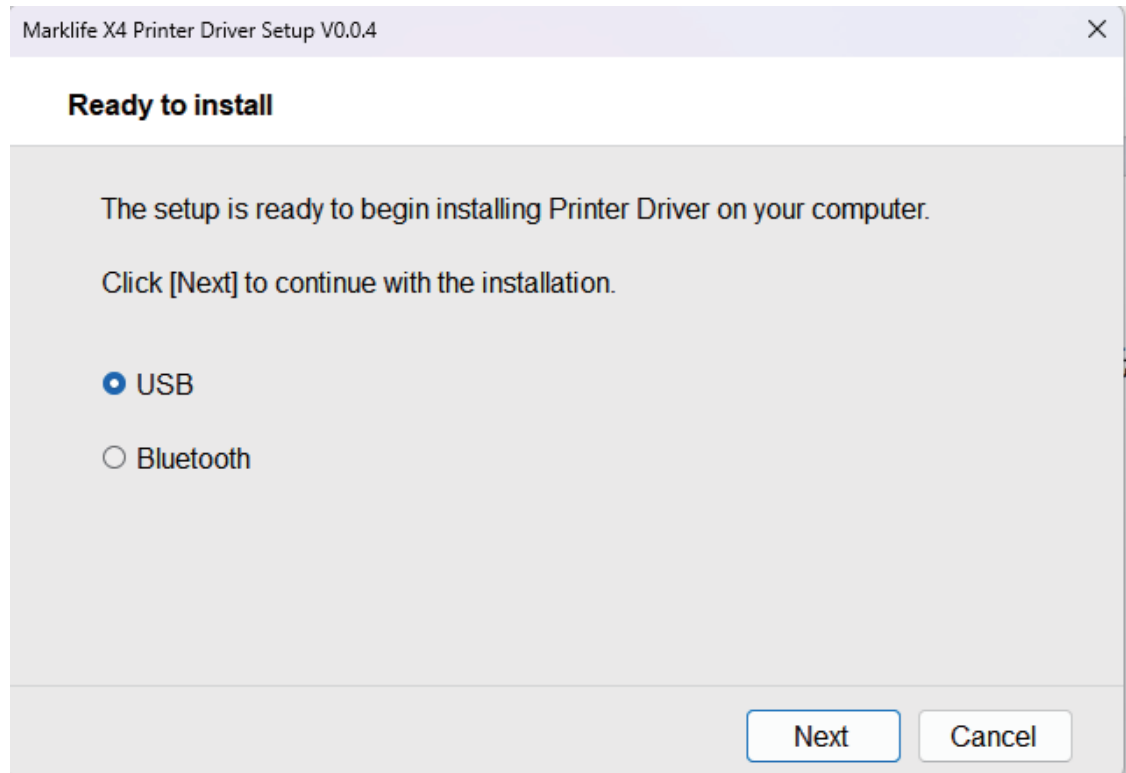

After that, keep clicking Finish.

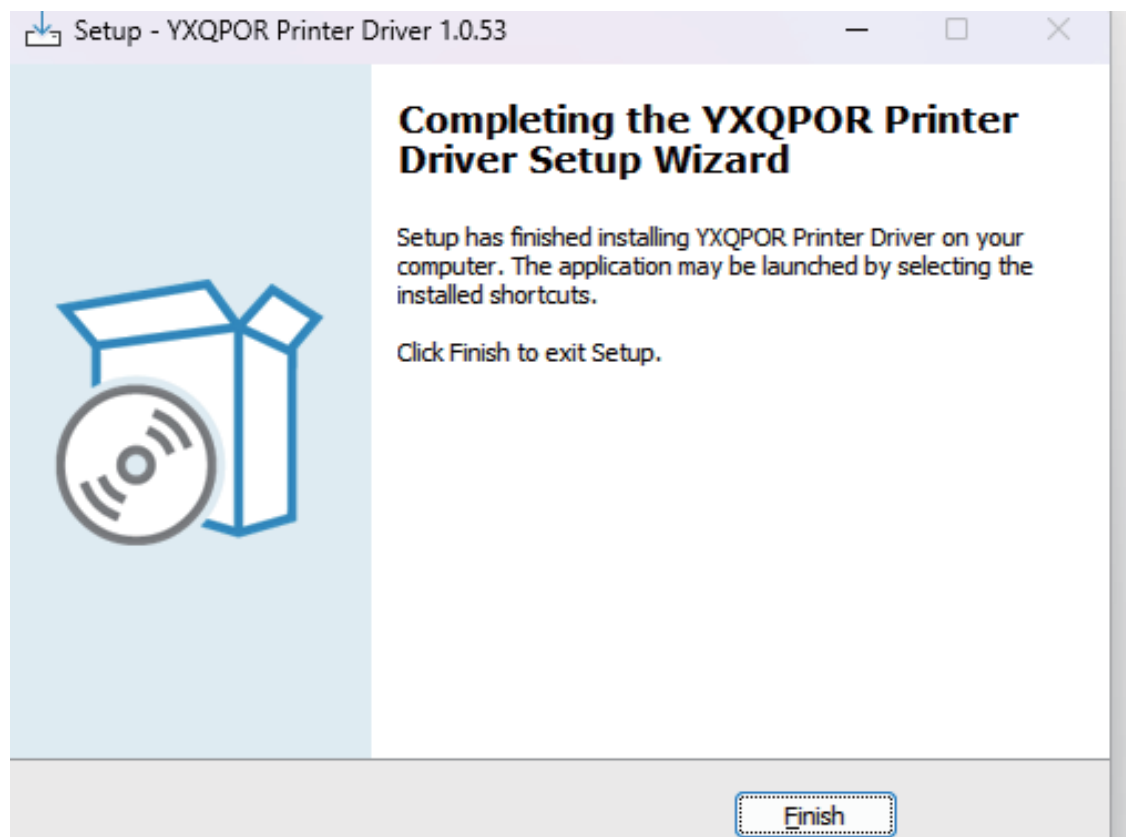


4. Once the installation is complete, click "Preferences" to access the printer settings. Here, you can configure functions such as paper settings, print density, paper feed, and graphics.

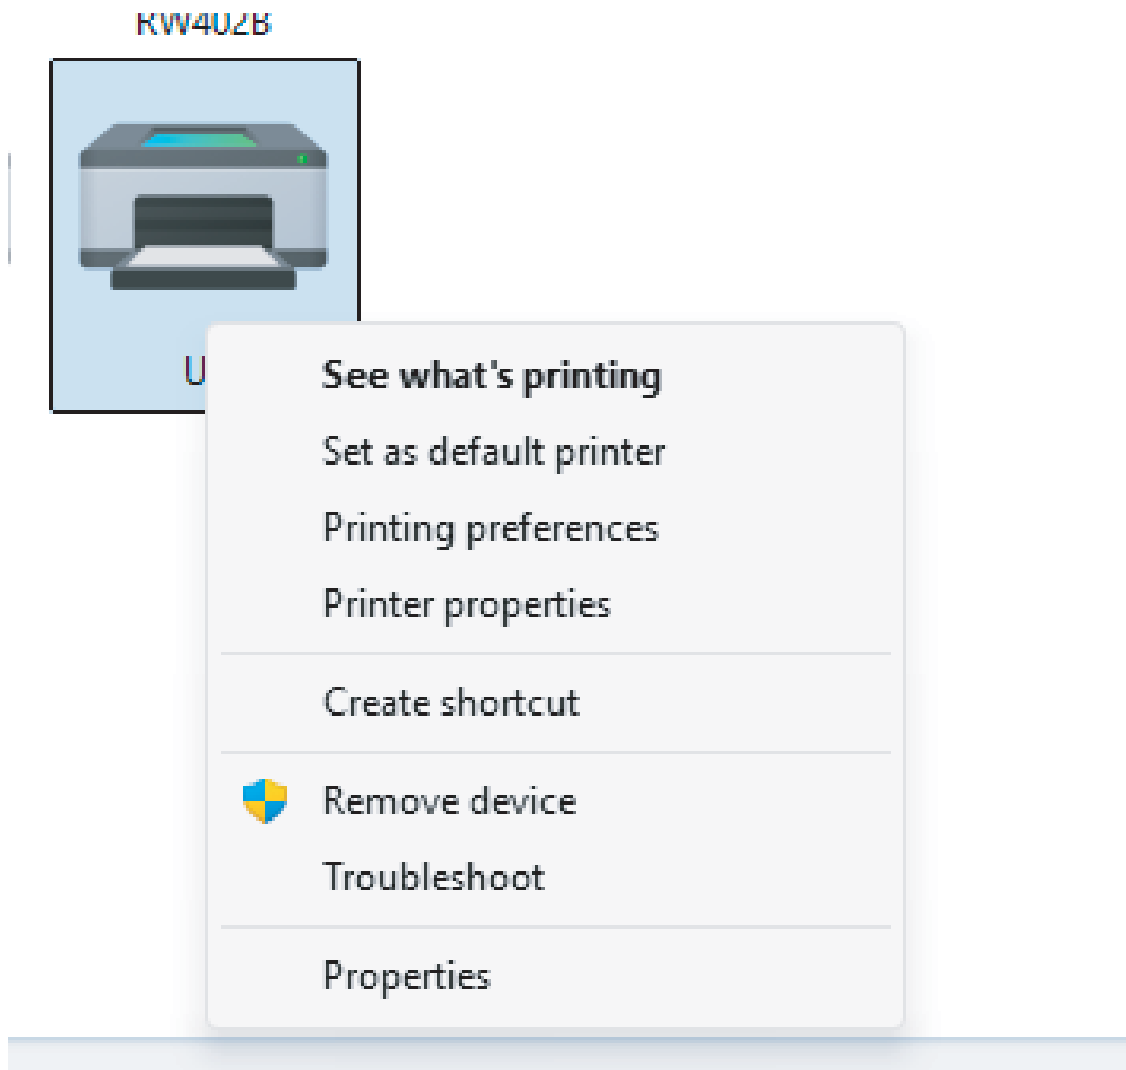


How to Print Using Windows Drivers

1. Open the file you wish to print, click the Print button, or use the keyboard shortcut Ctrl+P to access the print settings, then proceed according to the following steps:


1) Select the correct printer name (if the printer was set as the default during installation, no further selection is required, as it will be selected automatically).

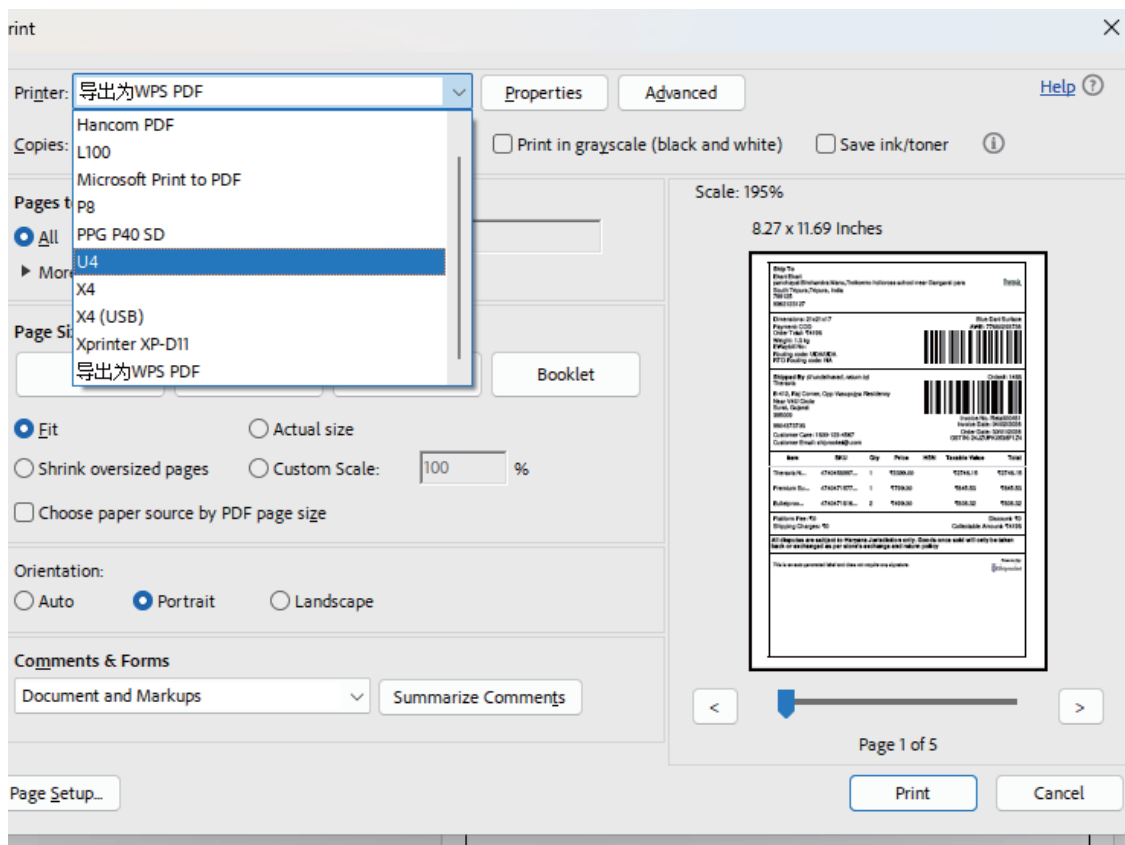


2) Select the correct default paper type for the DPF file.

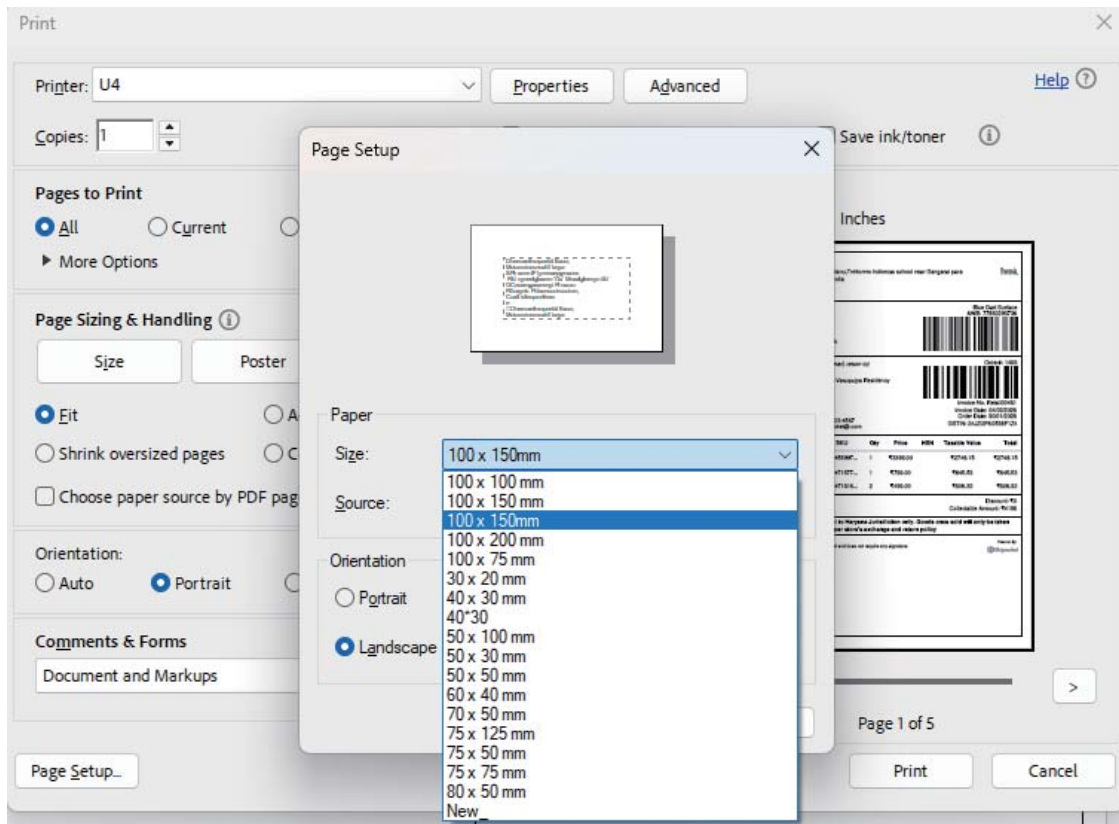


3) Other Document Preferences: Select the correct paper type. Speed, density, and print offset settings can all be adjusted.

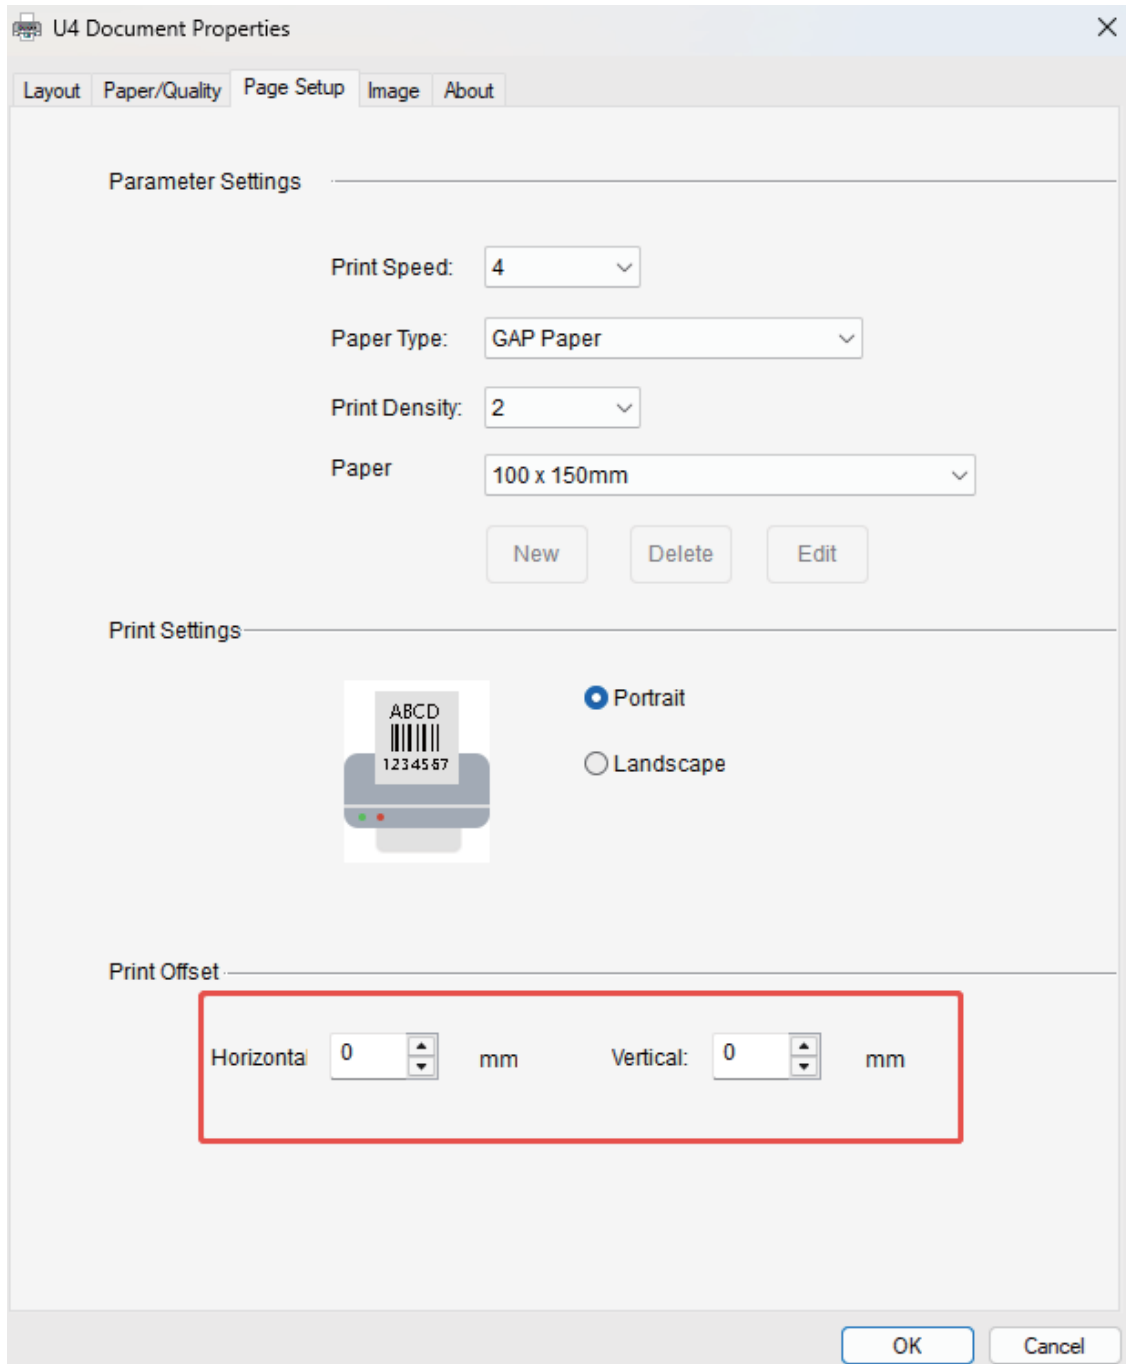


4) Configure graphic properties: By default, Grayscale/Dithering printing is enabled (suitable for printing mixed text and graphics); you may manually select Black-and-White printing (suitable for printing pure text content) and adjust the brightness and contrast based on the desired print output.

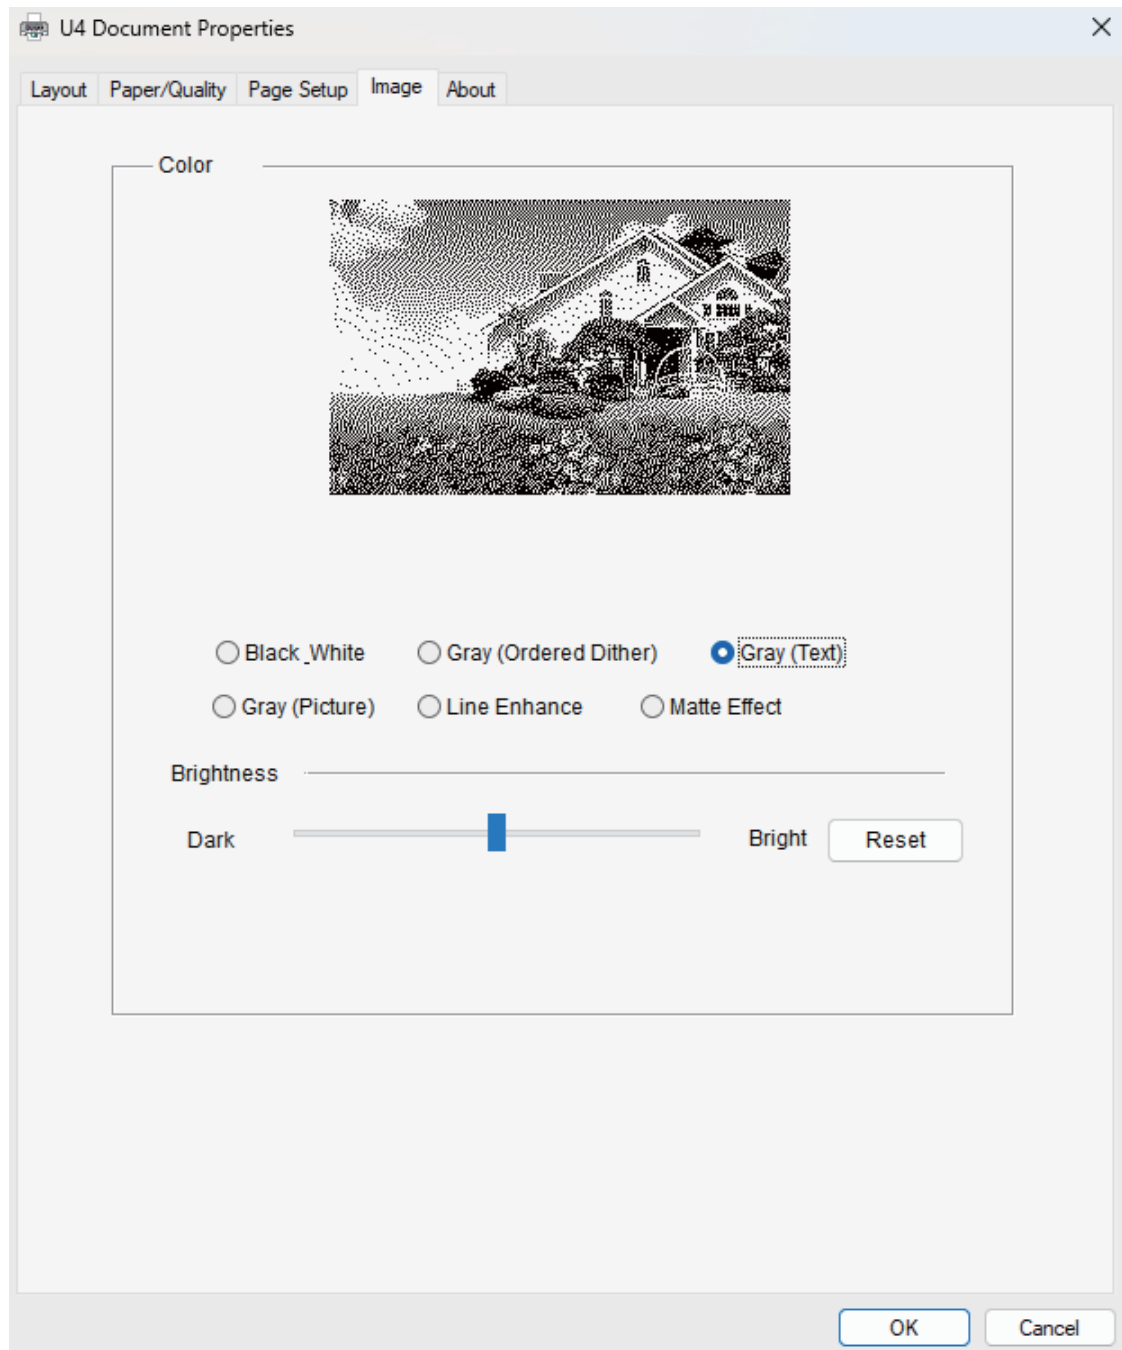

5) If the printed content appears too large (or if the edges of the content are cut off), you will need to select the "Scale to Paper Size" option for printing (select the appropriate scale size based on your specific printer model and printing requirements).

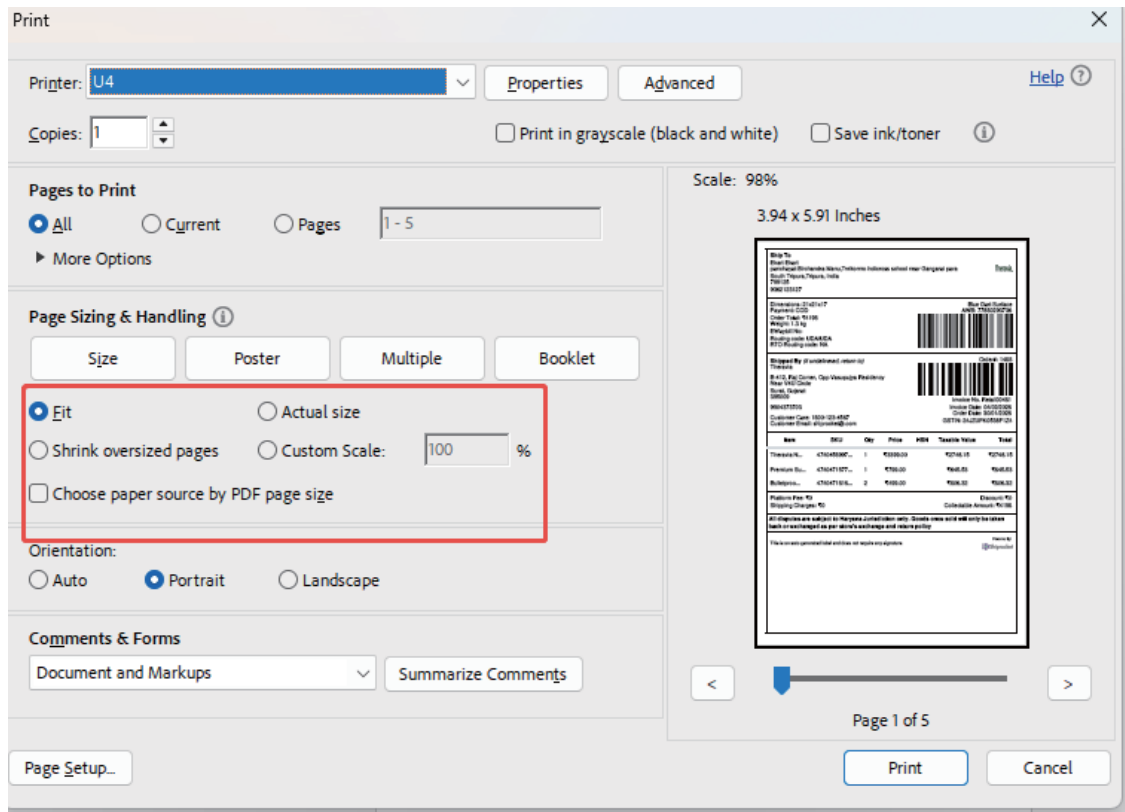

How to Delete Windows Drivers

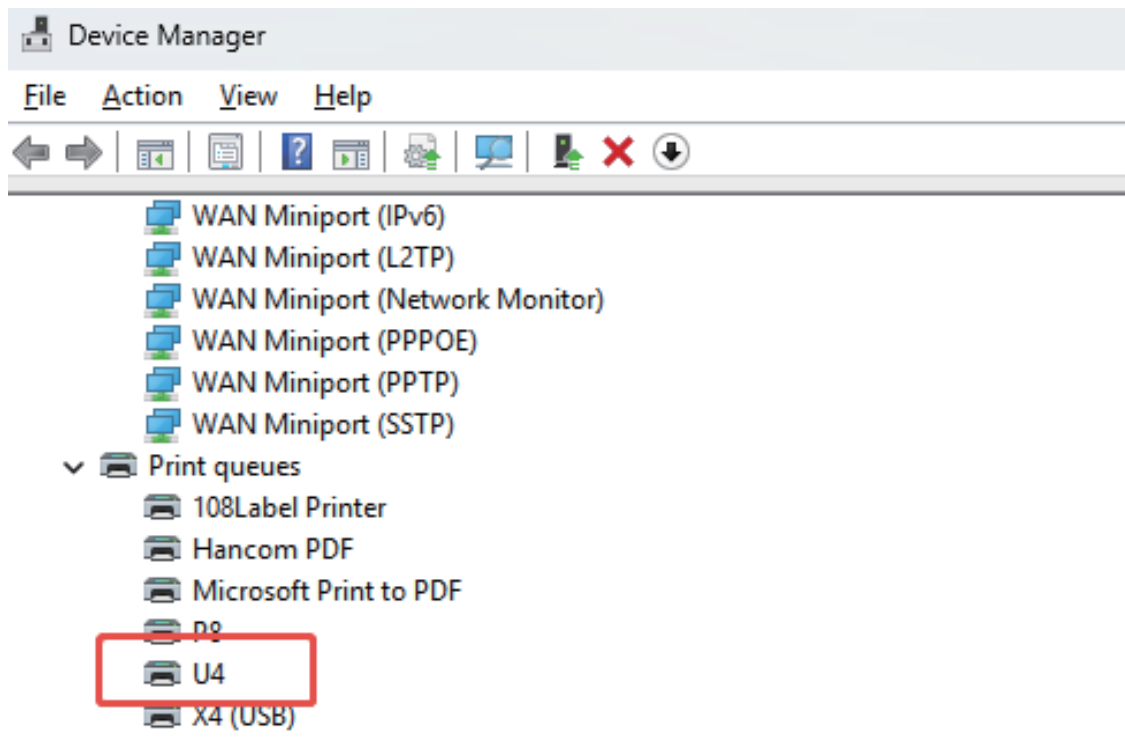

- Press Win + X, then select Device Manager.

- For printers, expand either Print queues or Ports (COM & LPT), and locate your printer device.
- Right-click the device → Uninstall device.
- In the window that appears, check the box for "Delete the driver software for this device" (if this option is available), then click OK.
- Restart your computer; the driver will then be completely removed.

Button & Status Light Instructions

Button Type	Operation	Functions
Operation of the Power Switch		Turn On/Off
Power Button	Double press	Print selftest page
Status	Meaning	Recommended operation
Green light always on	Normal operation/ Printer idle	/
Purple lights flashing	Printer overheat	Pause print 5-10 mins
Red light flashes	Top cover open	Close cover
	Out of paper	Load paper
Blue light always on	Bluetooth Connected	/

Maintenance

Printer head Cleaning Steps:

1. Turn off the printer power, open the cover and clean the print head with alcohol swab.
2. Clean the platen roller with dry cloth.
3. Do not use sharp objects to scratch the print head.

Preparation Tips:

1. Avoid placing the printer on an unstable surface.
2. Keep the printer away from heat sources and direct sunlight.
3. Use only the original power adapter that came with the printer.
4. Do not use a damaged power cord.

Safety Notices

1. Do not disassemble the printer by yourself, it may cause electric shock or damage.
2. Unplug the printer before cleaning or performing maintenance.
3. Do not use the printer if the power cord is damaged.
4. Keep the printer away from water or liquid to avoid short circuit.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.