

 
 
Please read this instruction manual carefully before using the product. It contains important information, please keep it in a safe place for use.

## Content

|                                     |       |
|-------------------------------------|-------|
| 1. Instruction Before Use .....     | 1     |
| 2. Function Keys .....              | 2/3   |
| 3. WiFi Operation Guidance .....    | 4     |
| 4. Replace the Printing Paper ..... | 5     |
| 5. TF Card Installation .....       | 6     |
| 6. Charging Instruction .....       | 7     |
| 7. Battery & Safety .....           | 7     |
| 8. Safety Details .....             | 8     |
| ① Language Setting .....            | 8     |
| ② Printing Density .....            | 9     |
| ③ Cyclic Record .....               | 9     |
| ④ Sound .....                       | 10    |
| ⑤ Video .....                       | 10    |
| ⑥ Record Audio .....                | 11    |
| ⑦ Image Quality .....               | 11    |
| ⑧ Continuous Shooting .....         | 11    |
| ⑨ Camera Timer .....                | 12    |
| 10. Format .....                    | 13    |
| ① Recovery .....                    | 13    |
| ② Auto Power-off .....              | 14    |
| 9. Specification .....              | 15    |
| 10. Q&A .....                       | 16/17 |

①. Please tear off the protective film of the lens before.

- 

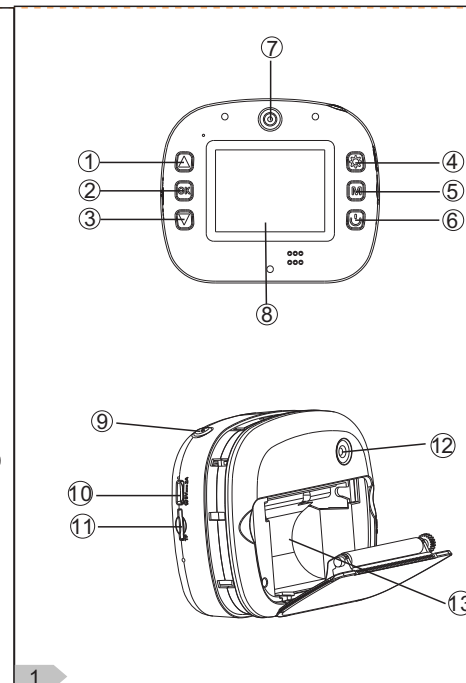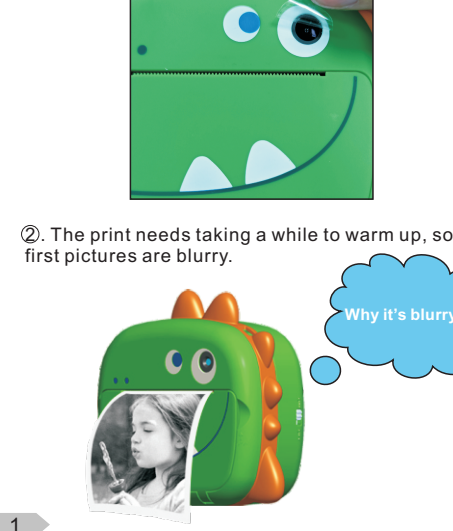


- ① Up Key
- ② Confirm / Delete Key
- ③ Down Key
- ④ Back Key / Main Menu
- ⑤ Photo Sticker: Press this button enter the Sticker Mode and press up/down key to choose different sticker
- ⑥ Power on/off: Long press for 3 seconds to turn on/off
- ⑦ Front Camera
- ⑧ Display
- ⑨ Photo / Video / Camera Switch / Video Play Key: Press this button for photo & video; Long press to switch the front / rear camera; Choose a video from album page and press this button to play the video
- ⑩ Charging Port
- ⑪ Memory Card Jack
- ⑫ Rear Camera
- ⑬ Print Paper Compartment


Step 1: Scan the QR code to download APP;



 Notice: Tear the photo paper in the zigzag direction.

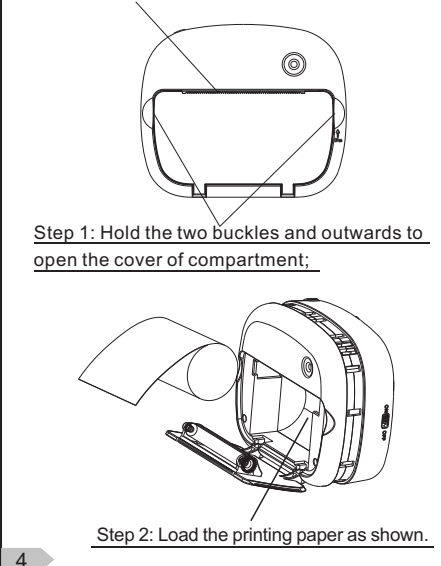

- ①. Hold the TF card slot in the correct direction until the TF card is fixed in the card slot. When removing the TF card, please gently press down on the TF card. After the TF card is ejected, you can take it out. (The TF card must be a high-speed card above 10MB/s. Please do not plug the TF card into the TF card while the machine is working to avoid damage to the machine and memory card.)
- ②. Please pay attention to the direction in which the TF card is inserted. If it is inserted upside down, it may damage the machine, TF card and card slot.
- ③. When you insert the TF card into the machine, the machine will set the TF card as the default storage device. The data in the original TF card may not be readable. Please make a data backup first.
- ④. If the TF card is not compatible with the machine, please use the format option in the memory menu of the machine to format the TF card or try another TF card.

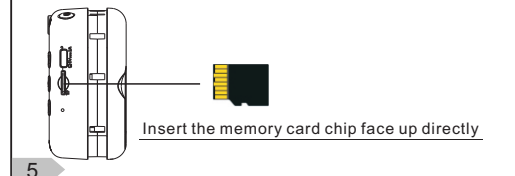 

- ②. When there is input over-voltage, output under-voltage and over-voltage, output short circuit or chip over-temperature, and the battery is not connected, the indicator light flashes at a frequency of 1.3HZ.
- ③. It takes 70-130 minutes to fully charge the battery.

 
 
- ## 7. Battery & Safety
1. This machine uses a built-in 7.4V/800mAh polymer lithium battery, which cannot be removed or replaced.
  2. If it is damaged, contact the seller for repair.
  3. The battery must be charged under adult supervision.
  4. When the battery is charging, the toy switch should be turned off.
  5. The power terminals must not be short-circuited. Do not connect more than the recommended quantity or the recommended type of adapter specification to the power supply with a voltage greater than the recommended voltage.  
- 5V ~ 20A
  6. During the use of the toy, check whether the wire plug shell and other parts are damaged regularly. If the damage is found, stop using it until the repair is complete.
  7. When the machine is not used for a long time, please charge the battery fully before turning off the power switch.

Step 1. Press the set button to enter the menu page;  
Step 2. Press the up/down button to select the corresponding requirement.



Note: Larger numbers are higher printing density.

③. Cyclic Record

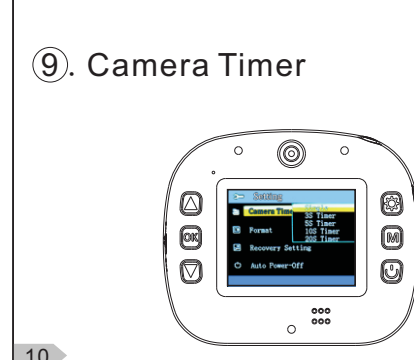

|                             |                                           |
|-----------------------------|-------------------------------------------|
| Dimensions                  | 90*112*42mm                               |
| Display                     | 2.4-inch color screen                     |
| Battery specification       | 74V/800mAh lithium battery                |
| Photo/picture specification | 5752X7mm glossy                           |
| Shooting mode               | Single shot, 3-20 seconds timer           |
| Photo resolution            | 4032*3024, 1920*1440, 1280*960            |
| Video resolution            | 1080P/HD, 720P                            |
| Maximum support             | 32G                                       |
| Preset density              | Highest, 2ghz, 3medium, 4low, 5lowest     |
| Function                    | WiFi Photographing Video Printing         |
| System language             | Chinese, Japanese, English, Russian, etc. |
| Continuous shooting         | 3-10 shots                                |
| Loop photographing          | 1-10 minutes                              |
| Transmission interface      | Type-C                                    |
| Support system              | Windows XP/7/8                            |
| Body weight                 | 178g                                      |
| Working temperature         | -5°C to 40°C                              |

|                             |                                           |
|-----------------------------|-------------------------------------------|
| Dimensions                  | 90*112*42mm                               |
| Display                     | 2.4-inch color screen                     |
| Battery specification       | 74V/800mAh lithium battery                |
| Photo/picture specification | 5752X7mm glossy                           |
| Shooting mode               | Single shot, 3-20 seconds timer           |
| Photo resolution            | 4032*3024, 1920*1440, 1280*960            |
| Video resolution            | 1080P/HD, 720P                            |
| Maximum support             | 32G                                       |
| Preset density              | Highest, 2ghz, 3medium, 4low, 5lowest     |
| Function                    | WiFi Photographing Video Printing         |
| System language             | Chinese, Japanese, English, Russian, etc. |
| Continuous shooting         | 3-10 shots                                |
| Loop photographing          | 1-10 minutes                              |
| Transmission interface      | Type-C                                    |
| Support system              | Windows XP/7/8                            |
| Body weight                 | 178g                                      |
| Working temperature         | -5°C to 40°C                              |

| Problem                                 | Q                                                 | A                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Printer does not come out of sleep mode | Paper does not come out of sleep mode             | <ul style="list-style-type: none"> <li>1. The printing paper must be removed about 10 cm outside the cover of the printer.</li> <li>2. Check whether the camera's print switch is turned on, or the print switch is turned off.</li> </ul>                                                                                                                                                                                                   |
| Blurred printing                        |                                                   | <ul style="list-style-type: none"> <li>1. The thermal paper needs to be preheated, and 2-5 seconds are required. The camera has a timer of preheating time, which can be removed before use. Check whether the atmosphere of the shooting is humid.</li> <li>2. Adjust the print temperature. The print temperature is divided into three parts: normal (not printing any number), high (medium and low-ISO), and low (high ISO).</li> </ul> |
| Printing problem                        | Printing paper jam                                | <ul style="list-style-type: none"> <li>1. Check whether the paper is torn, or the paper is not the same as the original printing paper.</li> <li>2. Check whether the paper is not correctly inserted.</li> </ul>                                                                                                                                                                                                                            |
|                                         | Print with missing edges                          | Check whether the paper is in the correct position                                                                                                                                                                                                                                                                                                                                                                                           |
|                                         | Sheets in print                                   | <ul style="list-style-type: none"> <li>1. Retract the paper and push paper more sheets to be printed. If there are still sheets, retract the paper and push paper more sheets to be printed.</li> </ul>                                                                                                                                                                                                                                      |
|                                         | Printed out on screen                             | Check whether the printing paper is used in the correct direction                                                                                                                                                                                                                                                                                                                                                                            |
|                                         | The camera shows a memory card                    | <ul style="list-style-type: none"> <li>1. Format the memory card.</li> <li>2. Check the connection or use the memory card regularly, and the memory card is not damaged.</li> </ul>                                                                                                                                                                                                                                                          |
| Memory problem                          | The memory card is not compatible with the camera | <ul style="list-style-type: none"> <li>1. The memory card is not compatible with the camera.</li> <li>2. Suspected false memory card.</li> </ul>                                                                                                                                                                                                                                                                                             |
|                                         | The memory card cannot be read                    | <ul style="list-style-type: none"> <li>1. Check whether there are foreign objects in the memory card slot and whether the SD is normal.</li> </ul>                                                                                                                                                                                                                                                                                           |

| Problem                                 | Q                                      | A                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Printer does not come out of sleep mode | Paper does not come out of sleep mode  | <ul style="list-style-type: none"> <li>1. The printing paper must be removed about 10 cm outside the cover of the printer.</li> <li>2. Check whether the camera's print switch is turned on, or the print switch is turned off.</li> </ul>                                                                                                                                                                                                   |
| Blurred printing                        |                                        | <ul style="list-style-type: none"> <li>1. The thermal paper needs to be preheated, and 2-5 seconds are required. The camera has a timer of preheating time, which can be removed before use. Check whether the atmosphere of the shooting is humid.</li> <li>2. Adjust the print temperature. The print temperature is divided into three parts: normal (not printing any number), high (medium and low-ISO), and low (high ISO).</li> </ul> |
| Printing problem                        | Printing paper jam                     | <ul style="list-style-type: none"> <li>1. Check whether the paper is torn, or the paper is not the same as the original printing paper.</li> <li>2. Check whether the paper is not correctly inserted.</li> </ul>                                                                                                                                                                                                                            |
|                                         | Print with missing edges               | Check whether the paper is in the correct position                                                                                                                                                                                                                                                                                                                                                                                           |
|                                         | Sheets in print                        | <ul style="list-style-type: none"> <li>1. Retract the paper and push paper more sheets to be printed. If there are still sheets, retract the paper and push paper more sheets to be printed.</li> </ul>                                                                                                                                                                                                                                      |
|                                         | Printed out on screen                  | Check whether the printing paper is put in the correct direction                                                                                                                                                                                                                                                                                                                                                                             |
|                                         | The camera shows a memory card problem | <ul style="list-style-type: none"> <li>1. Format the memory card.</li> <li>2. Check the connection or use the memory card regularly, and the memory card is not damaged.</li> <li>3. The memory card is not compatible with the camera.</li> <li>4. Check whether the memory card is not inserted correctly.</li> </ul>                                                                                                                      |
| Memory card problem                     | The memory card cannot be read         | <ul style="list-style-type: none"> <li>1. Check whether there are any foreign objects in the memory card slot and whether the SD is normal.</li> </ul>                                                                                                                                                                                                                                                                                       |

|                  |                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                     |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                  | <p>The display responds while the charging screen is shown.</p> <p>The charging screen is displayed when the machine is turned on, and cannot be displayed when the machine is turned on, and cannot be displayed when the machine is turned on.</p>      | <p>1. Check if sufficient voltage, needs to be repaired if not.</p> <p>2. Check if the USB cable is plugged in properly.</p> <p>3. Check whether the USB port is abnormal.</p>                                                                                      |
| Charging problem | <p>Unable to turn on, charging red light is lit.</p> <p>Unable to turn on, charging red light is lit.</p> <p>Can't turn on, can't charge.</p> <p>Charging lights is on, no display, no power on</p> <p>Charging lights is on, no display when booting</p> | <p>1. Check the system readout (the small blue screen).</p> <p>2. Check whether the USB port is abnormal.</p> <p>3. Check whether the USB port is abnormal.</p> <p>4. Check whether the USB port is abnormal.</p> <p>5. Check whether the USB port is abnormal.</p> |
| Screen problem   | <p>Screen disconnection, abnormal printing noise</p>                                                                                                                                                                                                      | <p>1. Check whether the system readout (the small blue screen).</p> <p>2. Check whether the system readout (the small blue screen).</p> <p>3. Check whether the system readout (the small blue screen).</p>                                                         |
| Sound problem    | <p>Camera display, display not displayed</p> <p>Camera sound is small</p>                                                                                                                                                                                 | <p>1. Check whether the camera is restored to factory settings.</p> <p>2. Check whether the camera is restored to factory settings.</p> <p>3. Check whether the camera is restored to factory settings.</p>                                                         |

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction