 




USER MANUAL

Packing List

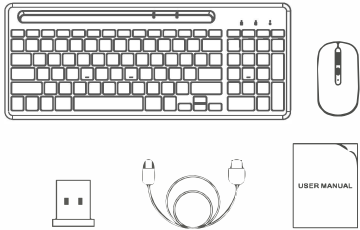

1. Keyboard x1
2. Mouse x1
3. USB receiver x1
4. Charging Cable x1
5. User manual x1

Operation Guides

1. Take out the keyboard and mouse from the box, and turn on the switches of the keyboard and mouse.
2. Plug the receiver into the USB port of your computer.
3. When the computer installs driver automatically, they start to serve.

Functions of Combination Keys


FN + F1	audio on	FN + F2	volume up
FN + F3	volume down	FN + F4	mute
FN + F5	previous track	FN + F6	next track
FN + F7	play / pause	FN + F8	stop
FN + F9	homepage	FN + F10	email
FN + F11	my computer	FN + F12	favorites

Lighting Effect Control

FN + 	Light Mode 1
FN + 	Light mode 2
FN + 	Light Mode 3
FN + 	turn on / off the lights
FN + 	Increase backlight brightness
FN + 	Reduce backlight brightness

LED light description

 LED light of Keyboard

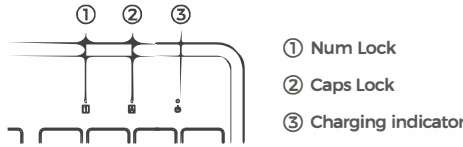

1. Num Lock

The Num Lock LED light will turn green when Num Lock function is activated.

2. Caps Lock

 
The Caps Lock LED light will turn green when Caps Lock function is activated.

3. Charging indicator

When the battery is running down, the LED light flashes slowlyfor 5 seconds.

When charging, the red light will turn on. When fully charged, the red light will turn off.

LED light of Mouse

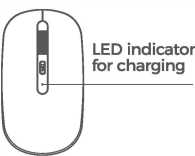

When charging, the LED red light will turn on.When fully charged, the LED red light will turn off. When the battery is running down, pleasecharge the mouse to make sure itworks properly.

Notice

1. Please fully charge the keyboard at first time when you use it, this will help preserve battery life.
2. Please unplug the power supply after full charge.
3. It is recommended to turn off the power switch of the keyboard if it's not used for a long time,
4. Do not expose this product to water, otherwise it may cause a short circuit and damage the product.
5. Do not drop or hit this product, as the impact may damage the internal components.
6. Do not put this product near extreme heat or fire.

Solutions for connection exceptions

Keyboard:

1. Unplug the receiver from the computer
2. Turn on the keyboard switch and press the ESC+K key to pair again
3. Plug the receiver into the computer again, and it can be used normally

Mouse:

1. Unplug the receiver from the computer, and then reinsert it into the computer
2. Turn on the mouse switch, press the scroll wheel and the right button at the same time, you can use it normally

Note:

If the product is still unworkable after above solutions, please repeat these steps for code pairing again. If your problems can't get solved yet after that, please contact our customer service for help.
(Email: csforcustomer@gmail.com)

Correct Disposal Of This Product

 (Waste Electrical & Electronic Equipment)
This Marking shown on the product or its literature, indicate that it should not be disposed with other

household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.