

GY-Z7L 英文说明书, 正反彩印

封面

3 IN 1 Fast Wireless Charger
User manual



Notice: To ensure charging 3 devices safely and efficiently, you must use 9V/2A adapter and quick charge cable, if including 15W fast charging phones, you must use 9V/2.7A or 12V/2A adapter and quick charge cable (if not use the appropriate adapter and quick charge cable, the charger may not charge phone fast, or may not charge 3 devices simultaneously, or may even damage the charger)

Product Appearance




Product Introduction

The 3-in-1 wireless charger, a compact charging house, powered from only one outlet, can charge 3 devices simultaneously. When charge your Galaxy phones, watches, buds, and other compatible phones, and more TWS, just put them on, wireless charging will automatically start, all this will make your desk clean and tidy, and make your life easier. The charger is so space-saving designed can help you integrate your mobile phone intelligent and life very well, especially for Samsung user. Besides, it is fashion that the light ring is so colorful and has Running water light effect showing the charging state, if you want to turn off or turn on the light just touch the touch-sensitive key.

Operation Steps

1. Connect the charger to a 9V/2A, 9V/2.7A or 12V/2A adapter through a Type-C quick charge cable to switch on the power;
2. Put your phone on then charge;
3. Put the Galaxy watch on and suck it up to charge (roll the watch band to minimize to charge better);
4. Plug your earphone on then charge;

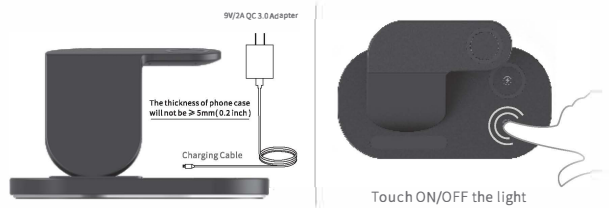

LED light ring instructions

- Green light is on : Standby mode or not charging the phone
- Running water light effect: Wireless charging the phone
- Red light flash: Foreign body is detected or the phone is misaligned (the phone charging will automatically stop)

Charging Schematic Diagram



Applicable Devices

1. Smart Phone

- ① Samsung: Galaxy S: 20 5G, 20+ 5G, 20 Ultra 5G, 10, 10+, 10e, 9, 9+, 8, 8+, 7, 7 edge, 6, 6 edge, 6 edge+, 6 G9209, 6 Active; Galaxy Note: 20, 20 Ultra 5G, 10, 10e, 10+, 9, 8, 7, 6, 5;
- ② Apple: iPhone 12, 12 Pro, 12 Pro Max, 12 mini, SE, 11, 11 Pro, 11 Pro Max, Xs, Xs Max, XR, 8, 8 Plus;
- ③ LG: G2 (VS980, Verizon version), G3, G6, G6+, G7, G7 ThinQ, G7+ ThinQ, G8, G8 ThinQ, V30, V30+, V35, V40 ThinQ, V50, V50 ThinQ, LG Lucid2 (VS870), LG Optimus F5 (As870), LG Optimus Vu 3, Spectrum 2, Optimus G Pro, Optimus VuII, Optimus LTE 2, etc.;
- ④ MOTOROLA: Droid Turbo, Droid Turbo2, Droid 5, Moto Maxx, Ultra M, Moto X Force
- ⑤ Huawei: P: 40 Pro, 40 Pro+, 30 Pro; Mate: 40 RS, 40 Pro, 40 Pro+, 30 5G, 30 Pro 5G, 30, 30 Pro, 30 RS, 20 Pro, 20 RS, RS;
- ⑥ Xiaomi: 10, 10 Pro, 9, 9 Pro, Mix 3, Mix 2s; Including other devices with wireless charging receiver built-in;

other some devices need to add a wireless charging receiver
(Note: All devices must meet the Qi standard).

2. Smart Watch:

Galaxy watches: Watch 3/Active 2/Active 1/ Gear S3/Sport etc.

3. Earphone:

Galaxy Buds, Buds+, Galaxy Buds Live ;
AirPods 2, AirPods Pro; more TWS

Product Specification

Input: 9V/2A, 9V/2.7A or 12V/2A (must use 9V/2.7A or 12V/2A when charging 3 devices including 15W charging phone)
Phone Output: 15W/10W/7.5W/5W
Watch Output: 2.5W (Galaxy watches: Watch 3/Active 2/Active 1/ Gear S3/Sport etc)
Earphone Output: 3W (TWS Earphone: Galaxy Buds, Buds+, Galaxy Buds Live; and more)
Input Interface: Type-C port
Transmission Distance (Phone): ≤ 8mm
Conversion Rate (Phone): ≥ 73%
Product Size: 174.2X113.5X100.5mm

Accessories List

Wireless Charger*1, Type-C quick charge cable*1, User manual*1

Attention

1. Please keep the charger away from water or other liquid;
2. If you need to clean the charger, please make sure it is not connected power supply;
3. Using Environment temperature remains 0-45°C.
4. Charging environment of smart phone will not be ≤ 55°C (≤ 131°F)

Answer questions

1. If you're experiencing interrupted or slow charging, check the following:

- (1) The back of your phone should not have any metal, pop sockets, or credit cards.
- (2) Put the phone in the center of the charging surface (this lets the charging coil in your phone line up with the one inside the wireless charger).
- (3) The wireless charging coil on Sony phones is located slightly below center.
- (4) Phone cases should be no thicker than 5 mm for effective charging.
- (5) Check whether the adapter is QC3.0 fast charger.

2. If you're failing to charge your device, please try out the following:

- (1) Please restart your cell phone and test with other USB cable.
- (2) Please check whether the indicator turns on or not.
- (3) Please check the Adapter is QC3.0 Quick Charger (Output: 9V/2A) or not, iPhone original adapter does not match the wireless charger.
- (4) Please check your Phone case thickness (≤ 5mm). Metal ring or Magnetic Pad will not be available.

3. If you're using the recommended wireless charger with the QC3.0 Adapter and have removed any potential charging obstructions, but are still experiencing issues, try:

- (1) Replacing the cable connecting your wireless charger.
- (2) Rebooting your phone.
- (3) Unplug the adapter and reinsert.

CE FC RoHS

FCC Statement

This device complies with part 15 FCC Rules. Operation is Subject To the following two conditions:

(1) This device may not cause harmful interference, and (2) this devicemust accept any interference received, including interference that may cause undesired operation.

Changes or modifications not explicitly approved by the partyresponsible for compliance could void the user’s authority tooperate this equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to providereasonable protection against harmful interference in a residential installation. This equipment generates, uses and canradiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference toradio or television reception, which can be determined by turning the equipment off and on, the user is encouraged totry to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC radiation exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.