



 
R30
Wireless Audio Receiver

Box Contents

- A** R30 Wireless Audio Receiver




- B** 3.5MM AUX Audio output Cable

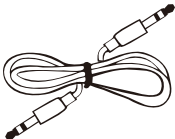

- C** Instruction manual



Product Overview

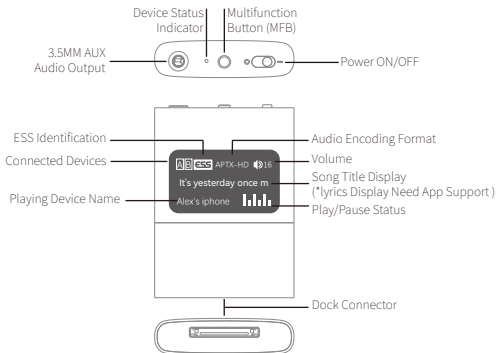

Button Functions


Button	Function	Button Control
	Power On 	Switch to ON side
	Power Off 	Switch to Off side
MFB (Multi Function Button) 	Play/Pause	Click
	Enter pairing mode	Long press for 3 seconds
	Reset paired list	Long press for 10 seconds
	Adjust screen brightness	Double-click

LED Indicators

Status	Indicator
Power On	 Blue 1x
Power Off	 Red 1x
Enter pairing	  Red and Blue alternately
Pairing successful	   Blue 3x
Reset paired list	   Red 3x


Setup Instructions

- ① Insert the adapter into the connector of the Speaker Dock, the display screen side is facing outward.
- ② Turn on the power of Speaker Dock and switch the input source channel to iPod (no need to operate if iPod is the only channel).
- ③ Turn the R30 power switch to ON, Paired the device, adjust the volume of Speaker Dock and adapter to appropriate volume (pairing step please refer to “Pairing Method”).

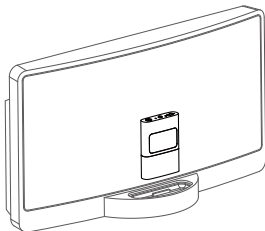

How to replace or remove the universal adapter

Important notes: If R30 cannot insert into the Speaker Dock, please check whether a suitable universal adapter has been used, if you want to replace one, insert a fingernail into the adapter slot and pull up to remove the adapter from the well of the dock. Or use an object that fits into the slot to gently pry out the adapter. Then choose another proper universal adapter insert into the well and press on the edges until they are flush with the dock. If there is no suitable universal adapter fit for R30, it can also be used without universal adapter.

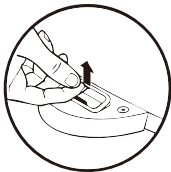

Pairing Method

- ① When using the adapter for the first time, it will automatically enter pairing mode (red and blue LED flashing alternately) after booting up. If pairing mode is not entered, please press and hold the MFB button for 3 seconds.
- ② Open the BT settings on your phone or device with BT function, then search for BT devices and select the "R30" name for pairing.
- ③ After successful pairing, the blue LED flashes slowly. When playing a song, information such as the BT device name and song title will be displayed.
- ④ Pairing the second devices

After connecting the first device, press and hold the MFB button for 3 seconds to enter pairing mode (red and blue LED lights flash alternately). Search for R30 on the second phone/tablet and connect. After connection, the LED will resume normal operation and display two connection icons.

*Remark: R30 can connect two devices, but can only play audio from one device at a time.

Troubleshooting

Symptom	Possible Problem	Solution
Cannot power on	Check if the speaker base is powered on, if the adapter switch is turned on, and if the adapter is securely installed on the connector of the speaker base.	Turn on the power to the adapter and speaker base, unplug the adapter again and insert it into the connector of the speaker base.
No sound	Speaker Dock input source not switch to iPod channel.	Speaker Dock input source select to IPOD channel.
Even though the LED displays the maximum volume, the volume is still too low	Dock's volume set too low	Adjust volume key on Dock to set a proper volume.
Cannot automatic connection	Adapter auto connect timeout and enters standby mode.	Press and hold the MFB for 3 seconds to reconnect; In addition, using the power and then turning it back on can force a reconnection

Specification

Effective range: 10 meters (33 feet)

Bluetooth Version: 5.0

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment can be used in portable exposure conditions.

Warranty Terms

1. There is a manual and warranty card in the package. User fill out the warranty card as the warranty certificate.
2. When adapter quality problems occur in normal use and not more than a year since the date of purchased, users can enjoy free repair services.
3. The following situations don't belong to the scope of warranty:
 - A. No dealer signature or seal in warranty card.
 - B. Artificial or force majeure cause damage.
 - C. Machine to normal wear and tear.
4. If the failure is caused by human factors, beyond the warranty period or force majeure factors, we will charge maintenance fees.
5. If the product fails and needs to be returned to the factory for warranty, please contact us: