 


POWER

- 

Gently twist to open the Naughty or Nice Christmas Ornament.
- 

Pull out the insulating strip from the battery compartment.
- 

Close the item then gently shake the device to turn it on.
- 

A white light will flash when its on. Now its ready to place on your tree.

Note: The Naughty or Nice ornament will go into sleep mode after 5 mins. Gently shake the item to bring it to life again.

CONNECT

- 

Download the Naughty or Nice App from the App Store.
- 

Make sure Bluetooth is activated on your mobile.
- 

 
Add your Naughty or Nice Christmas Ornament and give it a name.
- 

Change the color using the app.
Green is for good, and **red** is for not so good.

AAA x3 Included

How to replace the battery

- 

Gently twist to open the Naughty or Nice Christmas Ornament.
- 

Remove battery cover.
- 

Follow diagram to add new batteries.
- 

Close the item then gently shake the device to turn it on.

Made in China
Not intended for use by children under 14

 zinc.

Instruction manual

Model number: **NON-2021A**

Naughty or Nice Christmas Ornament



- **Do not mix old and new batteries**
- **Do not mix alkaline, standard (Carbon-zinc), or rechargeable (Ni-Cd, Ni-Mh, etc) batteries**



Zinc Group

309 East Paces Ferry Rd, NE, Atlanta GA, 30305

Contact: **Christmasbauble@zincgroup.com**

Toll free : **833 256 2575**

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2A2K4-ZINC