


TRUE WIRELESS STEREO

EARBUDS

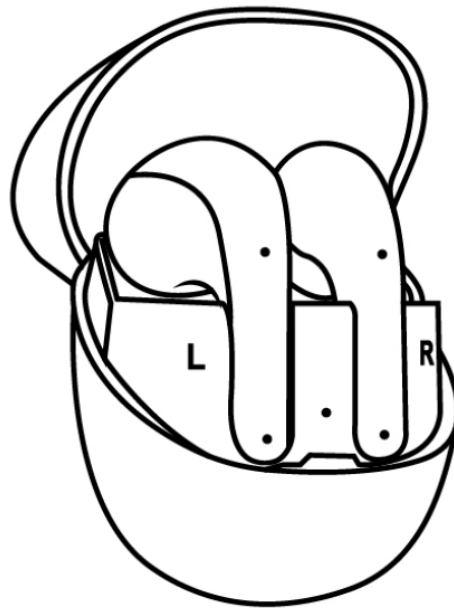

INSTRUCTIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that of which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help



WIRTWSHKPKPRM

FCC ID: 2A2KIWIRTWSHKPKPRM

Primark Limited
PO Box 644
Arthur Ryan House
22-24 Parnell Street
Dublin 1
Ireland

Distributed by
Primark Limited
41 West Street
Reading
England, UK
RG1 1TZ

RN Code:145478
CIF - B83875427
Batch No: 010625:25181
Season Code: AW25

IT: PAP 21, Carta.
Raccolta Carta.

ES: PAP 21, Papel.
Recogida de residuos de papel.
Consultar las directrices de reciclaje
y recogida de residuos locales.



FR

**Cet appareil
se recycle**

**À DÉPOSER
EN MAGASIN**

**À DÉPOSER
EN DÉCHÈTERIE**



ou



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Made in China / Fabricado en China
Fabricado na China / Hergestellt in China
Fabriqué en Chine / Geproduceerd in China
Prodotto in Cina / Wyprodukowano w Chinach
Izdelano na Kitajskem / Vyrobeno v Číne
Fabricat a la Xina / κατασκευασμένο στην Κίνα
Fabricate în China / Kínában készült
Fabricate in China



EN: Electric and Electronic devices as well as batteries must not be disposed of with household waste. For more information about where you can drop off your waste product for recycling please contact your local authority.

ES: los dispositivos eléctricos y electrónicos, así como las pilas, no deben desecharse junto con los residuos domésticos. Para obtener más información sobre dónde se pueden depositar los residuos para su reciclaje, póngase en contacto con las autoridades locales competentes.

CA: Els dispositius elèctrics i electrònics, així com les piles, no s'han de llençar amb els residus domèstics. Per obtenir més informació sobre els punts de recollida de residus, poseu-vos en contacte amb les autoritats locals.

PT: Os dispositivos elétricos e eletrônicos, bem como as baterias, não devem ser eliminados com o lixo doméstico. Para mais informações sobre onde entregar o produto para reciclagem, contactar a autoridade local.

DE: Elektrische und elektronische Geräte sowie Batterien dürfen nicht im Hausmüll entsorgt werden. Nähere Informationen zu den Recyclingstellen für Altprodukte lassen sich bei den kommunalen Behörden erfragen.

FR: Ne pas jeter les appareils électriques et électroniques ou les piles avec les ordures ménagères. Pour plus d'informations sur les endroits où vous pouvez déposer votre produit usagé à des fins de recyclage, veuillez contacter votre municipalité.

NL: Elektrische en elektronische apparaten en batterijen mogen niet worden weggegooid met het huishoudelijke afval. Voor meer informatie over inzamelpunten voor afval kun je contact opnemen met je gemeente.

IT: I dispositivi elettrici ed elettronici e le batterie non devono essere smaltiti insieme ai rifiuti domestici. Per maggiori informazioni sui punti di raccolta per il riciclaggio dei rifiuti, contattare l'ente locale.

PL: urządzeń elektrycznych i elektronicznych nie wolno wyrzucać wraz z odpadami z gospodarstwa domowego. Więcej informacji na temat punktów zbiórki odpadów do recyklingu można uzyskać w lokalnym urzędzie.

SL: Električnih in elektronskih naprav ter baterij ne smete odvreči med gospodinske odpadke. Če želite več informacij o tem, kam lahko odložite odpadni izdelek za recikliranje, se obrnite na lokalne oblasti.

CS: Elektrická a elektronická zařízení a baterie se nesmí likvidovat spolu s domovním odpadem. Další informace o tom, kde můžete svůj výrobek odevzdat k recyklaci, získáte od místního úřadu.

SK: Elektrické a elektronické zariadenia ani batérie sa nesmú likvidovať spolu s komunálnymi odpadom. O bližšie informácie, kde môžete výrobok recyklovať, požiadajte miestne orgány.

EL: Οι ηλεκτρικές και ηλεκτρονικές συσκευές καθώς και οι μπαταρίες δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να αφήσετε τα απορρίμματά σας για ανακύκλωση, επικοινωνήστε με την τοπική σας αρχή.

HU: Az elektromos és elektronikus eszközöket, valamint az elemeket és akkumulátorokat nem szabad a háztartási hulladékkal együtt kidobni. Ha további információra van szüksége arról, hogy hol adhatja le a terméket szelektív hulladékként, forduljon a helyi hatóságokhoz.

RO: Dispozitivele electrice și electronice, precum și bateriile, nu trebuie aruncate împreună cu deșeurile menajere. Pentru mai multe informații despre locul în care vă puteți lăsa produsul rezidual pentru reciclare, vă rugăm să contactați autoritățile locale.

UK EN: Hereby, Primark declares that the radio equipment type [083669-991147667-0306] is in compliance with Radio Equipment Regulations 2017. The full text of the declaration of conformity is available at the following internet address: <https://www.primark.com/en-gb/doc>

EU ES: "Por la presente, Primark declara que el tipo de equipo de radio [083669-991147667-0306] cumple con la Directiva 2014/53/EU. El texto completo de la declaración de conformidad de la UE puede consultarse en la siguiente dirección de Internet: <https://www.primark.com/en-gb/doc>"
CA: "Primark declara que l'equip de ràdio de tipus [083669-991147667-0306] compleix la Directiva 2014/53/UE. El text complet de la declaració de conformitat de la UE està disponible a la adreça d'internet següent: <https://www.primark.com/en-gb/doc>"
PT: "A Primark declara, pelo presente, que o tipo de equipamento de rádio [083669-991147667-0306] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade da UE está disponível no seguinte endereço de Internet: <https://www.primark.com/en-gb/doc>"
DE: "Hiermit erklärt Primark, dass der Funkgerätetyp [083669-991147667-0306] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter <https://www.primark.com/en-gb/doc> verfügbar."
FR: "Par la présente, Primark déclare que le type d'équipement radio [083669-991147667-0306] est conforme à la directive 2014/53/UE. Le texte intégral de la déclaration de conformité de l'UE est disponible à l'adresse Internet suivante: <https://www.primark.com/en-gb/doc>"
NL: "Hierbij verklaart Primark dat het type radioapparatuur [083669-991147667-0306] voldoet aan richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring is beschikbaar op het volgende internetadres: <https://www.primark.com/en-gb/doc>"
IT: "Con la presente, Primark dichiara che questo tipo di apparecchiatura radio [083669-991147667-0306] è conforme alla direttiva 2014/53/UE. Il testo completo della Dichiarazione di conformità UE è disponibile al seguente indirizzo: <https://www.primark.com/en-gb/doc>"
PL: "Primark niniejszym oświadcza, że urządzenie komunikacji radiowej typu [083669-991147667-0306] spełnia wymogi dyrektywy 2014/53/UE. Pełna treść deklaracji zgodności UE jest dostępna na stronie internetowej: <https://www.primark.com/en-gb/doc>"
SL: "Podjetje Primark izjavlja, da je vrsta radijske opreme [083669-991147667-0306] v skladu z direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem mestu: <https://www.primark.com/en-gb/doc>"
CS: "Společnost Primark tímto prohlašuje, že typ rádiového zařízení [083669-991147667-0306] je v souladu se směrnicí 2014/53/EU. Úplné znění prohlášení EU o shodě je k dispozici na internetové adrese: <https://www.primark.com/en-gb/doc>"
SK: "Spoločnosť Primark týmto vyhlasuje, že rádiové zariadenie typu [083669-991147667-0306] je v súlade so smernicou 2014/53/EU. Plné znenie vyhlásenia o zhode EU je k dispozícii na adrese: <https://www.primark.com/en-gb/doc>"
EL: "Η Primark διὰ του παρόντος δηλώνει ότι ο τύπος ραδιοεξοπλισμού [083669-991147667-0306] συμμορφώνεται με την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ είναι διαθέσιμο στην ακόλουθη διεύθυνση: <https://www.primark.com/en-gb/doc>"
HU: "A Primark ezennel kijelenti, hogy a [083669-991147667-0306] rádióberendezés-típus megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege a következő internetes címen található: <https://www.primark.com/en-gb/doc>"
RO: "Prin prezenta, Primark declară că tipul de echipament cu unde radio [083669-991147667-0306] respectă Directiva 2014/53/UE. Textul integral al declarației de conformitate UE este disponibil la următoarea adresă de internet: <https://www.primark.com/en-gb/doc>"

EN Wireless Earbuds

Product Specifications:

Wireless Earbuds: (L+R)

USB-C Charging Cable

Frequency Range: (2402 MHz to 2483.5MHz)

Max RF Output Power: <10dBm

Sensitivity: 93+-5db

Wireless Range: 10m (33ft)

Power On/ Off:

- Remove earbuds from the charging case; they will automatically power on.
- Place earbuds back in the charging case, and they will automatically power off.

Pairing:

- To pair the earbuds, they will enter auto-pair mode when removing from the charging case.
- You can also manually switch Bluetooth mode to discoverable on your device. Long press the multi-function pad on the earbuds until the red and blue lights flash alternately.
- Select "Primark True Wireless" when they appear on your device. You will now hear a voice prompt say 'connected.' The earbuds are now connected.

Un-pairing:

- Tap and hold the multifunction keys for 8 seconds. The earbuds will flash red only 3 times. Alternatively, unpair from your mobile device Bluetooth menu.

Control Functions:

- **On/Off:** Tap and hold either button for 5 seconds.
- **Auto Power Off:** Earbuds will power off if no device is connected within 5 minutes.
- **Manual Power Off:** Place earbuds back into charging case.
- **On:** Remove earbuds from the charging case. Earbud light will flash blue/red 3 times. Pairing will happen automatically.
- **Play Music:** Short tap on the multifunction button on either earbud.
- **Pause:** Short tap on the multifunction button on either earbud.
- **Next Track:** Fast double tap on right earbud function key.
- **Previous Track:** Fast double tap on left earbud function key.
- **Volume Up:** Fast right earbud tap 3 times when music is playing. Volume will increase by one level. (A 'ding' sound will play when maximum volume has been reached.)
- **Volume Down:** Fast tap left earbud 3 times when music is playing. Volume will decrease by one level.

Calling Functions:

- **Incoming Call:** A tone will chime in the earbuds.
- **Answer the Call:** Short tap on either earbud to answer the call.
- **To Reject the Call:** Long press either earbud for 2 seconds.
- **To End the Call:** While on a call, short tap either earbud to disconnect.
- **Voice Assistant:** To activate voice assistant on the phone, long press the right earbud.

Charging:

- To charge earbuds, place them into the charging case. Charging can take up to 2 hours for a full charge.
- The charging case will charge the earbuds approximately 5 times.
- To charge the case, plug the supplied USB-C cable into a suitable main charging plug. Plug the charging case into the USB-C cable. The LED light on the case will flash red. The LED lights on the earbuds will stay solid red. When the charging case is fully charged, the LED indicator will stay solid on. Full charging can take up to 2 hours.



Safety Recommendations:

- Do not use the earphones whilst they are charging. Adjust the volume to an appropriate level.
- Loud sounds may damage your hearing. Volume is restricted in line with EU guidelines. For traffic safety, never use your earphones while riding a bicycle, motorbike, or driving. Any signs of wear and tear, please discard immediately. Do not use if connections are loose.

BATTERY WARNING

Instructions to prevent reasonably foreseeable misuse.

- Batteries are built-in into the product, so please do not tamper. Doing so will make the warranty null and void.
- Do not crush or cut the battery as this can result in an explosion.
- Leaving a battery in an extremely high-temperature surrounding environment can result in an explosion or leakage of flammable liquid or gas.
- A battery subject to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- The power delivered by the charger must be between min 0.1 Watts required by the radio equipment, and max 1.6 Watts in order to achieve the maximum charging speed.