

正面 /Front side

Wireless Speaker M7 User Manual



SPECIFICATION

- 1.Product name:M7
- 2.Function:BT/TF/USB/FM/RGB/TWS/Hand-free
- 3.BT version:5.4
- 4.Rated power:5W
- 5.Playing time:4-5Hours
- 6.Transmission distance:10M
- 7.Horn size:66mm
- 8.Impedance:3 ohm
- 9.Battery capacity:1200mAh
10. Material:ABS+Fabric
- 11.Product size:132(L)*124(W)*107(H)mm
- 12.Packing list



USER'S MANUAL



USB Cable

SPEAKER



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

背面 /Back side

COMPONENTS & FUNCTION

PLS KINDLY CHECK THE FUNCTION INDICATOR BEFORE USE THE SPEAKER SYSTEM

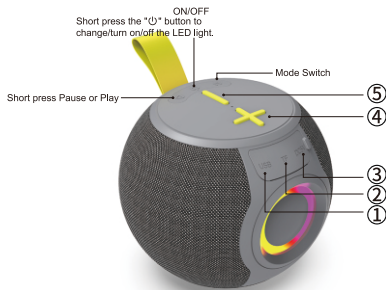

1

USB
USB Play

2

TF Play

3

DC 5V
Charging
DC 5V Power

4

+

Short press Next song
long press Volume "+"

5

-
Short press previous song
long press Volume "-"

M7 User Manual

I. Bluetooth Mode

- 1.Long press the switch button on the speaker,then the blue color indicator light is on with voice prompts.
- 2.The blue color light will flash by 100ms,and the speaker is on pairing status,turn on the device's Bluetooth,use the device to search "M7", click on the "Pair and Connect" option,then it will connect and pair automatically.If there is password needed,it is "0000".
- 3.After connected successfully,there will be voice prompts.The blue color light will flash by 1000ms when the speaker is in using.Once the device is connected successfully,it will be automatically paired when re-use next time.

II. USB/TF Card Mode

- 1.Support usb flash drive and TF card play. TF card play, support common mainstream music format play, maximum support 32G memory card.

III. Charging Mode

- 1.Charge the speaker with the charging cable,(Wall charger is also available as long as it is 5V adapter).
- 2.The red color indicator light is on when it is on charging mode, and the light is off when fully charged.

IV. Low battery protection

- 1.When the battery is lower than 3.3v and lasts for 15s,the speaker will issue the warning, and when the battery is lower than 3.1v and lasts for 15s,the speaker will issue the warning and turn off itself.

V. 1+1 TWS Function

Long press the "▶" button under BT mode, you can hear the sound, which means two speakers are connected successfully, they will auto-link when turning on the speaker next time. (Please note that this function needs 2 pieces of speakers).

Note: When BT transmitting devices cannot be connected,please delete the rest of BT receiving devices' names on the list. Re-activate, re-searching, and re-pairing.

VI. FM Radio

Short Press the "M" button to switch to FM mode, Long press the "▶" button will search radio stations automatically. After finishing the search radio, the speaker will automatically memorize the frequencies found. You can press the "+" button or "-" button to select the radio stations.

(Please note that this function needs to plug in a charging cable to enhance the radio signal. Open areas will get more channels).