

- ④ When all segments of the program are finished, the treadmill will slow down and stop automatically. While exercising, press the "Start/Stop" key on the control panel or "STOP" key on the remote control or unplug the Safety Key can also stop the machine.



Time Value set/20 segments=Running time of each segment.

USA

Program	Segment	Time Value set/20 segments=Running time of each segment																			
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
P1	speed	1.2	1.8	1.8	2.4	3.1	1.8	2.4	3.1	3.1	1.8	2.4	3.1	2.4	2.4	2.4	1.2	1.8	1.8	3.1	1.8
P2	speed	1.2	2.4	2.4	3.1	3.7	2.4	3.7	3.7	3.7	2.4	3.1	3.7	2.4	2.4	2.4	1.2	1.2	3.1	2.4	0.6
P3	speed	1.2	2.4	2.4	3.7	3.7	2.4	4.3	4.3	4.3	2.4	4.3	4.3	2.4	2.4	2.4	1.2	2.4	3.1	1.8	1.2
P4	speed	1.8	3.1	3.1	3.7	4.3	4.3	3.1	4.3	4.3	4.9	4.9	3.1	5.5	3.1	3.1	3.7	3.7	2.4	2.4	1.8
P5	speed	1.2	2.4	2.4	3.1	3.7	4.3	4.3	3.1	3.7	4.3	4.9	4.9	3.1	2.4	1.8	1.8	3.7	3.1	2.4	1.2
P6	speed	1.2	2.4	1.8	2.4	3.1	2.4	4.9	4.3	3.7	4.3	4.9	1.8	3.7	2.4	2.4	1.2	3.1	2.4	1.8	1.2
P7	speed	1.2	1.8	1.8	1.8	2.4	3.1	1.8	2.4	3.1	1.8	2.4	3.1	1.8	1.8	1.8	3.7	3.7	3.1	1.8	1.8
P8	speed	1.2	1.8	1.8	3.7	4.3	4.3	2.4	3.7	4.3	2.4	3.7	4.3	2.4	2.4	2.4	1.2	1.8	2.4	2.4	1.2
P9	speed	1.2	2.4	2.4	4.3	4.3	2.4	4.3	4.9	2.4	4.9	5.5	5.5	2.4	2.4	2.4	3.1	3.7	1.8	1.8	1.2
P10	speed	1.2	2.4	3.1	3.7	4.3	3.1	2.4	3.7	4.9	4.9	3.7	3.7	3.1	2.4	2.4	1.2	2.4	2.4	1.8	1.8
P11	speed	1.8	2.4	3.1	5.5	3.1	5.5	3.1	3.1	3.1	5.5	3.1	3.1	3.1	3.1	5.5	5.5	4.9	4.3	3.7	1.8
P12	speed	1.2	3.1	4.9	6.2	4.3	4.3	6.2	6.2	4.3	4.3	6.2	6.2	3.7	3.7	5.5	5.5	3.1	3.1	2.4	1.8

UK/EUR

Time Program Segment		Time Value set/20 segments=Running time of each segment																			
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
P1	speed	2	3	3	4	5	3	4	5	5	3	4	5	4	4	4	2	3	3	5	3
P2	speed	2	4	4	5	6	4	6	6	6	4	5	6	4	4	4	2	2	5	4	1
P3	speed	2	4	4	6	6	4	7	7	7	4	7	7	4	4	4	2	4	5	3	2
P4	speed	3	5	5	6	7	7	5	7	7	8	8	5	9	5	5	6	6	4	4	3
P5	speed	2	4	4	5	6	7	7	5	6	7	8	8	5	4	3	3	6	5	4	2
P6	speed	2	4	3	4	5	4	8	7	6	7	8	3	6	4	4	2	5	4	3	2
P7	speed	2	3	3	3	4	5	3	4	5	3	4	5	3	3	3	6	6	5	3	3
P8	speed	2	3	3	6	7	7	4	6	7	4	6	7	4	4	4	2	3	4	4	2
P9	speed	2	4	4	7	7	4	7	8	4	8	9	9	4	4	4	5	6	3	3	2
P10	speed	2	4	5	6	7	5	4	6	8	8	6	6	5	4	4	2	4	4	3	3
P11	speed	3	4	5	9	5	9	5	5	5	9	5	5	5	5	9	9	8	7	6	3
P12	speed	2	5	8	10	7	7	10	10	7	7	10	10	6	6	9	9	5	5	4	3

5.3 Walking Pad Mode

- Before using this mode, please refer to section 4.2 of the manual to fold the machine into a Walking Pad.
- In Walking Pad mode, the machine is activated in Manual mode by default, there is no Built-in Program mode.
- The initial operating speed in manual mode is 0.6MPH (UK/EU: 1KM/H), press "+" / "-" on the remote control to adjust the speed, distance, time and calorie data, which will count up from 0.
- In Walking Pad mode, the speed can be set within the range: 0.6-4MPH (UK/EU: 1-6KM/H)

5.4 Sleep Mode

When the treadmill stops running and there is no operation for more than 10 minutes, the system will automatically turn off all displays and enter the sleep mode. Pressing any key will wake it up.

6. How to Use with APP

6.1 APP Download



Scan the QR Code or search the APP named "FITSHOW" in Google Play or APP Store (<http://fitshow.com/qr>)



Tips: Jump to the APP Store to download and install to open the APP, allow permission based on the system prompt.

6.2 Connect & Control Device


- ① Open the FITSHOW App and agree to the Privacy Policy and Terms of Service.
- ② Log in the APP, please use the mobile number or email to register for new user.
- ③ Fill in the basic user information likes height for more accurate exercise program recommendations.
- ④ On the APP homepage, click the "Workout" tab then press the "Quick Start" button.
- ⑤ Turn on Bluetooth on your phone to search for device "Acezoe P11 Pro".

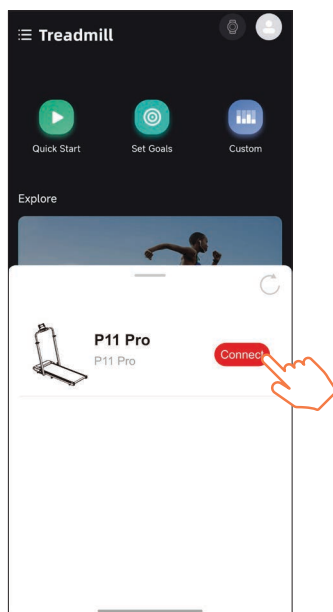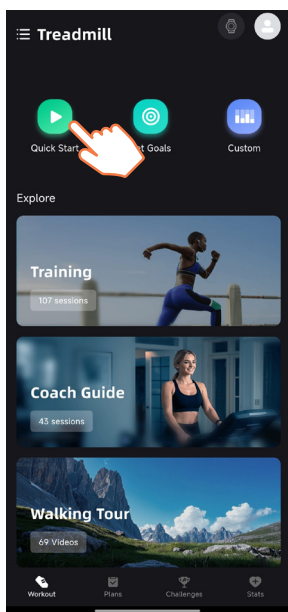

- ⑥ In the workout screen, swipe down for settings and swipe up for controls.




- ⑦ Tap the screen to end the workout.

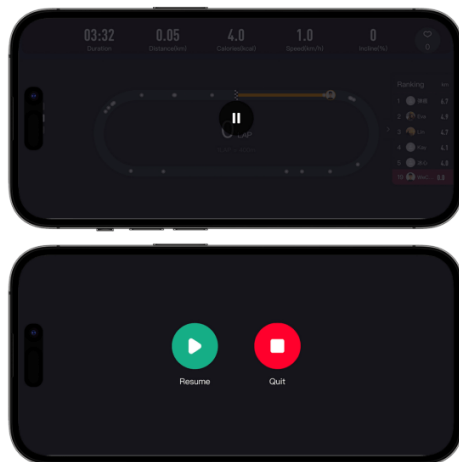

6.3 Functions


Workout Mode

Quick Start	Workout with others in real time. Speed settings can be adjusted on demand.
Set Goals	Customize distance, time and calorie value as goal.
Program/ Training	Train on an existing structured workout.
Scenic Videos	Jump into workouts to explore new places from beautiful forest to breathtaking mountains.
Expert Tips	It is recommended to watch some experts tips before exercising to make a suitable exercise plan.

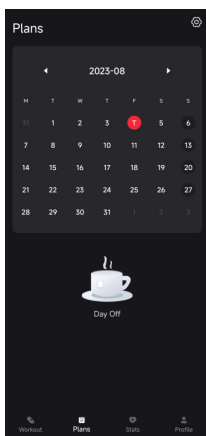


Plans

Quick overview of exercise date.

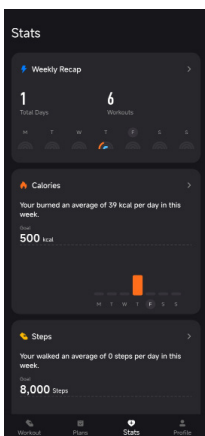

Stats

Quick overview of daily activity data.

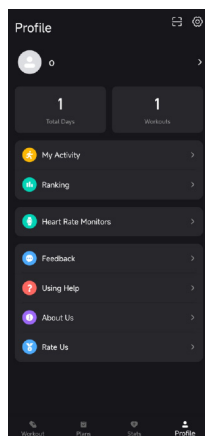

Profile

Quick overview of daily goals and activity data.

7. Maintenance



Warning: Before cleaning or maintaining the product, be sure to unplug the power plug of the treadmill.

7.1 General Maintenance

Proper maintenance is helpful to prolong the service life of the treadmill.

- Please place the treadmill in a dry and shady environment. Don't place the treadmill outdoors in direct sunlight.
- After 2 hours of continuous use, it is recommended to turn off the power and let the machine rest for 10 minutes, which will effectively protect the machine motor and prolong the life of the machine.
- Make sure the shoes are clean when exercising, which avoid bringing foreign objects into the running belt to wear down the running desk/belt.
- Check and lock all parts of the treadmill regularly, and replace defective parts in time.
- Don't use the treadmill by force when it is damaged to avoid product and personal damage. Contact ACEZOE Support Team by email support01@acezoe.us, the after sales team will assist you.

7.2 Running Belt Adjustment

The running belt of treadmill is adjusted before leaving the factory, during transportation, it may be stretched or have deviated from the center position. Please let the running belt run by itself when using it for the first time, and observe whether the running belt is in the center position, and there is no pause or slippage.

Adjust the Tightness of Running Belt


If the running belt slips or does not run smoothly in use, or there is a rattling noise from the running belt, adjust the tightness of the running belt to improve it.

① How to adjust the running belt for tighten? (Issue: Slipping)

Set the speed to 2.2MPH (UK/EU 3KM/H), use a 5mm hex wrench to adjust bolt both of the sides 180° clockwise, then let it run 1 min for tighten. If still too loose, please repeat 1-3 times.

② How to adjust the running belt for loosen? (Issue: Noise/Stuck)


Set the speed to 2.2MPH (UK/EU 3KM/H), use a 5mm hex wrench to adjust bolt both of the sides 180° counterclockwise, then let it run 1 min for loosen. If still too tight, please repeat 1-3 times.

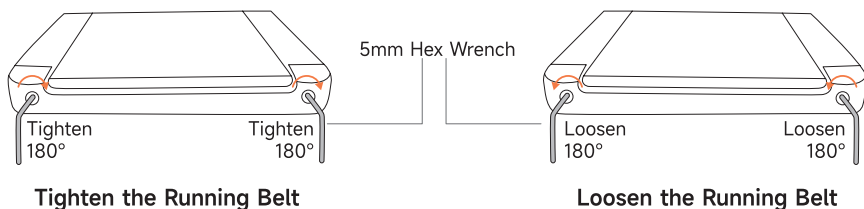



Tips: How to judge whether the running belt is at the appropriate tightness?

Just enough to put one finger in the gap between the Running belt and Running board. (Approx. 0.2"/0,5cm)

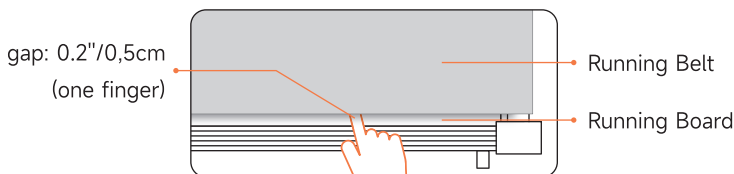

Adjustment of Running Belt Position


When using the treadmill, because of the possible force difference exerted by both feet and the unbalanced pressure exerted on the running belt, the running belt may deviate from the center, but this deviation phenomenon is normal.

① How to adjust the running belt if leaning to the left? (Issue: Noise)

Set the speed to 2.2MPH (UK/EU 3KM/H), use a 5mm hex wrench to adjust bolt on the left side 90° clockwise, then let it run 1 min for centering. (If it still not centered, repeat 1-3 times for centering.)

② How to adjust the running belt if leaning to the right? (Issue: Noise)

Set the speed to 2.2MPH (UK/EU 3KM/H), use a 5mm hex wrench to adjust bolt on the right side 90° clockwise, then let it run 1 min for centering. (If it still not centered, repeat 1-3 times for centering.)

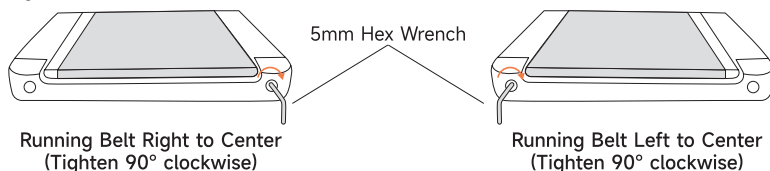

NOTE: Do not over-tighten the rotary drum as this will cause permanent damage to the bearing.

7.3 Running Belt Lubrication

When the treadmill leaves the factory, lubricant is added, but necessary inspection is helpful to keep the treadmill in the best condition for use.

Inspection Steps


- ① Pull up the side running belt and reach out to touch the surface of the running deck as far as possible;
- ② If you feel there is silicone oil, you don't need to add lubricant for the time being;
- ③ If you touch the surface and it feels very dry, you need to add 5-10ml silicone oil.

Adding Lubrication Frequency Suggestion

Condition	Action
First Use	Check the running deck, and add 5ml lubricant if the running deck is dry
Use less than 3 hours per week	Add lubricating oil every 5 months, 10ml each time
Use 4-7 hours per week	Add lubricating oil every 2 months, 10ml each time
Use more than 7 hours per week	Add lubricating oil every month, 10ml each time
Reuse after one year of inactivity	Lubricating oil must be added once, 10ml

Adding lubricant Step

- ① Turn the treadmill to a low speed of 0.6MPH (UK/EUR: 1KM/H);
- ② Open the lid of the drip port and inject 5-10ml of lubricating oil;
- ③ Lightly step on the running belt on the front of the treadmill from left to right, then keep for about 8~10 minutes to make the silicone oil be completely absorbed by the running belt.

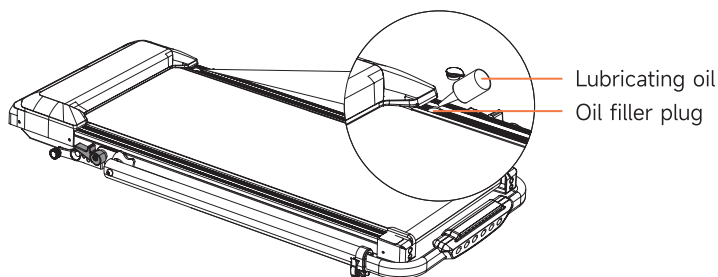

NOTE:



- Please use silicone oil not made of petroleum.
- Please do not over-lubricate to avoid insufficient friction between the running belt and the running platform.

7.4 Product Cleaning

- After using the product each time, please wipe the stains off the console, side strips and other parts with a clean cloth.
- If the product is used frequently, it can be wiped with a mild detergent.
- Open the motor protection cover at least once a year, vacuum the motor, and clean the running belt and lubricating silicone oil once to avoid dust accumulation affecting machine performance.

NOTE:



- When cleaning the treadmill, the power switch should be turned off and the power cord should be removed from the socket.
- Please do not use corrosive detergent to wipe.
- Please be careful not to splash water under the Bluetooth Speaker port and the running belt.

8. Specification Parameters

Brand	Acezo
Product	2 in 1 Foldable Treadmill with Incline
Model	P11 Pro
Rated Voltage	US: 110V~120V 60Hz UK/EU: 220~240V, 50/60Hz
Range of Speed	Treadmill Mode: 0.6-6.2MPH (UK/EU: 1-10KM/H) Walking Pad Mode: 0.6-4MPH (UK/EU: 1-6KM/H)
Folding Size	50.0*25*5.1 inches 127*64*13cm
Package Size	53.5*26.0*5.9 inches 136*66*15cm
Net / Gross Weight	N.W.: 25.9 KGS 57.1 LBS G.W.: 29.5 KGS 65.0 LBS
Control Method	Remote Control, APP Control, Panel Control
Running Mode	Free Run, Countdown Mode, P01-P12 Program
Incline Mode	Yes
Usage	Indoor

Parameter Display and Setting Range

	Display Range	Setting Range	Mode Default Value	Program Default Value
Speed	0.6-6.2 MPH (UK/EU: 1-10KM/H)	0.6-6.2 MPH (UK/EU: 1-10KM/H)	-	-
Time	0:00-99:99 Mins	8:00-99:00 Mins	30:00	30:00
Distance	0-99.9 MI/km	1-99.0 MI/km	1.00	-
Calories	0-999 kcal	20-990 kcal	50	-

9. Troubleshooting

Issue	Cause	Solution
No information is displayed on the screen	1. The power is not connected 2. The switch is not turned on 3. The safety key is not in the specified position	1. Connect the power cord correctly and turn on the power switch 2. Lock the safety key back into place
Power outage during use	1. The power is not connected 2. Motor failure	1. Check power cord is connected firmly 2. Contact After-sales Team
Running belt is not centered	1. Uneven ground 2. Due to the unbalanced force on the left and right, the running belt deviates	1. Put the machine on a flat ground for use 2. Refer to the adjustment of running belt, use the Allen Key to adjust the running belt
Running belt stuck or slipped	Running belt too tight/loose	Adjust the running belt to fit refer to the adjustment of running belt

Error Code

Code	Causes	Resolutions
E01	1. Poor contact of the communication line of the touch console 2. No signal output from the touch console or main control	Contact the after-sales team to rewire or replace the touch console
E02	1. Loose motor cable or defective motor 2. The voltage between the motor and the main control is abnormal	1. Open the motor cover and check whether the wiring is firm 2. Contact the after-sales team to replace the motor or main control
E03	The main control detects abnormal speed, and the PMW drive circuit failed	Contact the after-sales team to replace the main control
E04	1. The machine is overloaded, exceeding the rated voltage 2. Abnormal motor 3. Over-voltage function failure of main control	1. Use within the rated voltage range of 110-125V (UK/EU: 220-240V) 2. Contact the after-sales team to replace the motor or main control

Code	Causes	Resolutions
E05	1. Motor over-current protection 2. Abnormal motor assembly 3. Failure of current limiting system of main control	1. Check whether overweight running 2. Check whether there are foreign objects stuck in the running belt 3. Pull down the safety key or press the ON/OFF button to return to normal 4. Contact customer service for repair
E06	1. The power supply voltage is too low 2. Poor contact of main control	1. Please check whether the power cord is normal 2. Check if the input voltage is lower than 120V (UK/EU: 240V) 3. Remove the safety lock and placing it back in place 4. Contact the after-sales team to replace the main control
E07/---	1. The safety key is not put in place 2. Touch console safety key system failed	1. Check whether the safety key has magnetic force. Place the safety key in the designated position. 2. Check whether the socket of safety key on console is loose. If yes, contact the after-sales team to replace the console.
E08	Poor contact of the communication line between the upper panel and the lower panel	Contact the after-sales team to get support, which to check whether the communication line connecting the upper panel to the lower panel is loose or detached.

NOTE:



If the problem in your treadmill is not included in the above, while you are not sure how to solve it, please contact us (Email: support01@acezoe.us) timely and do not handle it by yourself.

10. Warranty

The 1-Year Limited Warranty

- Your ACEZOE machine has a 1-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the ACEZOE Instruction Manual.
- This warranty provides all parts necessary to ensure your machine is in proper operating condition during the warranty period for free.

WHAT IS COVERED?

- According to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.
- Only applies to purchases made from authorized retailers of ACEZOE.
- This warranty will only be valid if the machine is used in the country in which it was sold.
- Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

WHAT IS NOT COVERED?

ACEZOE shall not be liable for costs, damages or repairs incurred as a result of:

- Machines purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the ACEZOE Instruction Manual.
- The machines are used for commercial or rental purposes in addition to normal domestic use.
- Use of parts not in accordance with the ACEZOE Instruction Manual.
- Use of parts and accessories other than those produced or recommended by ACEZOE.
- External factors unrelated to product quality and use, like accidental water damage.
- Repairs or alterations carried out by unauthorized parties or agents.
- Damage caused by normal wear and tear, vandalism, accidents or by animals.
- Any act of Nature (such as fire, flooding, snow, ice, hurricanes, earthquakes, lightnings or other natural disasters), environmental conditions (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.).
- Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to among other things, flake, chalk, accumulate dirt or stains.
- Improper operation, alteration, handling, storage, abuse or neglect of the products.

HOW TO CLAIM?

Please keep your proof of purchase.

To make a claim under our Limited Warranty, or if there are any problems or malfunctions during use, or you still have any questions after reading this manual carefully, please feel free to contact us through email: ✉ support01@acezoe.us, we will try our best to provide you with a satisfactory solution.



You need to provide the following information:

- 1. Model**
- 2. Order Number**
- 3. Purchase Date**
- 4. Description of Issues (Adding photos or videos would be helpful)**

All work will be carried out by ACEZOE or its authorized agency. Any replaced defective parts will become the property of ACEZOE.

INHALT

1. Kundendienst Service	35
2. Wichtiger Sicherheitshinweis	36
2.1 Vorsichtsmaßnahmen vor der Verwendung	36
2.2 Vorsichtsmaßnahmen bei der Verwendung	36
2.3 Vorsichtsmaßnahmen bei Lagerung und Wartung	37
2.4 Vorsichtsmaßnahmen für Knopfzellenbatterien	37
3. Übersicht & Zubehör	38
3.1 Paketliste	38
3.2 Produktübersicht	39
3.3 Tastenkonsole	40
3.4 LED-Bildschirm	41
3.5 Fernbedienung	41
4. Montage & Zusammenklappen	43
4.1 Montage	43
4.2 Falten	45
5. Anwendung	47
5.1 Neigungseinstellung	48
5.2 Laufbandmodus	49
5.3 Walking-Pad-Modus	51
5.4 Schlafmodus	51
6. Verwendung mit der APP	52
6.1 APP-Download	52
6.2 Gerät anschließen und steuern	52
6.3 Funktionen	54
7. Wartung	55
7.1 Allgemeine Wartung	55
7.2 Laufbandeinstellung	55
7.3 Schmierung des Laufriemens	56
7.4 Produktreinigung	57
8. Spezifikationsparameter	58
9. Fehlerbehebung	59
10. Garantie	61

1. Kundendienst Service



Bitte zerlegen, reparieren oder senden Sie die Maschine nicht zurück, bevor Sie das Acezoe-Supportteam kontaktiert haben.

Bei beschädigten oder defekten Produkten, Fragen, Ersatzteilen oder sonstiger Serviceunterstützung wenden Sie sich bitte wie unten angegeben an unsere Kundendienstabteilung.



Senden Sie eine E-Mail an unseren Kundenservice, um weitere Hilfe zu erhalten:

 support01@acezoe.us



Acezoe ist gerne für Sie da. Wir melden uns innerhalb eines Werktages bei Ihnen.



Scannen Sie diesen QR-Code oder durchsuchen Sie die offizielle Website von Acezoe, um weitere Installationsanleitungen für das Produkt zu erhalten:

 www.acezoe.us



2. Wichtiger Sicherheitshinweis



ACHTUNG: Lesen Sie vor der Verwendung dieser Maschine alle Anweisungen im Handbuch und die Warnhinweise auf der Maschine sorgfältig durch.

2.1 Vorsichtsmaßnahmen vor der Verwendung

- Dieses Produkt funktioniert nur mit 220–240V Wechselspannung. Verwenden Sie unbedingt eine Steckdose mit Schutzerdung. Der Erdungsstecker muss gemäß den lokal vorgeschriebenen Parametern installiert und geerdet werden. Sollte der Stecker nicht in die Steckdose passen, wenden Sie sich bitte an einen qualifizierten Elektriker oder Kundendienstmitarbeiter.
- Achten Sie darauf, das Laufband nicht auf Gegenstände wie dicke Teppiche zu stellen, um die Luftzirkulation unter dem Laufband nicht zu beeinträchtigen. ⚠
- Sorgen Sie für eine gute Belüftung des Raumes, wenn Sie das Laufband benutzen.
- Nicht an Orten verwenden oder lagern, die direkter Sonneneinstrahlung oder hohen Temperaturen ausgesetzt sind, wie etwa in der Nähe von Öfen oder Heizgeräten wie Heizdecken, da dies zu Stromlecks oder Bränden führen kann. ⚠
- Nicht mit nassen Händen bedienen! Den Netzstecker nicht mit nassen Händen herausziehen oder einstecken um einen Stromschlag oder Verletzungen zu vermeiden. ⚠
- Verwenden Sie das Produkt nicht, wenn die Außenseite Risse aufweist, beschädigt ist oder sich ablöst (die innere Struktur freiliegt) oder wenn sich die Schweißnaht ablöst.
- Nicht verwenden, wenn das Netzkabel oder der Stecker beschädigt ist oder die Steckdosenbuchse locker ist , da dies zu einem Stromschlag, Kurzschluss oder Brand führen kann. ⚠

2.2 Vorsichtsmaßnahmen bei der Verwendung

- Bitte befestigen Sie den Safety Key - Kabelclip während des Trainings an Ihrem Kleidungsstück und ziehen Sie ihn ab, um das Laufband im Notfall sicher und schnell zu stoppen.
- Barfußtraining ist streng verboten. Bitte machen Sie vor dem Training Aufwärmübungen, um eine Überlastung des Körpers zu vermeiden.
- Bei Unwohlsein oder Auffälligkeiten während der Anwendung brechen Sie bitte das Training sofort ab und suchen Sie einen Arzt auf.
- Wenn Sie das Laufband zum ersten Mal verwenden, denken Sie daran, die Armlehnen mit den Händen festzuhalten und lassen Sie die Armlehnen erst los , wenn Sie sich wohl fühlen.
- Springen Sie während des Trainings nicht auf und ab, um Stürze und Verletzungen zu vermeiden .
- Um Unfälle zu vermeiden, lassen Sie Kinder nicht in die Nähe des Laufbands, wenn es in Betrieb ist . Achten Sie darauf, dass sich umstehende Personen während der Benutzung nicht in der Nähe des Laufbands aufhalten.
- Verwenden Sie dieses Gerät nicht gleichzeitig mit zwei oder mehr Personen , da dies zu Unfällen oder Sturzverletzungen führen kann.
- Personen, die behindert, geistig behindert oder nicht über den nötigen gesunden Menschenverstand verfügen, dürfen das Gerät nur unter Aufsicht und Anleitung von Personen benutzen, die für ihre Sicherheit verantwortlich sind. ⚠
- Minderjährige müssen bei der Benutzung des Laufbands von Erwachsenen begleitet werden.
- Vermeiden Sie einen längeren Überlastungsbetrieb. Es wird empfohlen , das Gerät nach 2 Stunden Dauerbetrieb auszuschalten und vor der Verwendung 10 Minuten ruhen zu lassen.
- Bitte schalten Sie den Netzschalter nach dem Training aus. Ziehen Sie den Netzstecker aus der Steckdose , wenn Sie das Gerät nicht benutzen um eine Verschlechterung der Isolierung durch Staub und Feuchtigkeit zu vermeiden, die zu Stromlecks und Bränden führen kann.

2.3 Vorsichtsmaßnahmen bei Lagerung und Wartung

- Bitte ziehen Sie unbedingt den Netzstecker des Laufbands, bevor Sie das Produkt reinigen, warten und bewegen. ⚠
- Öffnen Sie mindestens einmal im Jahr die Motorschutzabdeckung, um den Motor abzusaugen und zu reinigen.
- Geben Sie zur Wartung der Maschine alle 3 Monate 5–10 ml Schmieröl hinzu. Silikonöl muss außerhalb der Reichweite von Kindern aufbewahrt werden, um schwerwiegende Folgen durch versehentliches Verschlucken zu vermeiden.
- Lagern Sie das Laufband im Innenbereich, um Feuchtigkeit zu vermeiden, und legen Sie keine Fremdkörper hinein. Setzen Sie den Motor oder die Betriebsteile keinem Wasser oder anderen Flüssigkeiten aus, um Stromschläge oder Feuer zu vermeiden. ⚠
- Wenn bei dieser Maschine ein Problem auftritt, wenden Sie sich bitte an das ACEZOE-Supportteam. Um Geräteschäden zu vermeiden, sollten Laien nicht versuchen, die Maschine zu zerlegen oder zu reparieren.

2.4 Vorsichtsmaßnahmen für Knopfzellenbatterien


- Stellen Sie sicher, dass die Batterien entsprechend der Polarität (+ und -) richtig eingelegt sind.
- Mischen Sie keine alten und neuen Batterien bzw. Batterien unterschiedlicher Marken oder Typen, wie etwa Alkali-, Zink-Kohle- oder wiederaufladbare Batterien.
- Der kompatible Batterietyp ist CR2032.
- Die Nennspannung der Batterie beträgt 3 V.
- Entfernen Sie Batterien aus Geräten, die längere Zeit nicht verwendet wurden, und recyceln oder entsorgen Sie sie umgehend gemäß den örtlichen Vorschriften.
- Verschließen Sie das Batteriefach immer vollständig. Sollte das Batteriefach nicht sicher schließen, verwenden Sie das Produkt nicht weiter, entnehmen Sie die Batterien und bewahren Sie sie außerhalb der Reichweite von Kindern auf.
- Nicht wiederaufladbare Batterien dürfen nicht wiederaufgeladen werden.
- Das Entladen, Wiederaufladen, Zerlegen, Erhitzen über (vom Hersteller angegebene Temperatur) oder Verbrennen ist nicht gestattet. Andernfalls kann es zu Verletzungen durch Entlüftung, Leckagen oder Explosionen mit daraus resultierenden chemischen Verbrennungen kommen.
- Entnehmen Sie verbrauchte Batterien und entsorgen Sie sie umgehend gemäß den örtlichen Vorschriften. Bewahren Sie sie außerhalb der Reichweite von Kindern auf. Werfen Sie Batterien NICHT in den Hausmüll und verbrennen Sie sie nicht.
- Auch gebrauchte Batterien können schwere Verletzungen oder den Tod verursachen.
- Rufen Sie ein örtliches Giftinformationszentrum an, um Informationen zur Behandlung zu erhalten.

BEWAHREN SIE DIESE ANWEISUNGEN AUF

3. Übersicht & Zubehör

3.1 Paketliste

Produktzubehör

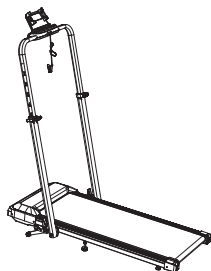

Tretmühle × 1

 


Kurzanleitung × 1




Bedienungsanleitung × 1

Werkzeugsatz



Sicherheitsschlüssel
× 1

 


Fernbedienung × 1



Batterie der
Fernbedienung × 2



 5 mm L-Typ
Innensechskantschlüssel
× 1



PAD-Halter × 1



Stromkabel × 1



Schmieren × 1