

说明书

材质：80g书纸 双面4C印刷 风琴5折，折成尺寸60*96mm

HIKER AUDIO




S1 USER MANUAL

Introduction

Thank you for choosing **HIKER AUDIO S1** Wireless headphones. Please read the manual carefully, and keep it for further reference.


Package Content

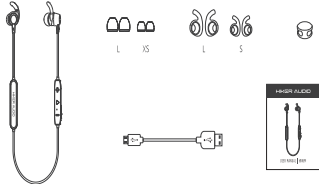

1

English

Product Diagram

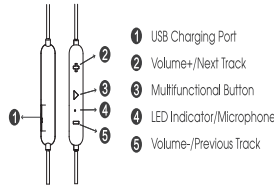

Specifications

Bluetooth Profile	BT5.0, HSP, HFP, A2DP, AVRCP
Bluetooth Chipset	QCC3034
Audio Codec	SBC, aptX HD
Play Time	Up to 13 hours (Varies by volume level and audio)
Charging Time	About 1.5 hours
Maximum Working Range	10m
Earbud Dimension (L * W * H)	7.65 x 20 x 26 mm
Earbud Weight	17g

2

Button Control

Power On	Press and hold the Multifunctional Button for 3s until the led light flashes blue
Power Off	Press and hold the Multifunctional Button for 3s until the led light flashes red
Play / Pause	Short press the Multifunctional button
Volume +/-	Short press the +/- button
Play/Next/Previous	Long press the +/- button for 2 seconds
Answer Phone Call	Short press the Multifunctional Button
Hang Up	Short press the Multifunctional Button in an active call
Reject Phone Call	Press the Multifunctional button for 1.5s
Mute / Resume A Call	Double tap the MFB during a call
Transfer Between Headset and Phone	Press the Multifunction button for 1.5s during a call
Activate Voice Assistant	Double press the Multifunctional button while in playing or pausing mode
Factory Reset	Press the Multifunction button for 3s when the headset is charging

3

LED Indicators

Status	Earbuds LED Indicator
Charging	LED indicator's solid red
Fully charged	LED indicator's solid blue
Low battery	LED indicator flashes red once every 6 seconds
Reset	LED indicator flashes blue twice quickly

Wearing



1. Identify the right and left earpieces.

2. Insert the earbuds into your ears. Adjust the ear fins direction and put them into your ears.

3. Adjust each earpiece until it fits flush in your ear and the ear tip seals in the ear canal.

4

LED Indicators

2. Activate the Bluetooth on your device and search for the nearby Bluetooth connection:
For iPhone/iPad/iPod®: Settings -> Bluetooth -> On
For Android™: Setting -> Wireless & Networks -> Bluetooth -> On -> Scan for devices

3. "HIKER AUDIO S1" should be listed in the search result. Select the name to connect. Once connected, the indicator will be solid blue. You will hear a voice prompt "Your headset is connected".

Notes:

1. When you want to unpair the headset with the device, just press the volume buttons + and - simultaneously for about 3s.

2. The HK Z15 headset will stay in pairing mode for 3 minutes at most if no pairing device is found. Afterwards, it will power off automatically.

Charging

1. Connect the charging port with any USB charging adapter or charging port available. Charging starts automatically with LED indicator turning red and the headset turns off.

2. The headset is fully charged when the LED indicator turns blue.

Name and Content of Hazardous Substance

Component	Hazardous Substance					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Circuit board	○	○	○	○	○	○
Structural member	○	○	○	○	○	○
Loudspeakers	○	○	○	○	○	○
Wire rod	○	○	○	○	○	○

This chart is prepared in accordance to the provisions prescribed in SJ/T 11364.

○: Denotes the hazardous substance content in all homogenous materials used in this component is below the limit as stipulated in GB/T 26572-2011.

×: Denotes the hazardous substance content in at least one of the homogenous materials used in this component exceeds the limit as stipulated in GB/T 26572-2011; however, due to no viable alternative solution in the industry currently, it still conforms to the environmental requirements of the EU directive RoHS.

5

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.