

## Print Production


Rest of the colors are CMYK



## Printer Notes

- White Matte Coated Cardstock
- Bleed
- Double sided
- Accordion Fold

= Indicates fold

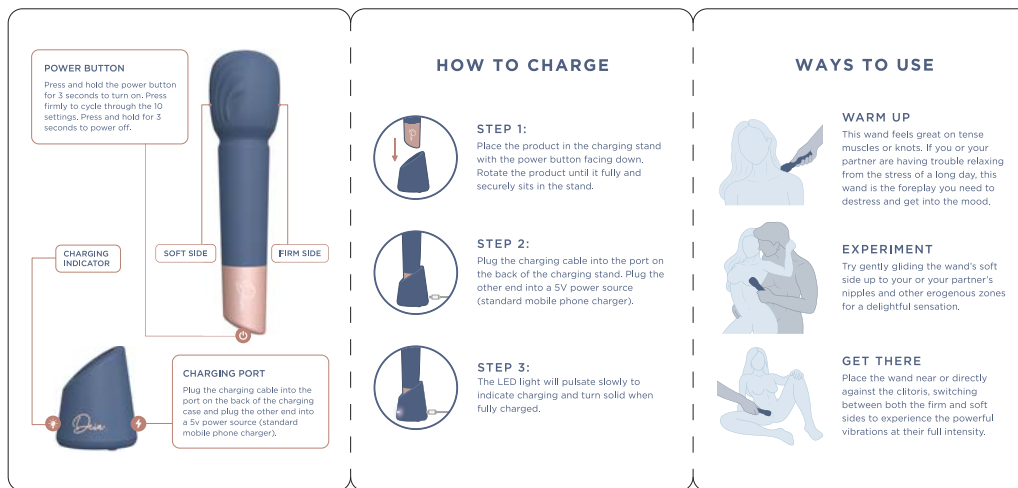

BACK

**CLEANING:**  
Be sure to clean thoroughly before and after each use.  
Clean using mild soap and warm water.

**STORAGE:**

Store in a cool, dry place separately from other sexual wellness devices; devices of different material can damage each other if left in contact.

QUALITY:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex. Use water-based lubricant only.

### CHARGING:

Do not turn on while charging and/or cleaning. While charging, the LED light on the charging stand will pulsate slowly and turn solid when fully charged. Use only with 5-volt USB wall adapter (standard mobile phone charger). Low battery alert: Light on device flashes rapidly when battery is running low. Allow 150 minutes for a full charge. Total usage time from full battery on highest setting is 90 minutes.

WARNINGS:

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging.

**WATERPROOF:**

The wand is waterproof to IPX7 standards and can be submerged in the bath or shower. Do not expose the charging stand to water.

## WAYS TO USE

## WARM UP

This wand feels great on tense muscles or knots. If you or your partner are having trouble relaxing from the stress of a long day, this wand is the foreplay you need to destress and get into the mood.

## EXPERIMENT

Try gently gliding the wand's soft side up to your or your partner's nipples and other erogenous zones for a delightful sensation.

## GET THERE

Place the wand near or directly against the clitoris, switching between both the firm and soft sides to experience the powerful vibrations at their full intensity.



KNOW A HIGHER LOVE



THE WAND  
BODY-FORMING MASSAGER

INSTRUCTION MANUAL

INSIDE

OUTSIDE

FRONT