


Thank you for purchasing the Vivitar Walkie Talkie, items HD35WT-BLU-TA and HD35WT-PNK-TA.
For best results, read this manual before using your product.

Contents

- Two Walkie Talkies
- 12 AG10(1.5V) Batteries
- Instruction Manual With Warranty Information

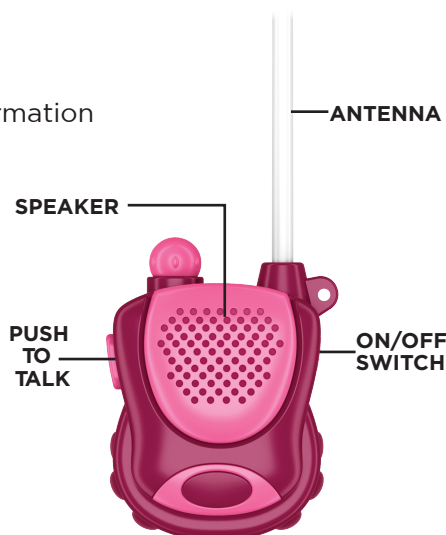

Inserting Batteries

Each walkie talkie requires 6 AG10(1.5V) button cell batteries for power. To insert or replace batteries, use a screwdriver to remove the screws on the battery compartment door. Note that the battery compartment is located on the rear of each walkie talkie. Once the battery compartment is open, insert batteries with the correct polarity (+,-) as displayed in the battery compartment.

NOTE: Button Cell batteries may come with insulating strips. Remove these strips before inserting the batteries.

Once the batteries have been inserted, close the battery compartment, and once again use a screwdriver to screw the battery compartment door in place.

Using Your Walkie Talkies

Once batteries are inserted you can follow the steps below to use your walkie talkies:

1. Slide the ON/OFF Switch on each walkie talkie to the ON position.
2. Hold one walkie talkie close to your mouth.
3. Press the PUSH TO TALK button, and speak clearly to transmit a message to the other walkie talkie.
4. Release the PUSH TO TALK button when you are finished talking so that you can hear any incoming messages from the other walkie talkie.
5. When you are finished using your walkie talkies, make sure the ON/OFF Switch is in the OFF position.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal **Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Safety Precautions

When using your Walkie Talkie, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR WALKIE TALKIES.
2. Your product is not to be used by children or the infirm without suitable adult supervision.
3. Never expose your product to high temperatures, extreme cold, high humidity or excessive moisture or water. Keep out of direct sunlight.
4. Always press all buttons carefully. Do not manhandle your product.
5. Do not drop your product, throw it, or subject it to strong impacts or physical trauma.
6. Do not attempt to repair this product yourself. Contact a qualified service center if the product needs service.
7. If you detect any abnormalities when using your product, contact the manufacturer for support.
8. Caution: Discontinue use if you detect smoke, fire, or excessive heat.
9. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
10. Even used batteries may cause severe injury or death.
11. Call a local poison control center for treatment information.
12. Non-rechargeable batteries are not to be recharged.
13. Do not force discharge, recharge, disassemble, heat above 60°C (140°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
14. Ensure the batteries are installed correctly according to polarity (+ and -).
15. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
16. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
17. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
18. Please recycle or dispose of your product properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of for further information.
19. Clean your product using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your product.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

WARNING:

CHOKING HAZARD

This article contains small parts which pose a hazard to children under 3 years.

Warranty

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai red.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in the portable exposure condition without restriction.