



Model# UOS008A,UOS0008A--FBS26

User Manual

Snoop on a Stoop Karaoke Mic

Package Includes

- 1 x Wireless Karaoke Microphone
- 1 x Type-C Charging Cable
- 1 x User Manual

Safety Instructions

- Do not attempt to repair or disassemble the product yourself, as this may cause electric shock, fire, or damage to the product.
- Keep away from high temperatures.
- Do not expose the product to direct sunlight for extended periods.
- Do not use the device in humid or wet environments.
- Keep the product away from dust and dirt.
- Avoid improper operation, as it may cause malfunction, impact damage, or other accidents.
- The device may become warm during operation.
- When not in use, please turn off the device and unplug the power source.
- Ensure proper ventilation while charging.
- Do not press buttons with excessive force to avoid damage.
- Use only according to the instructions in this manual.
- Do not attempt to repair the product yourself. Please contact qualified service personnel if repairs are needed. Improper repairs may result in electric shock.
- Keep the product dry at all times.
- Do not insert foreign objects into the product.
- Avoid dropping the product, as strong impact may damage it.

Bluetooth Pairing

1. Place the speaker within 30 feet (10 meters) of the device.
2. Press the power button to turn on the Microphone.
3. Open the Bluetooth settings on your phone, tablet, or media device and search for new devices.
4. Select the Bluetooth device name: **UOS008A**
5. Once paired successfully, the blue LED indicator will stop flashing and remain solid.

TWS Function


When two Karaoke Microphone are powered on, the blue indicator lights will begin flashing.

Press the "ON/OFF" button on one of theMicrophone. Once successfully connected, the blue indicator lights will stop flashing, indicating that the twoMicrophones are paired together.

Specifications

- * Input Voltage: 5V
- * Speaker Output: 3W
- * Charging Time: Approx. 2-4 hours
- * Standby Time: Up to 100 hours
- * Working Distance: 33 ft (10 m)
- * Battery type: IMR18650-800mAh, voltage: 2.96V
- * Frequency bands used by the FM function of the radio equipment: 87.5 MHz - 108.0 MHz

Product Functions

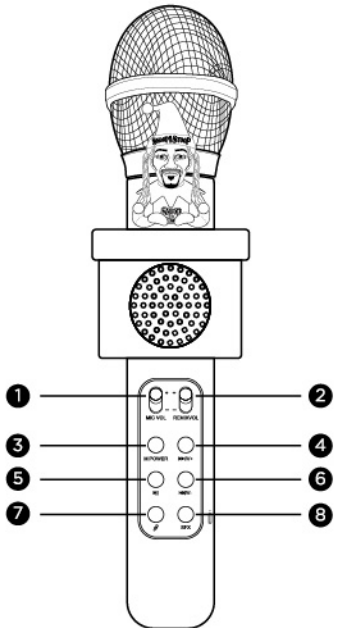

Button Functions

① Microphone Volume	Slide upward to increase microphone volume, Slide downward to decrease microphone volume
② Echo Adjustment	Slide upward to increase echo effect, Slide downward to decrease echo effect
③ Power Button	Short press: switch modes (Bluetooth) Long press: power ON/OFF
④ Next Song / Volume Up	Short press: next track Long press: increase volume
⑤ Play / Pause	Short press to play or pause music
⑥ Previous Song/ Volume Down	Short press: previous track Long press: decrease volume
⑦ Vocal Reduction	Short press to reduce original vocals and enhance microphone vocals
⑧ Voice Changer	Short press to switch voice effects 4 voice changing effects available

Charging Instructions

Connect the included USB Type-C charging cable to the charging port on the microphone handle.

During charging, the LED indicator will turn red.

FCC ID: 2A2WN-SCYX06
FRN: 0031270333

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Questions? Comments?
Contact: contact@culturefly.com



THIS IS A BATTERY-OPERATED PRODUCT. THIS IS NOT A TOY. INTENDED USE OF THE PRODUCT SHOULD NOT RESULT IN EXPOSURE TO THE BATTERY. In case of rupture, the below hazards exist. Harmful if swallowed. Causes skin irritation. Causes eye irritation. May cause respiratory irritation.

Proper Handling:

Do not open, disassemble, crush, or burn battery. Do not handle battery in a manner that allows terminal to short circuit. Avoid mechanical damage of the battery. Battery may explode or cause burns, if disassembled, crushed, or exposed to fire or high temperature. Do not short or install with incorrect polarity. Avoid all personal contact, including inhalation. Wear protective clothing when risk of exposure occurs. Use in a well-ventilated area. Prevent concentration in hollows and sumps.

Proper Storage:

Store in a cool, dry, well-ventilated area. Keep away from heat and direct sunlight.

Disposal considerations:

Recycle in accordance with government, state and local regulations, to ensure proper disposal.

If exposed to the battery - potential health effect and first aid measures:

After eye contact:

Flush eyes cautiously with plenty of water for several minutes while holding eyelids open. Remove contact lenses, if present and easy to do. Continue rinsing. Get medical attention if irritation persists.

After skin contact:

Remove contaminated clothing and shoes. Immediately wash with water and soap and rinse thoroughly. Wash clothing and shoes before reuse. If irritation occurs, get medical attention.

After inhalation:

Remove person to fresh air and keep comfortable for breathing. Administer artificial respiration if breathing is difficult. Seek medical attention.

After swallowing:

Rinse mouth with water. Do not induce vomiting. Get medical attention.



Battery may burst and release hazardous decomposition products when exposed to a fire situation. Lithium-Ion batteries contain flammable electrolyte that may vent, ignite, and product sparks when subjected to high temperature (>65°C) (>150°F), when damaged or abused (e.g. mechanical damage or electrical overcharging), may burn rapidly with flare-burning effect, may ignite other batteries in close proximity.

Special protective actions for firefighters: Wear positive pressure self-contained breathing apparatus (SCBA). Structural firefighters' protective clothing will only provide limited protection. Eliminate all ignition sources (no smoking, ares, sparks, or flames in immediate area). Do not touch or walk through spilled material. Absorb with earth, sand, or other non-combustible materials. Leaking batteries and contaminated absorbent material should be placed in metal containers. Suitable fire-extinguishing media: Small fire: dry chemical, CO2, water spray, or regular foam. Large fire: water spray, fog, or regular foam.