

front

100 mm


70 mm

User Manual

Thank you for purchasing the Snow Water Speaker.
This manual provides more information about this Bluetooth speaker. Please read the instructions before using.



Product Overview

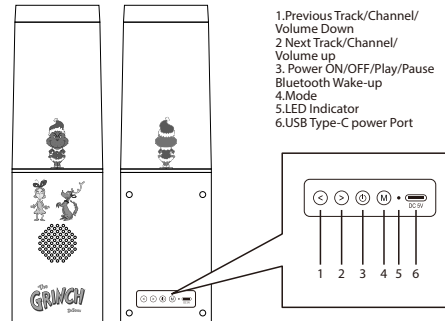

Package Contents


- 1(One) Grinch Snow Water Speaker
- 1(One) Instruction Manual
- 1(One) Pack Decorative Fake Snow Pellets

Specification

MATERIAL: PC+ABS
COLOR: BLACK/RED/ETC.
Input: 5.0V~2.0A
Speaker: 4Ω, 3W
Product size: 40*11*11CM

CAUTION: The USB Type-C power cable included with this item is intended for use with this product. Only use the included USB Type-C power cable to operate this product.

Installation

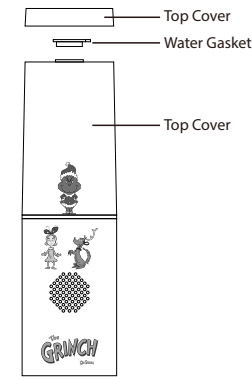

- 1.Remove the TOP Cover and Water Resist Plug
- 2.Fill up the water tank with distilled water to 80% full (It is recommended to use distilled or filtered water, instead of tap water.) (mixed with 2% dish soap will increase the smoothness of the snow effect)
- 3.Install the Water Resist Plug and Top cover, dry the surface of the speaker.
- 4.Run the speaker for 3-5 minutes to release the air bubbles from the water pump. (refer to "Power On/Off" section)
- 5.Remove the USB power Cable and pour the Decorative Fake Snow Pellets Beads to the Water Tank.
- 6.Fill up the water tank if needed.
- 7.Install the Water Resist Plug and Top Cover, dry the surface of the speaker.
8. Change water occasionally when dirty.

Warning

Do not immerse the speaker in water.
Completely dry the speaker's surface before plugging in the USB Power Cable.
Do not operate the speaker when there is any water leakage.
If the product is accidentally knocked over, immediately unplug the power source and return it to an upright position before plugging back in.

Before long-term storage or prolonged disuse, ensure all residual water inside the speaker is fully drained and thoroughly air-dried. Close the water valve and top cover, then store the product in a dry and dark place to prevent bacterial growth and mildew formation.

The unit is equipped with an automatic motor protection function. After 5 hours of continuous operation, the motor stops for approximately 3 minutes and then automatically resumes operation.

Power On/Off

Power on

Connect the Snow Water Speaker to a 5V/2A USB Adapter (not included) with supplied USB Type-C Power Cable.
Press and hold the ON/OFF switch for 3 seconds to power ON.

Power off

Press and hold for 3 seconds to power OFF.

Note: If the Bluetooth function is in sleep mode, the Power off will not function.

Bluetooth Speaker Mode

Play/Pause: Short press the ON/OFF Button once.

Next Track: Long press the ">" Button

Previous Track: Long press the "<" Button

Volume Up: Short press the ">" Button

Volume Down: Short press the "<" Button

The Bluetooth function will automatically go into sleep mode if it is not connected for 5 minutes. Press the ON/OFF button once to wake up the Bluetooth function.

P1

P2

P3

P4

back

Pair Bluetooth Speaker With Your Mobile Device

1. Keep the distance between your Bluetooth speaker and mobile phone (or other Bluetooth devices) within 32 Feet.
2. Power on the Bluetooth speaker.
3. Activate the Bluetooth function on your phone within range and select "SP-0771 SPK" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Bluetooth Speaker to Your Mobile Device

When powered on, the Bluetooth speaker will automatically connect with the last successfully paired device.

True Wireless Stereo (TWS) Mode

NOTE:

Please purchase two pieces of Snow Water Speakers to perform TWS Mode.

- 1.Turn On both Bluetooth speakers.
- 2.Disconnect both Bluetooth speakers from any Bluetooth device.
- 3.Keep both Bluetooth speakers side by side.
- 4.Double press the "M"Button on ONE of the Bluetooth speakers.
- 5.The Bluetooth speakers will connect with the other Bluetooth speaker in few seconds.When successfully connected, both Bluetooth speaker will have another alert sound.
- 6.Now you can follow the "Pair Bluetooth speaker with your mobile device" to pair with the mobile device.
- 7.To disable the TWS mode, power off and on both Bluetooth speakers, Or, double press the "M" Button on ONE of the Bluetooth speakers. An alert sound will play and the speakers will disconnect.

• If the Bluetooth speaker cannot be paired with your device,please try the following:
Ensure the speaker is in pairing mode or reconnection mode.
Ensure that Bluetooth search function of your mobile device is activated.

• If the Bluetooth speaker cannot be powered on:
Ensure that the power adapter is connected securely and the outlet works.

Safety Instructions

- The input voltage of the product is DC 5V 2A.
- In order to operate the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adaptor for operating the product.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using the product.

RF warning statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Questions? Comments?
Contact: contact@culturefly.com
FCC ID: 2A2WN-SCYX07



P5

P6

P7

P8