


INSTRUCTION MANUAL



I . Product Introduction


1. Packing List

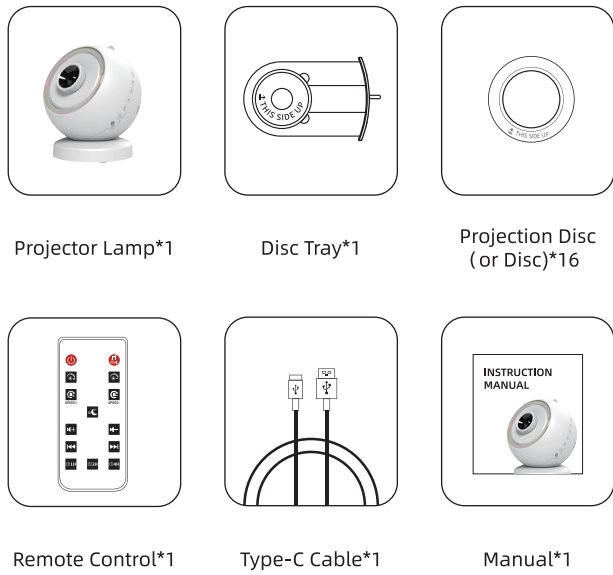


1

2.Projection Disc Replacement Steps

Step 1:
Pull out the Disc Tray from the Projector Lamp.

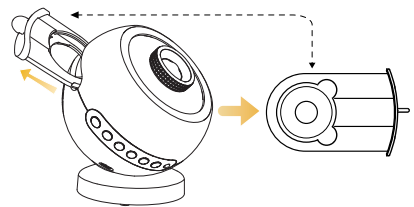


Step 2:
Insert the Projection Disc into the Disc Tray.
Make sure the side labeled **"2. THIS SIDE UP"** faces upward.
If you are replacing a Disc, remove the existing Disc first.

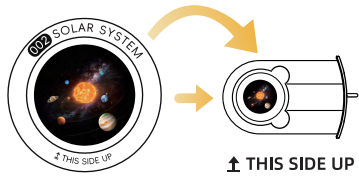


2

Step 3:
Reinsert the Disc Tray into the Projector Lamp until it clicks into place.

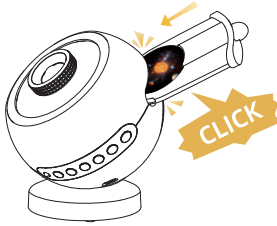


3.Focus Adjustment Knob

Slowly turn this Knob clockwise or counterclockwise until the focus of the projection becomes more and more vivid.

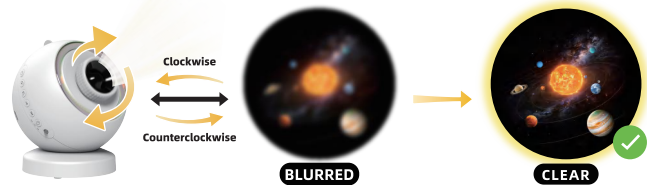

3


4.Overview of Buttons on the Product

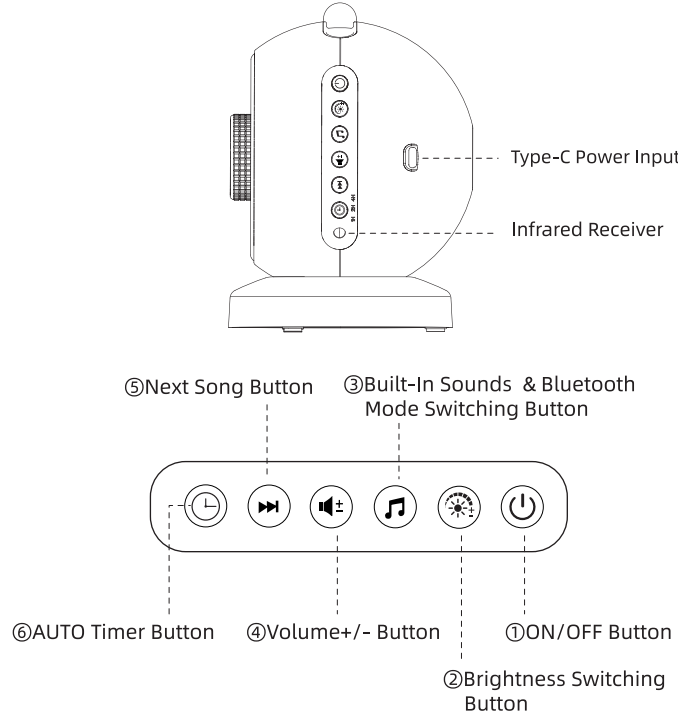

4

II . Instructions for Use

1. Adjusting the Projection Direction

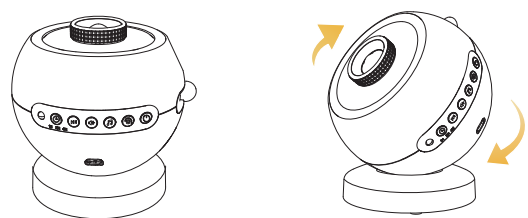

Project onto the ceiling:
Place the Projector on the Adjustable Base flat.

Project onto a wall:
Tilt the Projector on the Adjustable Base.
The projection angle can be adjusted up to 360°.

2. Button Instructions

① ON/OFF Button:
Short press to turn on/off the Product.

Note: For prolonging the Product's lifespan, after 4 hours of continuous use, the Product will enter auto-sleeping mode. Please press ON/OFF Button to restart it.

② Brightness Switching Button:
Short press to switch the brightness cycle from low → high → low.

5

③ Built-In Sounds Mode & Bluetooth Mode Switching Button:
Short press to switch between Built-in Sounds Mode and Bluetooth Mode.
When the Bluetooth Mode is turned on, you can search for the bluetooth name "WH-E32", connect to it to play the music in your cell phone via bluetooth.

④ Volume+/- Button:
Short press to adjust volume from low → high → low again in cycle. When the volume reaches maximum, there will be a notification tone.


⑤ Next Song Button:
Short press to switch to the next song.
NOTE:
If you want to turn off the music, please press the [] button on the Product to enter the Bluetooth Mode.

⑥ AUTO Timer Button:
Short press to set the auto shut-off timer in sequence: 1 hour, 2 hours, or 4 hours. The corresponding timer indicator light will illuminate when activated.

NOTE:
To prolong the Product's lifespan, a 4-hour auto shut-off timer is enabled by default each time the Product is turned on and cannot be canceled.
If you want to continue using the Product after it turns off, simply turn it on again.

6

3. Remote Control Instructions

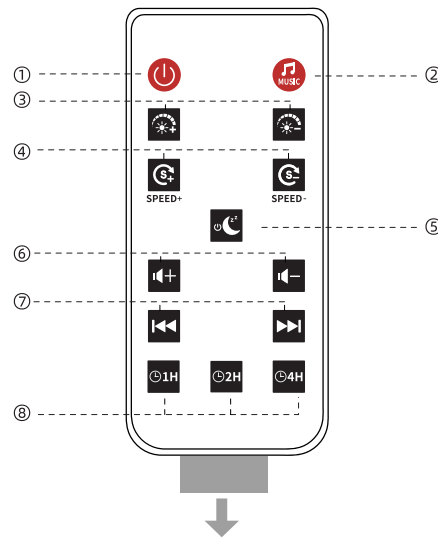

Remote Control Notes:
-Please pull out the insulating strip at the bottom of the remote control before first use.
-When using the remote control, make sure it points to the infrared receiver of the Projector Lamp body, and keep the distance within 3 meters.

7

	① ON/OFF Button
	② Built-In Sounds Mode & Bluetooth Mode Switching Button: Short press to switch between Built-In Sounds Mode and Bluetooth Mode.
	③ Brightness Adjustment Button: Short press to increase or decrease the brightness .
	④ Projection Rotation Speeds Adjustment Button: Short press to increase or decrease the rotation speed (there are 5 rotation speed levels).
	⑤ Sleeping Mode On/Off Button : Short press to turn on/off the Sleeping Mode. After the Sleeping Mode is activated, the brightness and rotation speeds of the Product as well as the music volume will automatically switch to low levels.
	⑥ Volume +/-
	⑦ Previous/Next Music
	⑧ AUTO Timer Buttons: Turn on 1/2/4H auto timer function on corresponding button, the Product will be turned off automatically after 1/2/4H hrs.

8

4. Plug-in Instructions

① The product does not have a built-in rechargeable battery and needs to be plugged in to power supply for use. It needs to be connected to a suitable adapter which is plugged in to power supply. Please do not place it in a high-temperature environment.
② Please use an adapter with an output voltage of 5V/2A.

Notes: For prolonging the Product's lifespan, after 4 hours of continuous use, the Product will enter auto-sleeping mode, please press the ON/OFF Button to restart it.


III. Parameter Information

Product Name	Space Star Galaxy Projector 3.9 UHD
Product Model	WH-E32
Input	5V = 2A
Rated Power	10W MAX
Product Specification	Plug-in & Remote Model

9

IV.Warnings

1. Please DO NOT dismantle, crash, squeeze the Product;
2.Please DO NOT use the Product in humid and high-temperature environments;
3.The light source of the Product cannot be replaced. When the light source expires, please replace the whole Product;
4. When the Product is not used for a long time, please cut off the power supply;
5. When the Product is in normal use, do not place it on an inclined surface greater than 6°;
6. Please use an adapter with compliance certification;
7. Children under the age of 14 need to be used under the supervision of an adult.

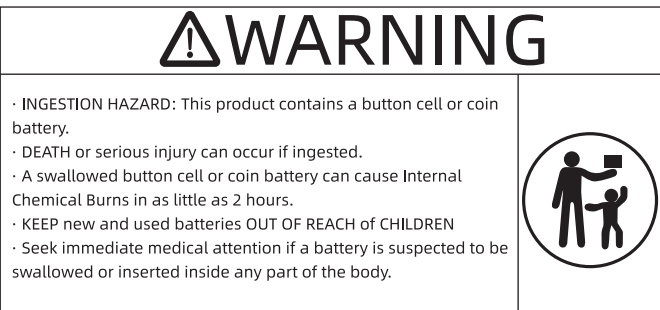

Battery warning:

a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
b) Even used batteries may cause severe injury or death.
c) Call a local poison control center for treatment information.

10

d) A statement indicating the compatible battery type (CR2025).
e) A statement indicating the nominal battery voltage 3V.
f) Non-rechargeable batteries are not to be recharged.
g) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
h) Ensure the batteries are installed correctly according to polarity (+ and -).
i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC warning:

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

11

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum of 20cm separation between antenna and body.

FAQ:

1. Why does the image look blurry?

Use the Projector Lamp in a dark or dim room and slowly turn the focus adjustment knob. After changing the Projection Disc, refocus until the center of the image appears sharp.

2. Do I need to adjust focus after changing the Projection Disc?

Yes. Different Projection Discs may vary slightly. Turn the knob slowly until the image becomes clear again.

3. Why does the image look distorted or uneven?

Place the Projector Lamp on a flat surface and aim it directly at a wall or ceiling. If the angle is too tilted, the image may appear distorted. Adjust the position or angle until the image looks normal.

4. Why is the image hard to see in a bright room?

This product works best in a dark environment. Bright room light or sunlight can make the image appear faint or unclear.

5. Why does the projector make a noise during use?

A small cooling fan is built in for heat dissipation, especially at higher brightness levels. A light fan noise is normal during operation. For a more comfortable experience, place the Projector Lamp slightly away from your bed.

12



Made in China