

极光氛围K歌音箱+双麦款-美欧规版

尺寸：90*150mm

材质：105g双铜纸/风琴折页/双面印刷

INSTRUCTION MANUAL

 
Product specification
Read the instructions carefully before using the product and keep them properly.



I . Product Introduction


1. Packing List:

**Bluetooth Speaker*1**

**Type-C Cable*1**

**Manual*1**

2. Product Buttons Overview

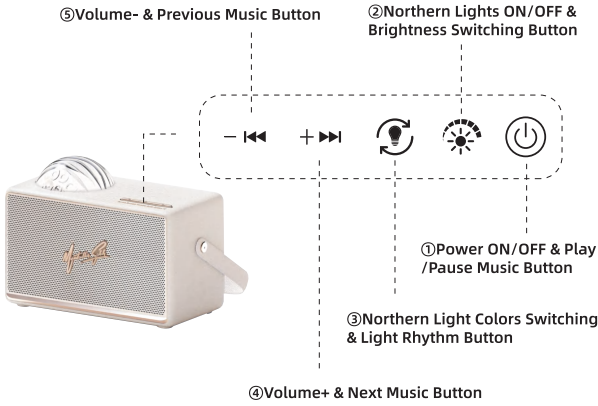

③Volume- & Previous Music Button ②Northern Lights ON/OFF & Brightness Switching Button

①Power ON/OFF & Play /Pause Music Button

③Northern Light Colors Switching & Light Rhythm Button

③Volume+ & Next Music Button

II . Direction For Use

1.Buttons Instruction



①Power ON/OFF & Play/Pause Music Button
(a)**Turn on/off:** Press and hold for 2-3 seconds to turn on/off.

NOTE: When the Product is turned on, the bluetooth is also automatically turned on. You can search for the bluetooth name "WH-J17", and connect to it to play the music in your cell phone via bluetooth.

(b)**Play/Pause Music**
In the state of playing music, short press the button to play/pause the song.

NOTE: The Light of Product will be turned off automatically after a continual work of 8 hours in order to prolong the life of lamp beads.



②Lighting ON/OFF & Brightness Adjustment Button
(a) **Lighting ON/OFF:** Short press to turn on/off the Northern Lights.

(b) **Brightness Adjustment:** Long press this button to adjust the brightness of northern lights from low → high→ low again in cycle. (When the brightness reaches the highest/lowest level, the northern lights will flash twice as a note)

2. Microphone Instruction



⑥ON/OFF Button

⑦Volume+ & Next Music Button

⑧Volume- & Previous Music Button

⑨Sound Effect Mode & Play/Pause Music Button

⑩Mic Indicator



⑥ON/OFF Button
Long press: Long press for 2-3 seconds to turn on/off the microphone.
Double-click: Quickly double-click to enter the reverb/accompaniment volume adjustment mode/Microphone volume adjustment mode.
Short press: Short press to turn on/off vocal cancellation.

+

⑦Volume+ & Next Music Button
(a)**Short press:** Short press this button to increase the volume of the microphone,When the volume reaches the maximum, there will be a notification tone.
(b)**Long press:** When playing music, Press and hold for 2-3 seconds to play next song.

-

⑧Volume- & Previous Music Button
(a)**Short press:** Short press this button to lower the volume of the microphone, When the volume reaches the lowest, there will be a notification tone.
(b)**Long press:** When playing music, Press and hold for 2-3 seconds to previous song.



⑨Sound Effect Mode & Play/Pause Music Button
(a)**Short press:** Microphone sound mode switching (karaoke mode → professional mode → female to male voice → male to female voice → doll sound → Warcraft sound)
(b)**Double-click:** When playing music, Quickly double-click to play/pause the song.



⑩Mic Indicator
(a)The red light flashes when charging.
(b)The green light is always on when fully charged.
(c)The blue light flashes when the microphone is not. connected to the Bluetooth Speaker.
(d)The blue light is always on when the microphone is successfully connected to the Bluetooth Speaker.

3. Frequently asked questions

1.Bluetooth can't be paired
(a)Distant Bluetooth connection, Try to adjust the distance between the Bluetooth Speaker and the mobile phone.
(b)The Bluetooth Speaker has been paired with other mobile phones: first turn off the Bluetooth of other mobile phones, then restart the Bluetooth Speaker and try to pair with the mobile phone again.

2.The microphone produces no sound
(a)Try to fully charge the microphone before using it.
(b)Try to turn up the volume of the microphone and try again.
(c)Try to restart the Bluetooth Speaker and microphone and try again.

3.The speaker produces no sound during playback
(a)Check whether the Bluetooth connection is successful.
(b)Check whether the volume of the mobile phone has been turned up.
(c)Short press[+]of the Bluetooth Speaker to trun up speaker's volume.

4.Presence of noise
(a)Environmental noise and mobile phone signal interference, adjust the distance between the Bluetooth Speaker and the mobile phone.
(b)Adjust the distance between the Bluetooth Speaker and the microphone.

4. Plug in Instruction

①Please fully charge the Product before first use;
②Please DO NOT dismantle,crash,squeeze the Product, or throw the Product into fire. if there is severe swelling and heat, please do not continue to use it;do not place it in a high temperature environment;
③Please connect the Product to a suitable adaptor(5V/2A), power bank, or laptop for power supply;
④The charging time depends on the power supply device;
⑤The charging indicator lights up in red when charging and lights up in green when fully charged.

III. Parameter Information

Product Name	Northern Lights Projector & Karaoke Machine
Product Model	WH-J17
Product Size	189mm*94mm*129mm
Input	5V --- 2A
Rated Power	10W MAX

IV.Warning

1. Please DO NOT dismantle, crash, squeeze the product;
2.Please DO NOT use the product in humid and high-temperature environments;
3. The light source of the Product cannot be replaced. When the light source expires, please replace the whole Product;
4. Please cut off the power when the Product is not used for a long time. It is recommended to charge the Product every 30 days to prevent shortening of the life of the lithium battery;
5. When the product is in normal use, do not place it on an inclined surface greater than 6°;
6. Please use an adapter with compliance certification;
7. Children under the age of 14 need to be used under the supervision of an adult;
8. Use separate collection facilities for electrical appliances that do not dispose of unsorted municipal waste. Contact your local government for information about the collection system. If electrical appliances are discarded in landfills or dumps, hazardous substances can seep into groundwater, enter the food chain, and damage your health and well-being.

FCC warning:

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for

a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment.
The device shall be operated and installed without restriction.



FR
Cet appareil, ses accessoires, cordons et batteries se recyclent

À DÉPOSER EN MAGASIN

À DÉPOSER EN DÉCHÈTERIE

OU

Points de collecte sur www.quefairedelesdechets.
Privilégiez la réparation ou le don de votre appareil



FR
ÉLÉMENTS D'EMBALLAGE À SÉPARER ET À DÉPOSER DANS LE BAC DE TRI

BAC DE TRI



Made in China