 


BOOMCARD

Quick guide

Open or download the free Apple Find My app from the App Store.



Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Apple

1. Press and hold for 3 seconds to switch on.
2. Open the Apple Find My App.
3. Tap Add Item.
4. Tap Other Supported Item.
5. BOOMCARD universal will appear. Tap Connect.
6. You are now connected.

To Disconnect:

 
1. Open the app and select the item.
2. Scroll to the bottom of the screen.
3. Tap Remove Item and then tap Remove to confirm.

To Factory Reset :

1. Press the button 4 times.
2. Wait for the beeps, then immediately Press & hold the button for 8 seconds.

To Power off/Disable:

Press 5 times quickly.

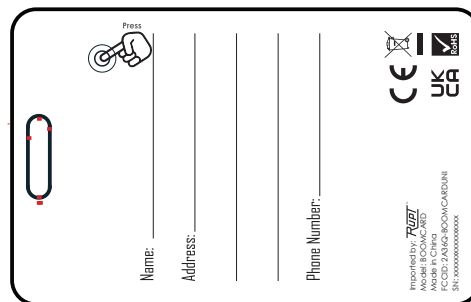

Android

1. Press and hold for 3 seconds to switch on.
2. Turn on your Android phone's screen.
3. You will receive a quick pairing notification on your phone prompting you to set up a new device named BOOMCARD, along with a picture of the device.
4. Follow the on-screen instructions to complete the pairing process.

To Disconnect the Device:

1. Open the app and tap on the item.
2. Tap the settings icon on the right of the item.
3. Tap "Remove from Find My Device" to disconnect.

To Factory Reset :

 
1. Press the button 4 times.
2. Wait for the beeps, then immediately press & hold the button for 8 seconds.

To Power Off/Disable: Press 5 times, beeps will sound.



charging:

Place on wireless charging point with the logo facing down, as shown below.

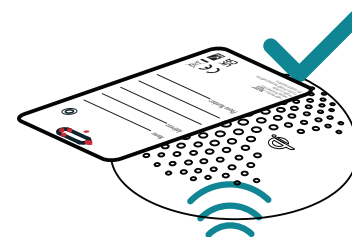

LED



 
charging

NO LED



fully charged

NOT THIS WAY

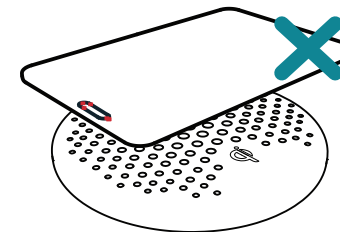

battery capacity: 3.7V 150mah.
charge time: 1.5 hours.
waterproof: IPX7,
built in buzzer: 94 db sound.
working time: depending on buzzer useage 6 months per charge.

FCC Caution:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.