


AGM BUDS 9

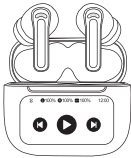

User Manual

Please read it carefully before use

Specifications:

Operation Frequency	2.402-2.480 GHz
Max RF output power(CIS)	BT: 6.00 dBm
Max RF output power(CIS)	BT: 4.10 dBm
BT Range	33 feet without obstacle
Support Profile	10P/PP/PS/SP/AVRCP
Earbud Battery	3.7V 40mAh
Charging Case Battery	3.7V 350mAh
Microphone	S: 4248 ±3dB
Speaker	6T/10K: 50Ω, 30mW
Charging Input Current	5C 5V 1A
Charging port	Type-C
Type-C port Charge Time	About 2 hours
Earbud Work Time per Charge(20% volume)	About 8 hours
FCC ID	2A5GR-BUD09

Package Include:



Power On: When the earbuds are in the case, open the case to power on.
Power Off/Recharge Charging: When the case has power, put the earbuds into the case and close it, the earbuds will power off and start charging automatically.
Auto Power Off: The earbuds will power off automatically if not paired in 3 minutes.


- 1 -

Earbuds battery low reminder: There will be audio prompt every 1 minute, and orange indicator flash every 1 minute.
Case battery low reminder: The case display screen will show battery level after you unlock the screen.

Case charging: Use provided Type-C cable to charge the case with 5C/5V power adapter only. (Do not use power supply higher than 5V, it may damage the product thus can't be charged.)

Note: Please maintain a charge at least every 3 months, if the product will not be in use for a long time, to keep the battery active and prolong the life.

 Diagram & Button operations:



- 2 -

Earbud Indicator:

Waiting for pairing: Flash orange and white.
L & R Paired: One flash orange and white, the other one flash orange 1 second.
L/R Paired with Phone: Indicator go off.
Charging: One orange.
Charging finished: Go off.

MPB:
Play/Pause Music/Answer phone calls: Touch 1 time.
Hang Up/Reject phone calls: Touch and hold for about 2 seconds.
Previous: Touch: Touch Left earbud 3 times.
Next Track: Touch Right earbud 2 times.
Activate voiceassistant: Touch 3 times.
ANC On/Ambient Sound ON/ANC Off: Touch and hold for about 3 seconds to switch. (You can hear an audio prompt.)
Power On: Touch and hold for 3 seconds when the earbuds are outside the case, and in power off state.)

Touch Display Screen:

Call Control: Touch the screen to control answering, hanging up and rejecting calls.
Switch NoiseReduction Mode: Touch the screen to switch between NoiseReduction and Ambient Sound mode.

Music Control: Touch the middle icon to switch between Normal/Pop/Jazz mode.
Play/Pause music: Touch the middle icon.
Switch Previous/Next Music: Touch the left/right icon.
Sound On mode: Touch the left/right icon.

- 3 -

Looking for earphones

Select L icon and then touch start, the earbuds will play a beep sound. After you find it, touch the pause icon to stop the beep.

Date and time: Touch the left/right icon to set the date and time, touch save after finished.

Equalizer: Touch the left/right icon to select between Normal/Pop/Jazz mode.

Volume +/-: Touch the left/right icon to increase/decrease the volume.

- 4 -

Alarm clock settings

Touch the left/right icon to set an alarm for 5/10/30/60 min. the earbuds will play a countdown, you can touch repeat to set a new alarm, or touch stop to end the beep.

Screen brightness: Touch the left/right icon to increase/decrease the screen brightness.

Flashlight function: Touch open and the screen will turn white, touch the screen to return.

Like: When streaming TikTok video, touch the middle icon to mark like, touch the left/right icon to switch Previous/Next video.

Note: 1. When operating touch screen for the functions of your phone, like switching between music, videos, taking photos, etc. need to keep the charging case and phone within 8 meters.
2. When the charging case battery is below 10%, can't do touch screen operations.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

Set Language

Touch the left/right icon to select from 13 languages: Simplified Chinese, English, Traditional Chinese, Japanese, Russian, German, Korean, French, Turkish, Arabic, Portuguese, Spanish, Vietnamese, Thai, Malay, Italian.

Photo taking: Touch the icon to take a photo.

Like: When streaming TikTok video, touch the middle icon to mark like, touch the left/right icon to switch Previous/Next video.

Note: 1. When operating touch screen for the functions of your phone, like switching between music, videos, taking photos, etc. need to keep the charging case and phone within 8 meters.
2. When the charging case battery is below 10%, can't do touch screen operations.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

- 5 -

Set Screen Wallpaper

Touch the left/right icon to change both screen wallpaper.

Photo taking: Touch the icon to take a photo.

Flashlight function: Touch open and the screen will turn white, touch the screen to return.

Like: When streaming TikTok video, touch the middle icon to mark like, touch the left/right icon to switch Previous/Next video.

Note: 1. When operating touch screen for the functions of your phone, like switching between music, videos, taking photos, etc. need to keep the charging case and phone within 8 meters.
2. When the charging case battery is below 10%, can't do touch screen operations.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

- 5 -

Type-C charging Port:

Use 5C 5V power adapter only. (Do not use power supply higher than 5V)



Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

Flashlight function: Touch open and the screen will turn white, touch the screen to return.

Note: 1. When operating touch screen for the functions of your phone, like switching between music, videos, taking photos, etc. need to keep the charging case and phone within 8 meters.
2. When the charging case battery is below 10%, can't do touch screen operations.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

- 6 -

2. Earbuds Pair with Phone:

Turn on the Bluetooth of your phone, search for "AGM BUDS 9" and pair.



The earbuds indicator both go off means they are paired with phone.
Auto-Pair: The earbuds will auto pair the last paired phone when power on next time. (Turn on the BT of your phone first, and then power on the earbuds.)

3. Open your phone music player and hit play, now you can enjoy music wirelessly, as well as answer handsfree calls.

Flashlight function: Touch open and the screen will turn white, touch the screen to return.

Note: 1. When operating touch screen for the functions of your phone, like switching between music, videos, taking photos, etc. need to keep the charging case and phone within 8 meters.
2. When the charging case battery is below 10%, can't do touch screen operations.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

- 7 -

For more detailed and language-specific instructions, please scan the QR code to download.



RF Exposure Warning Statement:
NOTE: This equipment has been tested and found to comply with the FCC Part 15 Class B digital device. However, it may cause interference if not installed and used in accordance with the instructions. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Therefore, to prevent this interference, the user is urged to follow the following instructions:
1. Do not use this equipment near a radio or television receiver, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the equipment dealer or a radio/television technician for help.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty to operate the equipment.

RF Exposure Warning Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty to operate the equipment.

RF Exposure Warning Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

- 8 -

CAUTION:

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion, causing a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

CE Hermitz AGM BUDS 9 is in compliance with the EMC Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://www.agmusa.com/wp-content/uploads/2025/11/Buds-9-DOC-Frm.pdf>

CORRECT DISPOSAL OF THIS PRODUCT
The symbol on the device and its batteries means that they shouldn't be thrown away as regular household garbage or unsorted municipal waste. At the end of their life, hand over the device and batteries to a certified collection point for recycling or proper disposal.

RF Exposure Warning Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty to operate the equipment.

RF Exposure Warning Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Case Button: Press to turn on/off the display screen.

Pairing: 1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair.

- 9 -