

型号：313pro说明书	图纸编号：YGH-QM-03-7354
尺寸：148*170mm	版本号：A-0
材质：105g铜版纸 正反印刷	日期：2023.01.11

先风琴折，后左右一折，封面在上

Before use

Thanks a lot for choosing our product. Please read the following information carefully:

1. This product is designed to be used with the original adaptor provided in the package.

2. The built-in battery inside the product is only for time backup in case of a power outage.

3. Please follow the instructions to set up the product.

We hope you have a nice experience using our product.

Precautions:

1. Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.

2. A cloth or other protective material should be placed between the clock and the furniture.


3. Plug off the power before cleaning the clock with a soft cloth moistened only with mild soap and water.


4. You must use the original adapter.

5. Do not disassemble the clock or touch any components.

Chapter 1

  Diagram

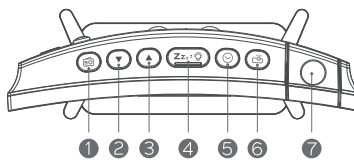

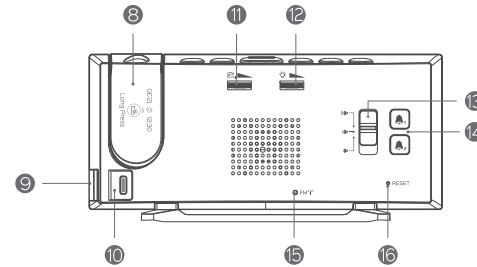

1. FM Radio
2. Digit Decrease
3. Digit Increase
4. Snooze/Display Button
5. Time Setting
6. Projection Button
7. Projection Len
8. Projection Pillar
9. USB Charging Port
10. Type-C Power Supply Port
11. Radio Volume Adjustment
12. Display Brightness Adjustment
13. Alarm Volume Adjustment
14. Alarm Setting
15. Antenna
16. Reset

Chapter 2

Time Setting

In time display mode, long press to enter HOUR setting, short press / to adjust time and long press to quickly adjust. Short press again to enter MINUTE setting. After setting is finished, short press to save.



12/24-Hour Time Format Conversion

In time display mode, short press to switch between 12 and 24 hour format. The setting automatically saved after 3s.


Chapter 3

Alarm Setting

Alarm Time Setting

In time display mode, long press to set alarm 1, short press / to set HOUR, long press to quickly adjust. Short press again to set MINUTE. Short press to save settings.

 NOTE: Setting steps of alarm 2 is the same as the alarm 1.

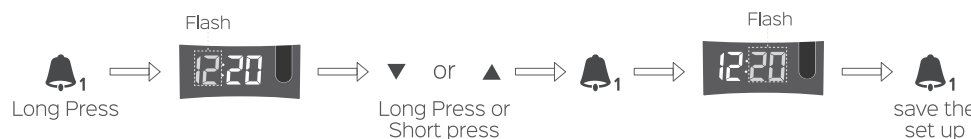

Alarm Ringtones Setting

1. In time display mode, short press / to choose ringtones, short press it again to next ringtone. When you setting, the display will simultaneously show the correspond icon namely, 01, 02, 03, BU, and RD. The last ringtone you choose will be the alarm ringtone.

NOTE: If you set the FM radio as your alarm ringtone, the last radio channel you listen will be alarm ringtone.

Chapter 4

FM Setting

FM Station Searching

1. Short press to turn on/off FM radio, Long press / to manually search radio channels.

NOTE: Long press the FM radio will automatically search and save up to 30 channels when you use it at the first time.

2. When you listening to the radio, short press / to switch saved radio channels.
3. Adjust FM volume via the button on the back.

Chapter 5

Projection

 
Brightness adjustment

In time display mode, short press to turn on the projection, and short press again to adjust projection brightness (Low-Medium-High-OFF). Long pressing can flip the time projection in 180 degrees.

Note: a. The best projection distance is from 0.5m to 3m, so please maintain the projection distance in this range.
b. The projection cannot be used in a strong light environment, so the projection brightness may be weak in the day.
c. After power outage, the projection brightness and display direction are the same as the last time.

Projection Setting

In projection mode, rotate the projection pillar to adjust projection angle from -90 degrees to 90 degrees.

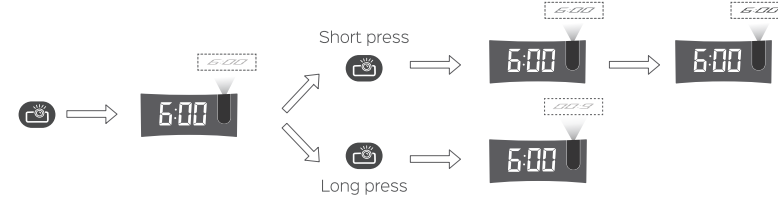

FAQ

How to set up the projection correctly?

1. First determine the clock screen orientation
2. Rotate the projection column and the screen in the same direction
3. Press and hold the projection button for 3s to rotate the projection 180 degrees on the ceiling.
The best projection distance is between 0.5m and 3m, please keep the projection distance in this range.

Here are some tips for FM function:

1. Enter FM settings, press and hold the radio button, the FM radio will automatically search and save up to 30 radio stations when you use it for the first time.
2. If you want to change the saved 30 radio stations, you can only change them by resetting the clock and then search for radio stations again.
3. Reset the clock to clear the record. There is a "RESET" hole on the back of the clock, just poke it with a needle.
4. Note that FM stations cannot be saved manually, they must be searched automatically, if it happens to find the station you want, it can be saved!

How do you reset the clock?

Insert a needle into the RESET HOLE on the back, and the clock will be reset and restore factory setting. The time is displayed as AM 12:00.

Why does the clock not get FM radio signals?

1. Make sure that the FM antenna on the back is completely untied.
2. Please check whether the location is remote and whether other signal receptions are normal.
3. Move the clock to an open space to check whether it can receive signals.
4. Check if there are any interference signals or devices to affect the signal such as mobile phones, keys, and so on.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Projection Alarm Clock

• 6 Months Return

• 24 Months Warranty

• Lifetime Support