 
 


Electronic Alarm Clock

USER MANUAL

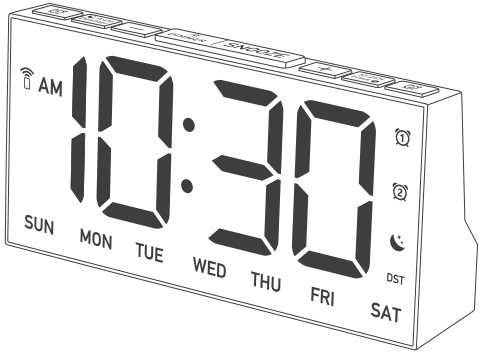

PRODUCT OVERVIEW

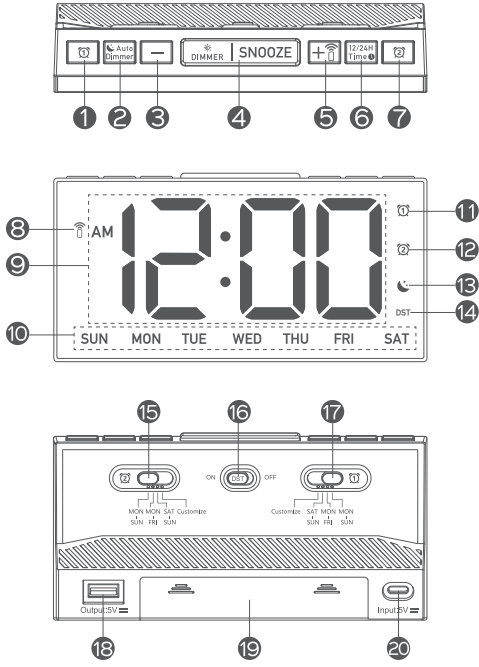

- 1 -

1. Alarm1 Button

2. Auto Dimmer Button

3. Setting -

4. Snooze / Dimmer Button

5. Setting + / Time Syncing

6. 12/24H, Time Set Button

7. Alarm2 Button

8. Time Syncing Indicator

9. Time Display

10. Week Display

11. Alarm1 Indicator

12. Alarm2 Indicator

13. Auto Dimmer Indicator

14. DST Indicator

15. Alarm2 Mode Slider

16. DST Switch

17. Alarm1 Mode Slider

18. USB Charging Port

19. Battery Compartment

20. Type-C Power Port

 
PACKAGING LIST



Alarm Clock



Adapter



Cable



 
User Manual

- 2 -

FIRST USE

• First Power On

Connect the Type-c end to the back of the alarm clock, connect the USB end to the adapter, and insert it into a 100V-240V household outlet. As shown below:

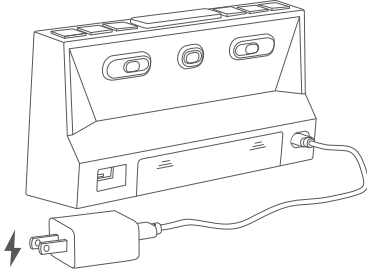

• Product Cleaning

Wipe away dust with a soft, damp cloth; Do not use liquid or abrasive cleaners.

- 3 -

TIME SYNCING

When the clock is powered on, or long press the  button to enter time syncing.

• The time syncing indicator begins to flash. It will stop flashing and disappear without connection after 3 mins.



• Turn on the Bluetooth on the phone, search for the device 'Clock 903', and connect to it.

• If your phone displays any notifications, please accept them.

• (Note: The device only retrieves the time from your phone and does not have internet access. This will not compromise your privacy.)

• After successful time synchronization, the indicator will become steady. The clock will automatically sync the time every 24 hours. If there is no connection for more than a day, the time syncing indicator will disappear, and the clock will attempt to reconnect to the phone once an hour. Once the connection is re-established, the indicator will reappear.

• The clock keeps a connection only with the last phone it was paired with.

- 4 -

TIME SETTING

 
In the time mode, Long press the  to enter the time setting, then set the time in the following order:

• Hour, Min, and Weekday

1. Hour and AM/PM begin to flash, press the  or  to adjust, and press the  again to confirm;

2. Then Minute begins to flash, press the  or  to adjust , and press the  again to confirm;

3. Then Weekday begins to flash, press the  or  to set the weekday, and press the  again to complete.



Note:

Long press  or  for a quick adjustment. Automatically save and exit after 10 seconds of inactivity. The same as the alarm setting below.

 
• 12/24-Hour Time Format Conversion

In the time display mode, short press  to switch 12/24-hour time display format.

- 5 -

• DST Setting

Toggle the DST switch on the back of the clock, to quickly turn DST format on/off; The DST indicator will display or disappear accordingly.

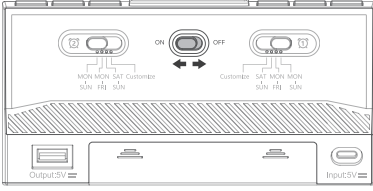

ALARMS SETTING

• Alarm Switch

In the time display mode, press the  to turn on /off the alarm, the alarm indicator  display or disappear accordingly.

• Alarm time setting

Long press the  to enter the alarm setting. Hour and min will flash in turn, press the  or  to adjust, press the  again to confirm.

• Alarm days setting

Move the alarm mode slider on the back of the clock to set the alarm days in the following order:

- 6 -

MON-SUN : everyday



MON-FRI : weekday



SAT-SUN : weekend



Customize : Customizing alarms for any days of a week (See below passages for detailed setting)

 


The week display will show the days the alarm is activated.

- 7 -

• Customize alarm for any days

1. Move the alarm mode slider to Customize



2. Long press the , after setting the time, the first day begins to flash, press the  to enable or disable the alarm for the day, press the  or  to switch between days.

3. Long press the  to complete the customize;

4. The week display will show the days enabled for the alarm.



• Snooze Function

When the alarm goes off , press the  SNOOZE to temporarily turn off the alarm, and the  begin to flash. the alarm will go off again after 9 minutes.

• Stop the Alarm

In the alarm/snooze state, click any button except  SNOOZE on the top of the clock to stop the current alarm without affecting the next alarm.

When the alarm rings for 30 minutes without any operation, the alarm will automatically stop ringing and will not affect the next alarm.

- 8 -

DISPLAY BRIGHTNESS ADJUSTMENT

In the time display mode, press the  SNOOZE to adjust the display brightness.

AUTO DIMMER SETTING

The auto dimmer mode automatically adjusts the display brightness every day, eliminating the need for manual adjustment. (Default period: 7:00pm-7:00am, Default brightness: L01)

• Auto Dimmer Switch

Press  to turn on/off the Auto Dimmer, the indicator  will display or disappear accordingly.

• Auto Dimmer Setting

Long press  to enter the Auto Dimmer setting.

- Auto Dimmer starting time:

Hour and min will flash in turn, press  or  to adjust, and press the  to confirm.



- Auto Dimmer ending time:

Set the end time in the same way as setting the start time.



- Auto Dimmer Brightness:

 
Press the  or  to set the Auto Dimmer brightness from L01 to L04, press the  to confirm.



- 9 -

MEMORY FUNCTION

2 xAAA batteries (not included) ONLY work for memorizing the settings in the case of the main power outage. Batteries can't support display or other functions.

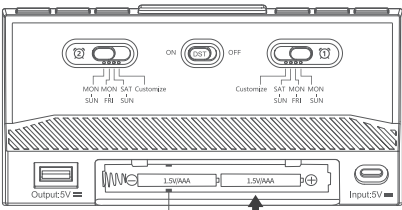

Battery Anti-bounce structure

Insert the battery from here.

GENTLE REMINDER

If you feel confused about any part of setting the clock, please go to our product page and there are step-by-step videos for all settings for your reference which are clearer and easier to understand. Or do not hesitate to contact our customer support for a quick solution if you have any questions.

- 10 -

FCC STATEMENT

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio / TV technician for help.

- 11 -

WARNING

Do not ingest the battery, Chemical Burn Hazard (the remote control applied with). This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment isn't closed securely, stop using the product and keep it away from children. I you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This appliance can be used by childrenover 8 years old, and children shall not play with the appliance.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

- 12 -

CORRECT DISPOSAL OF THIS PRODUCT

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

EU&UK Declaration of Conformity:
<https://drive.google.com/drive/folders/7ZXvGz35q9z8ERY7zBUmdKMG3AvPJPcPz?usp=sharing>

- 13 -

尺寸:80x112 (mm)

材质及工艺: 105g 铜版纸

装订方式: 折页

印刷颜色: 双面单色印刷

设计师: Loic

日 期: 240920

备 注:

本品牌及其所使用的标志、名称、图像以及所有内容设计, 其版权均为本公司所有, 未经授权任何组织、个人、商业团体不得擅自使用、翻印, 本公司保留追究其法律责任的权利!