

2.4G Ergonomic  
Wireless Keyboard  
and Mouse Combo

USER MANUAL

Packing List

1. Keyboard x1

2. Mouse x1

3. USB receiver x1

4. USB-C charging cable x1

5. USB C to USB adapter x1

6. User manual x1

Overview

USB C charging port

Power indicator

USB receiver storage slot

Power switch

DPI+ 800/1600/2400/3200

DPI- 800/1600/2400/3200

Middle Button/  
Scroll Wheel

Right Button

Left Button

Back Button

Forward Button

2

Power Switch

Light Switch Key

USB receiver storage slot

3

1. Fetch the wireless keyboard and mouse, USB receiver.

2. Turn on the power switch of keyboard and mouse.

3. Plug the receiver into the USB port of your computer.

4. When the computer installs driver automatically, they start serving.

Shortcut Key

|   |                |    |          |
|---|----------------|----|----------|
| ⏮ | Previous track | 🔊- | Volume - |
| ⏸ | Play/Pause     | 🔊+ | Volume + |
| ⏭ | Next Track     | 🔊x | Mute     |

Functions of Combination Keys

| KEY    | Win                 | Mac                 |
|--------|---------------------|---------------------|
| FN+A   | Win system          | /                   |
| FN+S   | /                   | Mac system          |
| FN+F1  | Screen brightness - | Screen brightness - |
| FN+F2  | Screen brightness + | Screen brightness + |
| FN+F3  | Convert Window      | Convert Window      |
| FN+F4  | Calculator          | Not for Mac OS      |
| FN+F5  | Microphone          | Exhale Siri         |
| FN+F6  | Search              | Search              |
| FN+F7  | Previous Track      | Previous Track      |
| FN+F8  | Play/Pause          | Play/Pause          |
| FN+F9  | Next Track          | Next Track          |
| FN+F10 | Mute                | Mute                |
| FN+F11 | Volume -            | Volume -            |
| FN+F12 | Volume +            | Volume +            |

Backlight Mode Switch

|            |                            |
|------------|----------------------------|
| FN+Ins M1  | Rainbow Mode               |
| FN+Home M2 | Single Color Mode          |
| FN+PgUp M3 | Dynamic Single Color Mode  |
| FN+Del M4  | Dynamic RGB Mode           |
| FN+End M5  | Neon Mode                  |
| FN+PgDn 🔄  | Backlight On/Off           |
| FN+ ⬆ 🌟 +  | Backlight Brightness up    |
| FN+ ⬇ 🌟 -  | Backlight Brightness down  |
| FN+ ⬅ 🌟 🚶  | Backlight speed slows down |
| FN+ ➡ 🚶 🌟  | Backlight speed up         |

Keyboard Special Functions

1. FN+ESC: Press and hold for 3 seconds to restore factory settings.

2. FN+WIN: Lock the WIN key.

3. FN+A: Switch to Windows mode. (Indicated by 5 blinks

of the NUM lock light).

4. FN+S: Switch to macOS mode. (Indicated by 5 blinks of the CAPS lock light).

Mouse Instructions

| Key                            | Function                              |
|--------------------------------|---------------------------------------|
| Left Button                    | Standard left mouse button function   |
| Middle Button/<br>Scroll Wheel | Standard middle mouse button function |
| Right Button                   | Standard mouse right button function  |
| Forward Button                 | Standard mouse forward function       |
| Back Button                    | Standard mouse back function          |
| DPI+                           | 800 / 1600 / 2400 / 3200              |
| DPI-                           | 800 / 1600 / 2400 / 3200              |
| Light Switch Key               | Backlight Mode Switch                 |

Mouse Special Functions

1. The mouse has 13 kinds of lighting effects. Short press the light button at the bottom to switch in a cycle. Press and hold the light button for 3 seconds to turn off/on the light.

2. Middle Button/Scroll Wheel+Right Button: Press and hold to pair (plug the receiver into the PC, hold down the middle button + right button of the mouse, and the mouse backlight will light up when near the receiver. If it exceeds 8-10 seconds, you need to turn the mouse power switch off and on again and repeat the above pairing process).

3. The backlight will turn off if the mouse is not used for 90 seconds to save power. Move the mouse or press a button to turn on the backlight.

4. When switching DPI, the backlight will be consistent with the color corresponding to the DPI value and then return to the backlight effect after 3 seconds.

Caution

1. Replacing the battery incorrectly can result in an explosion;

2. Only replace with the same type or equivalent type of battery;

3. Using the wrong type of battery may render safety protections in effective(e.g.,for certain types of potassium battery packs);

4. Throwing the battery pack into fire or a heating furnace, or mechanically crushing or cutting the battery pack may cause an explosion;

5. Placing the battery pack in an extremely high-temperature environment may cause an explosion or the release of flammable liquid or gas;

6. The battery pack being subjected to extremely low air pressure may cause an explosion or the release of flammable liquid or gas;

7. Do not disassemble or repair this product by non-professional personnel, as it may cause further damage to the product or personal injury!

Correct Diposal Of This Product

(Waste Electrical &Electronic Equipment)  
This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources  
Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.  
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.  
should not be mixed with other commercial wastes for disposal.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

---Reorient or relocate the receiving antenna.  
---Increase the separation between the equipment and receiver.  
---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
---Consult the dealer or an experienced radio/TV technician for help.  
Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.  
The device has been evaluated to meet general RF exposure requirement.  
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Contact Us

Whatever you need, we're here to help.  
Just get in touch, and we'll try our best to respond within 24 hours.  
After-sales email: csforcustomer@gmail.com