



Scan here to contact us
[24Hrs Online]



<https://geonfino.afterservice.vip>



PASSWORD



FINGERPRINT



APP



RFID CARD



BLUETOOTH

Please keep and read this instruction manual before installation, we also prepared an instruction video to help on Amazon Page. If you need further assistance, please contact Customer Service by email: geonfino@afterservice.vip

Table of Contents

< 1 > Installation Guide

< 12 > How to Use

< 13 > Programming Instructions

< 15 > App Guide

< 26 > Gateway Management

< 27 > Low Power/Emergency Power

< 28 > Factory Default Settings

< 28 > Restore Factory Settings

 


 
 



< 29 > Troubleshooting

< 30 > FCC Warning

< 31 > About GEONFINO



Installation Guide

Package List

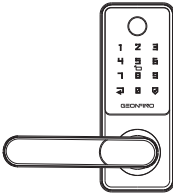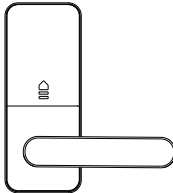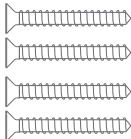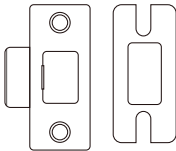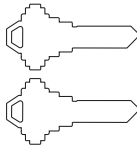A.Latch 	B.Keypad 	C.Interior Assembly 
D.Mounting Plate 	E.Square Pole 	F.Studs 
G.Latch/Strike Screws 	H.Mounting Plate Screws H 	I.Mounting Plate Screws I 
J.Strike/Strike Box 	K.RFID Cards RFID Card RFID Card	L.Keys 

1 Prepare the door and check dimensions


A Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm).

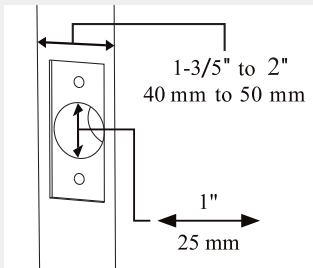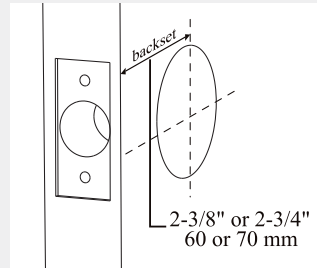

B Measure to confirm that the hole on the edge of the door is 1" (25mm). And measure to confirm that the door is 1-3/5" to 2" (40 mm to 50 mm) thick.

2 Install the latch and strike


A Hold the latch in front of the door hole, with the face of the latch flush against the door edge.

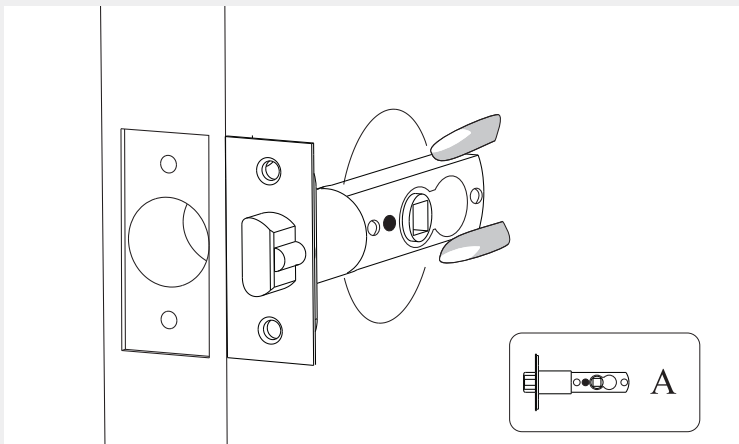

<2>

Is the slotted hole centered in the door hole?


YES

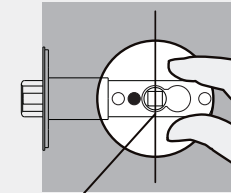

Slotted hole is centered.


No, adjustment is required. Proceed to the next step.

NO

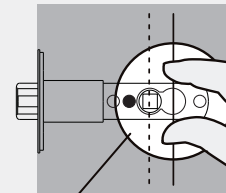


Slotted hole is not centered.

Rotate and pull the latch as shown to extend the latch.

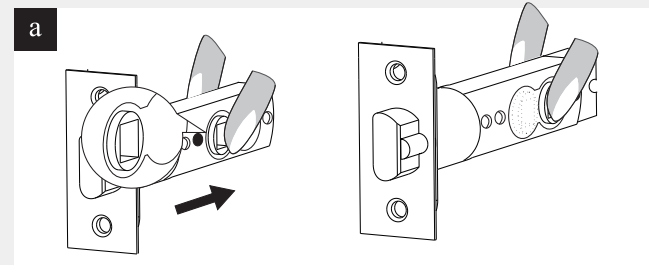

Slide the slot to the right as shown

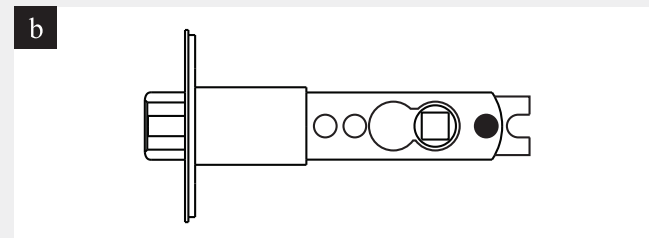


<3>


B Determine the direction of the latch tongue.

a


Left push door

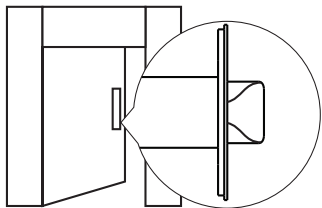

Right push door

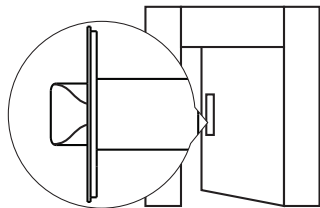

Indoor

 

Outdoor

Left push door

Indoor




Outdoor


Right push door

b

Left pull door

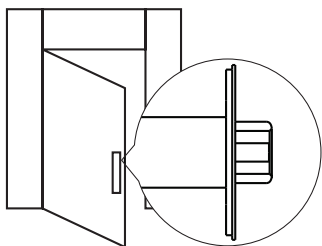


Indoor

 

Outdoor

Left pull door

Right pull door

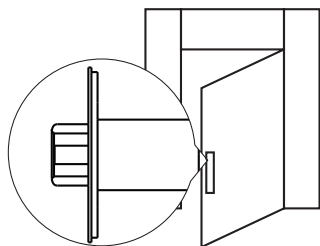

Indoor




Outdoor


Right pull door

When the door is pulled out, the latch tongue is installed inward.

C Install the latch

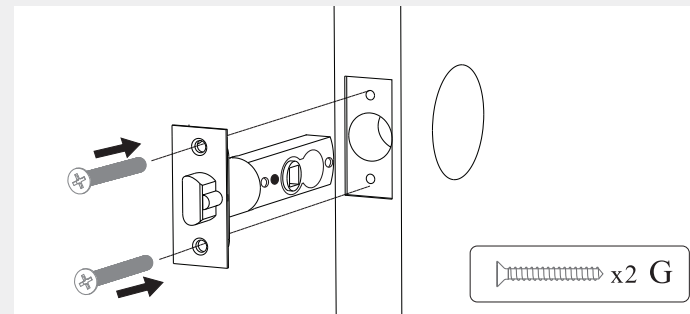

D


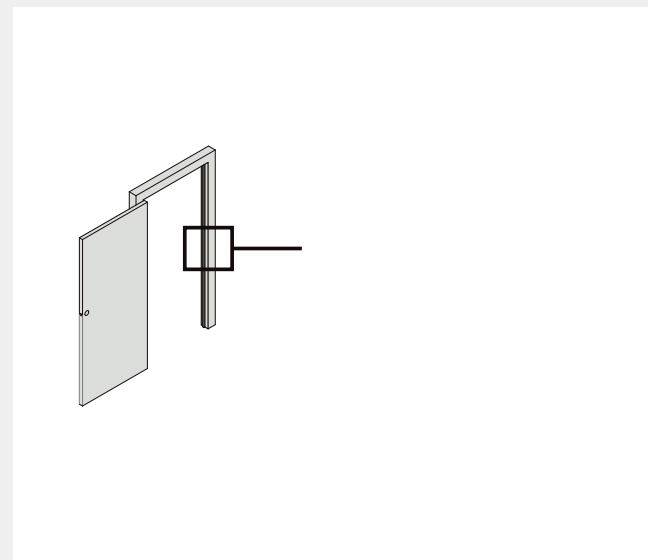


3 Confirm the direction of the door


⚠ Look at the door from OUTSIDE

Left Hand Door


Right Hand Door

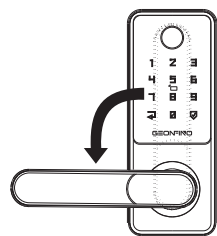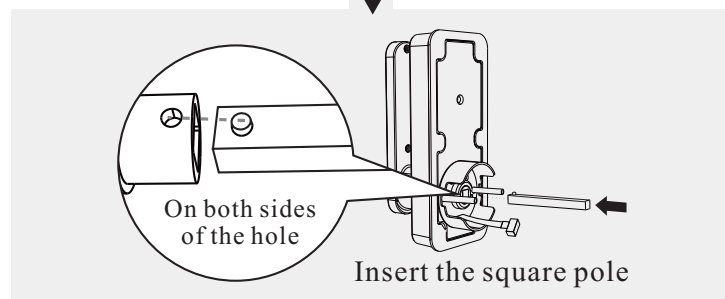


Rotate the front handle 90° to the left.

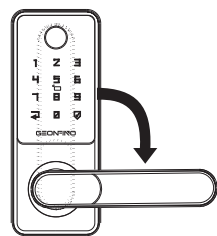


Rotate the front handle 90° to the right.

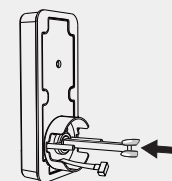


Press the square pole

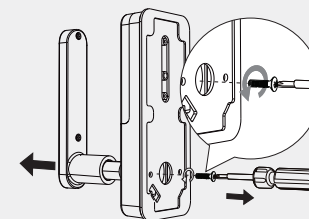


Unscrew the rear handle screw as shown in the picture and remove the rear handle.

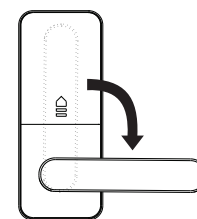


Rotate the rear handle 90° to the right.

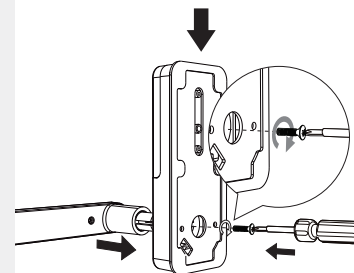

Install the rear handle as shown.

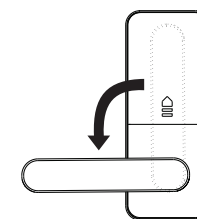


Rotate the rear handle 90° to the left.

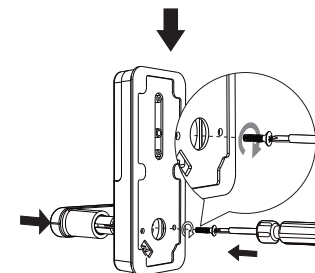

Install the rear handle as shown.




If you change the handle in the wrong direction, please follow the instructions below.

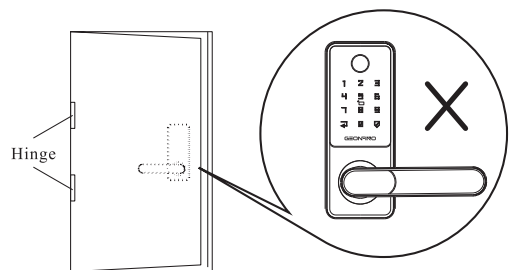


a

Grab the square pole and pull it outward

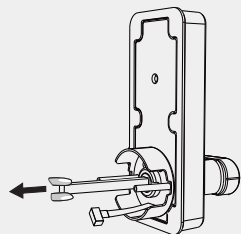



b

Turn the handle to the correct position

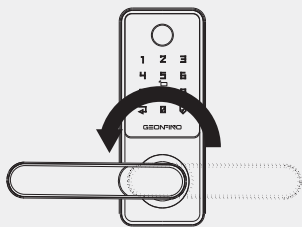


c


Press the square pole to restore

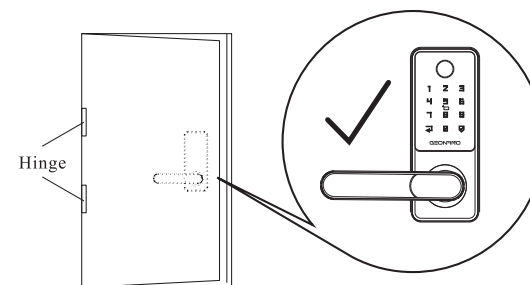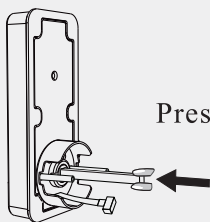

4 Install the keypad

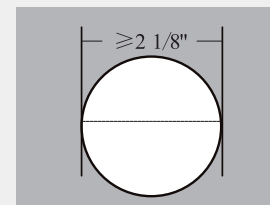


No adjustment is required. Proceed to the next step.

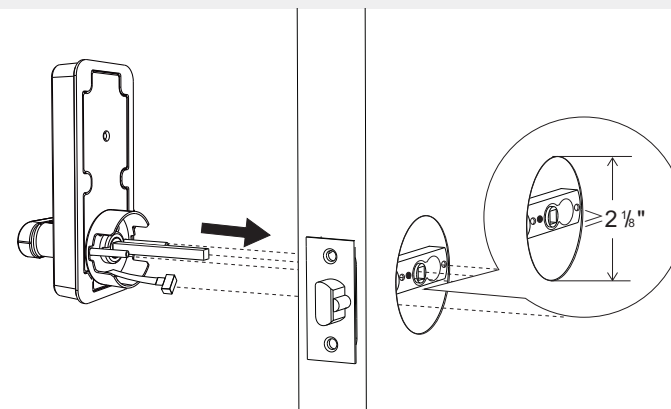


Install the keypad directly


5 Install the interior assembly

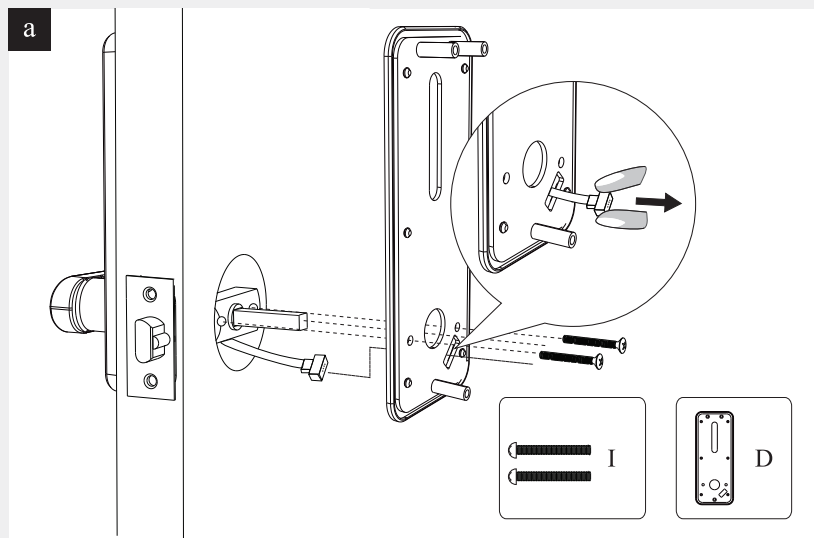


The data cable passes through the mounting plate as shown in the figure above, the square pole passes through the round hole of the mounting plate, and then fix the mounting plate with screws.

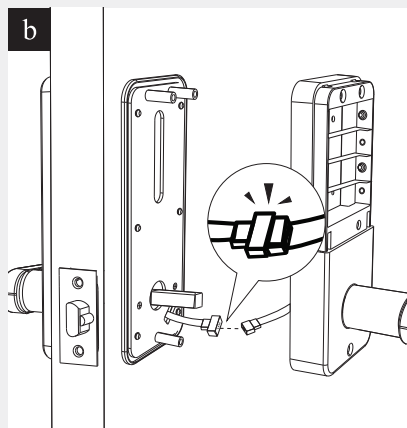


Connect the data cable

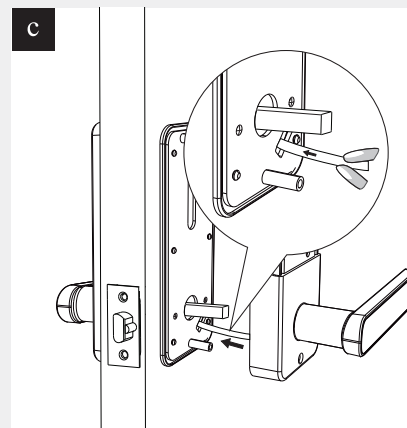


Too long data cable stuffed into the door

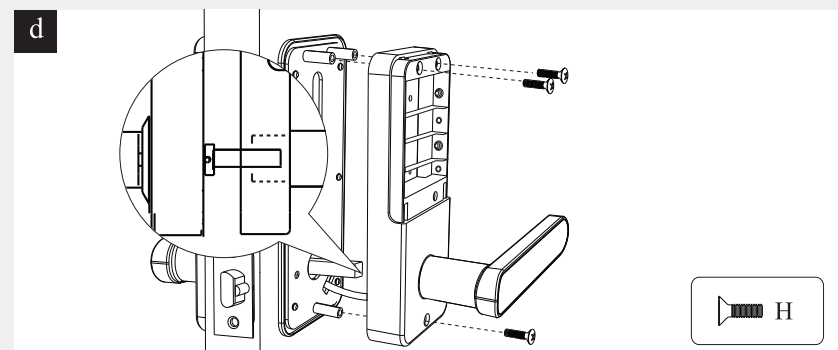

Install the interior assembly with screws

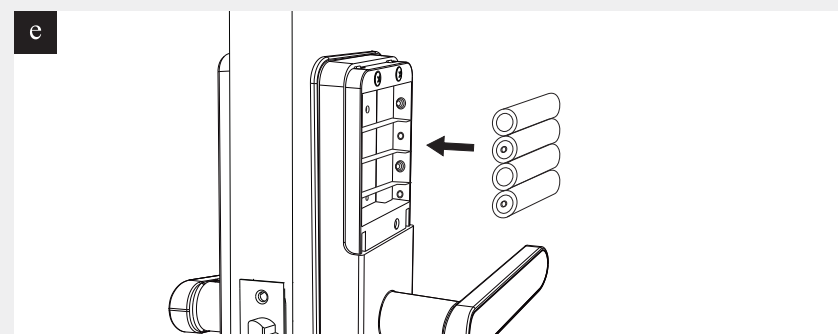

Install the battery

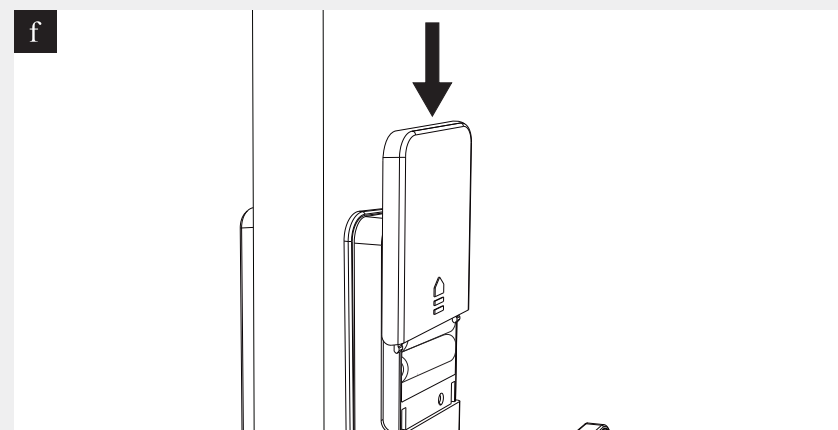


Install the battery cover

How to Use


Unlock the door from outside

Key

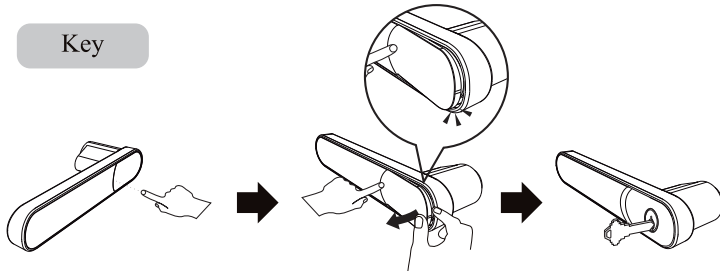

Press the lock cover as shown so that the other end is tilted up to remove the lock cover, and then insert the key to unlock the lock.


Fingerprint

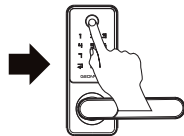



Master/
User
code



RFID Card

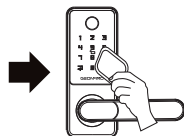

Unlock the door from inside

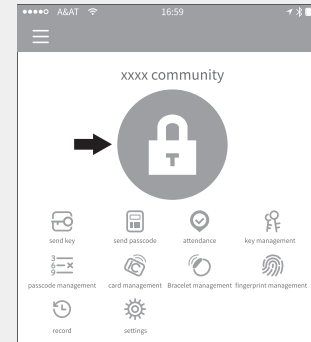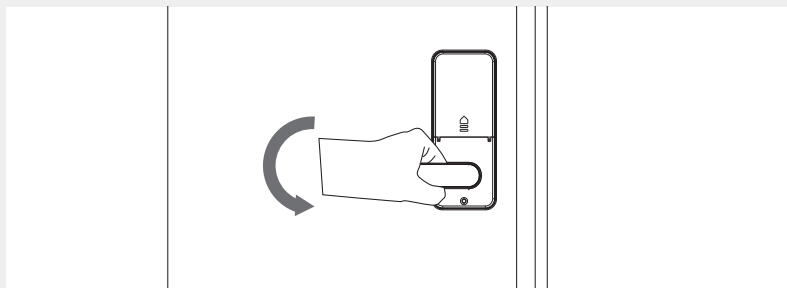

Via app

Click "🔒" to unlock the door from outside or inside.

Note: Please keep your phone near the door lock within 32.8ft (10m).

Programming Instructions

Information & Safety warnings

- Protect your User Codes and Master Code.
- Protect your key. It is suggested to put it outside the door, such as your car.
- Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required, use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.

⚠ IMPORTANT: Do not load batteries until the lock is completely installed.

Definitions

Master code

Required for programming and feature settings. Master code can be used to unlock the door in vacation mode. The master code needs to be changed before programming.

The property owner/manager should keep this information confidential.

1. Master Code (6 to 8) digits: The default Master Code is 123456. It is required that you change it to a code of your own before programming.
2. User Code (6 to 8) digits: A total of 200 User Codes can be programmed.

Wrong entry limit

After entering a failed code 5 times, the unit will shut down for 5 minutes.

Unlock with fake code

The user can prevent the exposure of the PIN code to strangers by entering random digits before or after the correct PIN code.


83618 137192 14710

 password

----- Random digits -----

App Guide

A Download app "TTLock"

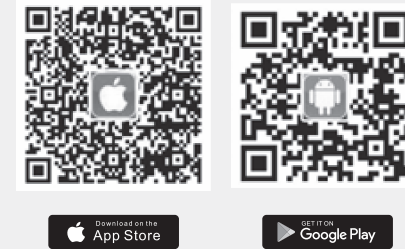

Android Mobile Phone--Search "TTLock" in Google Play.
Apple Mobile Phone--Please search "TTLock" in App Store.

B Register a new account (phone number or email)

