

说明书材质：105G铜版纸，正反两面单色印刷，Size: 63x73mm

SWISSBRAND SONIC Headphones	CONTROLS 1. Pause/Play Button: Press: Pause and resume playback, Answer and end phone call 2x Press: Redial last outgoing number Press+hold(2s): Reject incoming call Press+hold(1.5s): Activate Voice Assistant 2. Power ON/OFF Button: Press+hold(3s): Power ON/OFF 3. Type-C Charging Port 4. LED Indicator 5. 3.5 mm AUX Port 6. Built-in Microphone 7. V- Button: Press: Skip to next track Press+hold: Decrease volume 8. V+Button: Press: Skip to previous track Press+hold: Increase volume 9. TF Card Slot	GETTING STARTED Charging the Headphones Plug the small connector of the included charging cable into the charging port on the headphones. Plug the large connector into the USB port on a computer or a compatible 5V USB adapter (not included) and plug into a wall socket. The LED indicator on the headphones will turn RED while charging and turn BLUE when finished charging. On low power, a tone will be heard indicating that the headphones need to be charged. Please recharge when this happens. Powering ON/OFF Press and hold the ON/OFF button for 3 seconds to power the headphones ON and OFF. When powered on, the headphones may automatically reconnect to a nearby previously-paired device with Bluetooth® enabled. Bluetooth Pairing 1. Power the headphones ON. A tone will be heard, and the LED indicator will flash Blue and Red, and the headphones will enter pairing mode. 2. Set your mobile device to search for Bluetooth® devices. When it appears, select "swissbrand sonic" from the list of found devices. 3. After a successful pairing, a tone will be heard and the LED indicator will turn solid Blue, and you will be able to play music on the headphones.	In Bluetooth® mode, playback and volume can be adjusted by the controls on the headphones, or by the controls on a connected device. *Press the Pause/Play button to pause and resume playback. *Press the Volume- and Volume+ buttons to skip tracks. TF Card Input Insert a micro SD/TF card into the TF card slot on the headphones, the headphones will automatically begin playing music off the device. Phone Calls When connected to a phone via Bluetooth®, phone functions can be used on the headphones. * Press the Pause/Play button to answer an incoming call. Press again to end the call. * Press+hold the Pause/Play button to reject an incoming call. * 2x Press the Pause/Play button to redial the last outgoing number. Connecting with a 3.5 mm AUX Cable Plug one connector of a 3.5 mm aux cable into the 3.5 mm aux input port on the headphones. Plug the other connector into the audio output port on your media-playing device. In AUX mode, all playback and volume will be adjusted with the controls on your connected device. The headphones will automatically power ON when a 3.5 mm AUX cable is inserted.	! THIS IS A BATTERY-OPERATED PRODUCT. THIS IS NOT A TOY. INTENDED USE OF THE PRODUCT SHOULD NOT RESULT IN EXPOSURE TO THE INTERIOR BATTERY. In case of abuse, there is risk of rupture, fire, heat, leakage of internal components. Abuses include but are not limited to charging for a long time, short circuit, put into open flame, put into water, whacked with hard object, punctured with acute object, crushed, and broken. Proper Handling: Do not open, disassemble, crush, or burn battery. Do not pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it. Do not strike, throw or subject the battery to severe physical shock. Do not attempt to disassemble or modify the battery in any way. Do not handle battery in a manner that allows terminal to short circuit. Avoid mechanical damage of the battery. Battery may explode or cause burns, if disassembled, crushed, or exposed to fire or high temperature. Do not short-circuit the battery by connecting wires or other metal objects to the positive(+) and negative(-) terminals. Do not immerse the battery in water or allow it to get wet. Do not use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any way. If the battery is in use or being recharged, remove it from the device or charger immediately and discontinue use. Avoid all personal contact, including inhalation. Wear protective clothing when risk of exposure occurs. Proper Storage: Store in a cool, dry, and well-ventilated area. Keep away from heat, fire, and direct sunlight. Keep out of the reach of children. Disposal considerations: Recycle in accordance with government, state and local regulations, to ensure proper disposal.	If exposed to the battery - vapor fumes may be irritating to the eyes and skin. First aid measures: After eye contact: Flush eyes cautiously with plenty of water for at least 15 minutes, occasionally lifting the upper and lower eyelids to assure adequate flushing. Get medical aid. After skin contact: Remove contaminated clothing and rinse skin with plenty of water or shower for 15 minutes. Get medical aid. After inhalation: If inhaled, quickly leave the site to fresh air immediately. Administer artificial respiration if breathing is difficult. Get medical attention. After swallowing: If swallowed, wash out mouth with water provided person is conscious. Get medical attention. ! Battery may burst and release hazardous decomposition products when exposed to a fire situation. Lithium-ion batteries contain flammable electrolyte that may vent, ignite, and product sparks when subjected to high temperature, when damaged or abused (e.g. mechanical damage or electrical overcharging), may burn rapidly with flare-burning effect, may ignite other batteries in close proximity. Fire-extinguishing measures: Use copious amounts of cold water. May use dry powder, sand, earth. Questions? Comments? Contact contact@culturefly.com	FCC STATEMENT NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC RF exposure statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
---	--	--	---	---	---	--