


Thank you for purchasing the Griffin PowerBlock 20W Wall Charger, item GRFWC1006-WHT. Charge compatible USB-A, Type-C, and smartwatch devices with your wall charger. Please read this manual carefully before charging devices with the wall charger.

A QUICK LOOK

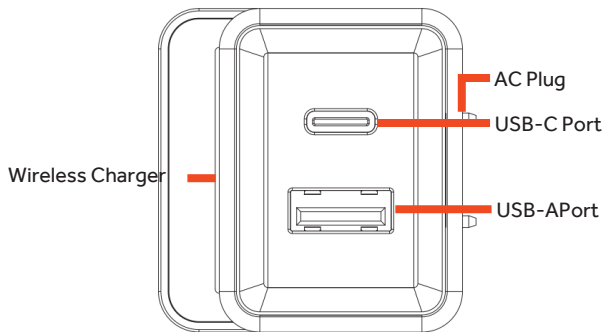

POWERING THE WALL CHARGER

1. Unfold the AC Plug prongs to extend outwards.
2. Connect the Wall Charger to a compatible wall outlet using the AC Plug.



NOTE: The wall charger does not hold any power and must always be connected to a constant power source while charging additional devices.

After use, disconnect the wall charger and fold the AC Plug prongs in for easy storage.

CHARGING YOUR DEVICES

The wall charger has one USB-A port, one USB-C port, and a wireless charger. Connect a compatible charging cable to one of the ports. Ensure it is fully inserted and no tears or damage are visible to the connection or cable.

To charge a compatible wireless smartwatch, follow these steps.

1. Remove any cases or protective covers that may block the back of your smartwatch before attaching it to the wireless charger.
2. Align the back of your smartwatch with the center of the wireless charger. The back of your smartwatch should be laid flat on the wireless charger.
3. Ensure the smartwatch is connected securely and properly to the wireless charger. Once the wireless charger is successfully attached to the back of your smartwatch, your device should start charging.

NOTE: Some devices require a specific output voltage. Before connecting, make sure that your device is compatible with the wall charger's output.

PowerBlock®

20W WALL CHARGER

with Smartwatch Wireless Charging



SPECIFICATIONS

Input: 100-240V 50/60Hz 0.6A Max
Type-C Output: 5V=3A / 9V=2.22A / 12V=1.67A
USB-A Output: 5V=3A / 9V=2A / 12V=1.5A
USB-C + USB-A Output: 5V=3A
Wireless Charger Output: 2.5W MAX

CONTENTS

- Wall Charger
- User's Manual With Warranty Information

IMPORTANT SAFETY PRECAUTIONS

When using your Wall Charger, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR WALL CHARGER.
2. Never expose your wall charger to high temperatures, extreme cold, high humidity, moisture, or water.
3. To avoid the risk of electric shock, never attempt to open or repair your wall charger without the assistance of a certified professional.
4. Your wall charger is not to be used by children or the infirm without adult supervision.
5. Unplug your smartphone or USB device from your wall charger when it is fully charged.
6. Do not use your wall charger at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop or throw your wall charger or subject it to strong impacts or physical trauma.
8. Contact the manufacturer for support if you detect any abnormalities when using your wall charger. In addition, do not continue to use your wall charger if you detect any leakage, smoke, or fire.
9. If fluid from inside the wall charger gets into your eyes, do not rub your eyes. Wash your eyes with clean water and immediately contact a physician.
10. When connected, do not place your wall charger on flammable materials such as rugs, carpets, or bedding.
11. Clean your wall charger using a soft cloth or paper towel.
12. Do not use harsh chemicals when cleaning your wall charger, and never submerge it in water.



Risk of Fire and Burns.

Do Not Open, Crush, Heat Above 104°F (40°C) or Incinerate.
Always Follow All Manufacturer's Instructions When Using.

MAINTENANCE AND CARE

- Before using your wall charger, inspect the ports and plugs to make sure that they are clear of dust and debris before charging a device or inserting a USB cable.
- Use a soft cloth to clean your wall charger. Never use any harsh chemicals or detergents. Make sure your wall charger is dry before using.
- When your wall charger is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a USB cable that is connected to your wall charger. Connect and disconnect all cables as carefully as possible.
- Please recycle or dispose of your wall charger properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your product for further information.

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.
This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.griffintechology.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC certification of this device refers to RF exposure testing performed in typical operating conditions, where a person is no closer than 20 centimeters from the device surface at all times, except for non-repetitive patterns with transient time intervals in the order of a second. Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.



©2025 GSICS
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541

www.griffintechology.com

* All brand, product names and logos are trademarks or registered trademarks of their respective companies.