



RUGGED JOBSITE SPEAKER WITH LED LIGHTS



SAFETY PRECAUTIONS

When using your Realtree Rugged Jobsite Speaker, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not allow children or the infirm to play with your speaker without adult supervision.
3. Do not expose your speaker to excessive heat, flames or fire.
4. Do not expose your speaker to high humidity, moisture, or water.
5. Always press all buttons carefully. Do not manhandle your speaker.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your speaker to extreme temperatures of hot or cold.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
9. Do not drop, puncture, or expose your speaker to excessive trauma.
10. Your speaker is not intended for commercial use.
11. Do not place near objects that generate a strong magnetic field.
12. Use only the supplied charging cables. Unplug this device when not in use for long periods of time or during lightning storms.
13. Do not insert sharp tools or heavy objects into the toolbox's interior without proper protection.
14. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

INTRODUCTION

Thank you for purchasing the Realtree Rugged Jobsite Speaker, item RLT7008-CM. In order to have the best experience, please read this manual carefully before using the wireless speaker.

PACKAGE CONTENTS

- Rugged Jobsite Speaker
- USB-C Charging Cable
- User's Manual With Warranty Information

SPECIFICATIONS

Bluetooth Version: 5.3

Working Distance: Up to 10 meters

RMS Output Power: 30W (15W*2)

Waterproof Grade: IPX5

Battery Capacity: Lithium battery 7.4V, 2,000mAh

 
Playtime: Up to 30 hours*

Charging Time: 3-4 hours


Receiving Frequency: FM: 87.5-108MHZ

** Applicable at 50% of maximum volume. Results will be lower when volume is higher.*


A CLOSER LOOK

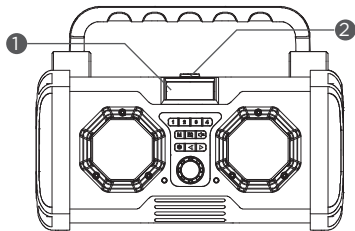


FRONT

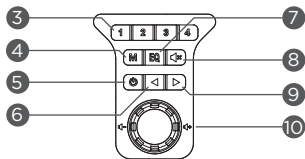 

CONTROL PANEL

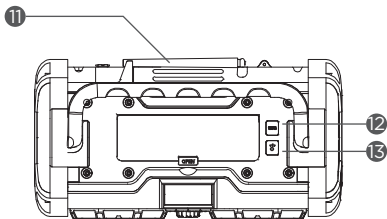 

TOP

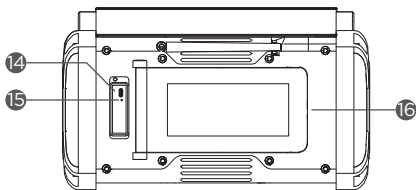 

BACK

A CLOSER LOOK (CONT.)

- | | |
|-----------------------------|------------------------------|
| 1. Display Screen | 9. Next Track Button |
| 2. Lamp | 10. Volume Knob |
| 3. Favorites Buttons 1-4 | 11. Antenna |
| 4. Mode Button | 12. SOS Button |
| 5. Power Button | 13. Lamp Button |
| 6. Previous Track Button | 14. USB-C Charging Port |
| 7. (EQ) Sound Effect Button | 15. Charging Indicator Light |
| 8. Mute Button | 16. Storage Box |

CHARGING

STEP 1.

 
Move aside the charging port panel cover to access the speaker's charging port.

STEP 2.

Insert one end of the included charging cable into the charging port on your speaker.

STEP 3.

Insert the other end into a suitable USB charging adapter.



The Charging indicator light will turn red while the speaker is charging and will turn OFF when fully charged.

NOTE: It is recommended to fully charge the speaker before first use.



2026 CSI
Edison, NJ 08817
Tech Support
800 592 9541

REALTREE EDGE Camouflage Pattern 2026 of Jordan
Outdoor Enterprises, Ltd., all rights reserved.

* All brand, product names and logos are trademarks
or registered trademarks of their respective companies.

The Bluetooth® word mark and logos are registered trademarks owned by the
Bluetooth SIG, Inc. and any use of such marks by Sakar International. is under
license. Other trademarks and trade names are those of their respective owners.

POWERING ON/OFF

Press and hold the Power button for approximately three seconds to power ON/OFF.

Press and Hold.



Note:

It is recommended to fully charge the speaker before first use.

BLUETOOTH PAIRING



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as “RLT7008”.

NOTE: Disconnect through your connected device.

CHANGING MODES

The speaker has access to FM and Bluetooth Modes.

By default, the speaker starts in Bluetooth mode. To cycle through the available modes, press the Mode button.

Press



FM Radio Mode

Press the Mode button to switch to FM Radio Mode.

Pull out the antenna and adjust it to the direction of a strong signal.

Press and hold the center of the Volume Knob to automatically scan and save available radio stations with a strong connection. Press again to cancel the automatic scan.

After a full automatic scan, the speaker will save all found stations to the saved list. Only the first four stations will be saved to the Favorites (buttons 1-4).

During an automatic scan, to set a station as one of your Favorites (buttons 1-4), while on your desired station, press and hold one of the four Favorite Buttons. The current station will be saved to the button.

After a full automatic scan, press the volume knob to enter the saved list. Press again to change to next saved station.

Use the Previous Track and Next Track buttons to decrease/increase the radio station by one frequency.

USING THE SPEAKER

Power Button

-Press and hold for approximately three seconds to power ON/OFF.

Mode Button

-Press to change the current speaker mode, cycling between all available modes.

Previous Track Button

-Press to play the previous track in a playlist.

-While set to FM Radio Mode, press to decrease the radio by one frequency.

-While set to FM Radio Mode, press and hold for approximately two seconds to automatically search for the previous radio station and save the found stations.

Next Track Button

-Press to play the next track in a playlist.

-While set to FM Radio Mode, press to increase the radio by one frequency.

-While set to FM Radio Mode, press and hold for approximately two seconds to automatically search for the next radio station and save the found stations.

Volume Knob

-Rotate left to decrease the volume.

-Rotate right to increase the volume.

-Press the center to Play/Pause music in BT mode.

-Press and hold the center to disconnect in BT mode.

-While set to FM Radio Mode, press and hold the center to enter automatic channel search.

-While set to FM Radio Mode, Press the center to exit channel search.

Mute Button

-Press to turn mute on.

-Press again to turn mute off.

USING THE SPEAKER

EQ Button

-Press to cycle through available sound effects: 0.Standard, 1.Rock, 2.Popular, 3.Classic, 4.Jazz, 5.Country.

Lamp Button

-Press to turn on the lamp.

-Press to adjust light color: White light, yellow light, white+yellow light, OFF

SOS Button

-Press and hold to activate the alarm; the SOS light on the lower front will flash red and blue.

-Press to turn off the alarm.

Note: The alarm is loud. Please use this function carefully to avoid causing accidents.

WARNING

This product may have fast flashing lights.

Fast flashing lights can cause discomfort and trigger seizures for people with photosensitive epilepsy.

Handle with care. If there is any discomfort or pain, stop use immediately.

Storage Box

-Press the right side (middle position) of the lid to open the storage box.

-Press again to close the storage box.

MAINTENANCE AND CARE

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures or extreme cold.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including, but not limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 for 24/7 support.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai red.