


USER MANUAL

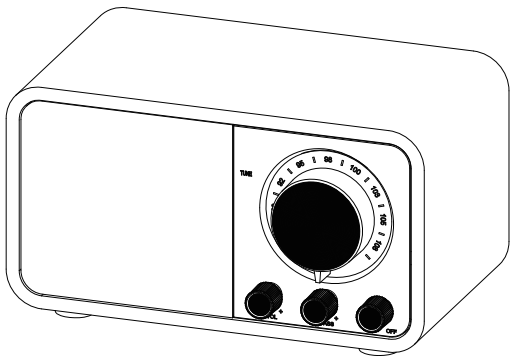


What's in the box?
Speaker*1

Made In China

FCC ID: 2A3ZO-265022A

Notice
WARNING-When using this product, basic precautions should always be followed:
1. Read all the instructions before use.
2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
3. Keep out of direct sunlight and high temperatures. High temperatures may result in damage.
4. Keep the product dry; do not place the product in damp places.
5. Keep out of reach of children.
6. Do not disassemble the product.
7. Avoid dropping the product.
8. Do not continue to charge the speaker over 10 hours.

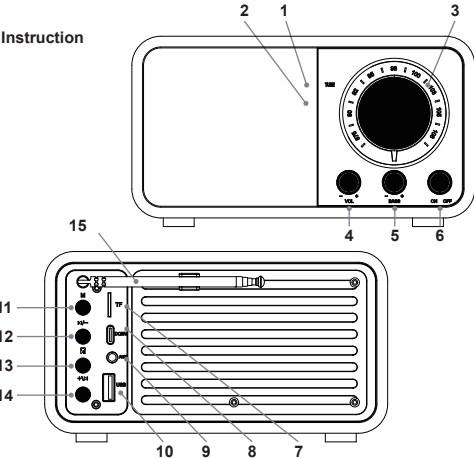

1. LED indicator

2. Mic

3. FM radio station knob

4. Volume button

5. Adjust bass volume button

6. ON/OFF button

7. TF card slot

8. USB-C charging port
9. Aux in

10.USB port

11.Mode switch button

12.Previous Track/Volume Down

13.Play/Pause/Phone Call

14.Next Track/Volume Up

15.Antenna

Function	Operation
Power on	Rotate ON/OFF button to right
Pairing mode	Enter pairing mode automatically after on
Power off	Rotate ON/OFF button to left
Adjust bass volume	Rotate BASS button to right to increase bass Rotate BASS button to left to decrease bass
Volume up	Rotate volume button to right Press and hold ↗ button
Volume down	Rotate volume button to left Press and hold ↘ button
Next track	Short press ↗ button
Previous track	Short press ↘ button
Play/Pause	Short press ⏮ button
Answer a call	Short press ⏮ button
Hang up a call	Short press ⏮ button
Reject a call	Press and hold ⏮ button

Function	Operation
Mode switch	Short press "M" button to switch BT/FM/Aux modes * Aux mode only works when 3.5mm cable in
FM radio search	Rotate the FM radio station knob from clockwise 87.5-108MHZ to search the FM stations.
Switch FM channel	Short press "+" button to next channel Short press "-" button to previous channel
Play/Pause FM	Short press ⏮ button

* Please pull out the antenna and adjust it to the direction of strong signal before use FM function.
* Please put the speaker very close to the window or outdoors when use FM function, which can improve the signal.
* The speaker will be shut off automatically after 5 minutes if there is no Bluetooth devices connected.

Charging the speaker

1. Switch off the speaker before charging.

2. Plug the USB-C cable into the speaker charging port.

3. Plug the other end of charging cable into a computer or power adapter.

4. Plug the power adapter into a power outlet.

5. When charging the LED indicator will be solid on red, and will turn off automatically when fully charged.
- Note: Please charge the speaker battery fully before use.

Pairing the speaker

1. Rotate ON/OFF button to right to turn on the speaker.

2. The device's LED indicator will flash blue.

3. On the mobile device (smartphone/tablet) turn on the BT connection.

4. Select "25716" in the available wireless devices on your mobile device.

Specification
Bluetooth version: 5.3
Working range: up to 10 meters
Speaker: 4Ω 5W
Output power: 5W
Battery: 3.7V, 1200mAh
Input: DC 5V=1A
Charging time: about 3-4 hours
Play time (at 70% volume) with RGB off: 7-9 hours
Pairing name: 25716

FCC STATEMENT:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

