

## CARPLAY CONNECTION

 
---

1. Turn on the phone's Bluetooth to search: Machine Bluetooth device name
2. Click the device Bluetooth name to pair the device.
3. Click the connection match (other USB port can work with carplay)  icon, pop up carplay connecting interface, then connected successfully.

iPhone support carplay wireless and wired connectivity


### Connect to iPhone

Touch  icon, complete connecting, then connected successfully.

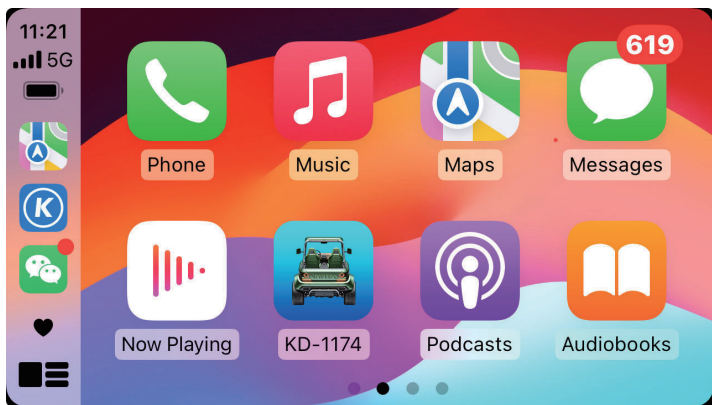

**Note:** When Bluetooth is in use, the carplay link will be interrupted if it is accidentally disconnected.

# BLUETOOTH OPERATION

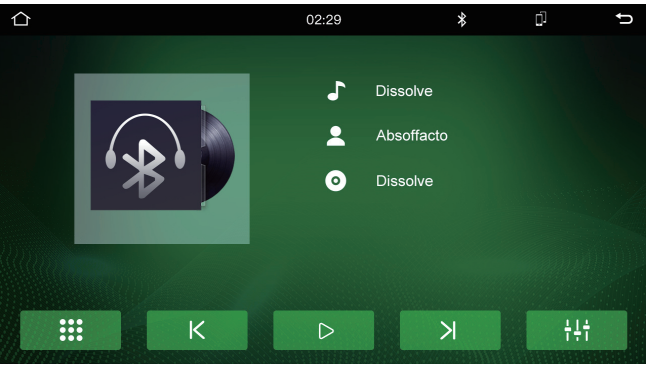 


- ⏮ Previous track
- ⏮ Previous track
- ⏮ / ⏭ Play / Pause
- ⏭ Next track
- ⚙ EQ setting

# BLUETOOTH OPERATION
 
## Amplifier Sound Setting


Enter into sound setting interface,then choose one from the following sound effects:Standard,Pop, Rock and Roll,Jazz,Class,Soft,ect to set or customize sound effect.

## EQ Settings

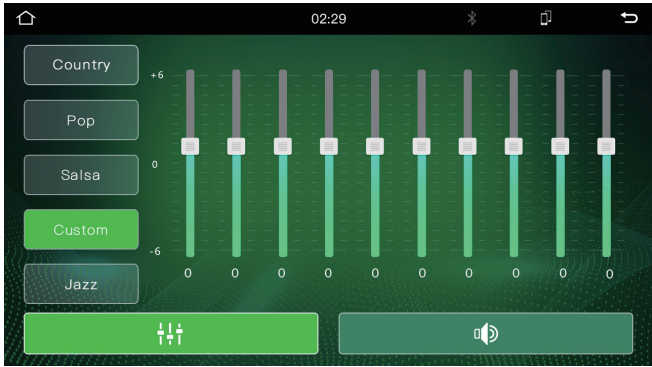

1. Press [ ⏮ ] to enter the Homepage
2. Click [ ⚙ ] to enter the EQ interface.
3. Click on the left column, you can change the different style to adjust.

## Balance Settings

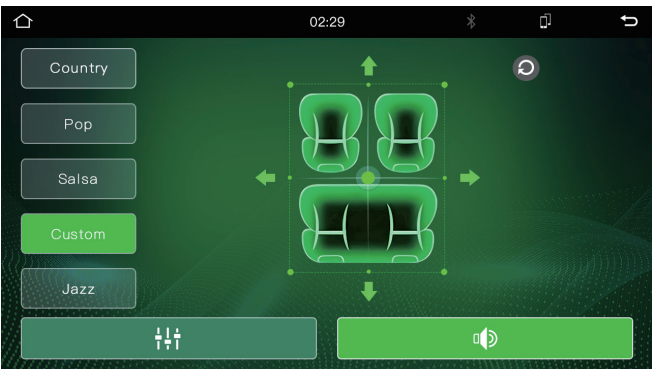 


1. Press [ ⏮ ] to enter the Homepage
2. Click [ ⏮ ] to arrow key to adjust the car seat position.
3. Click on the left column, you can change the different style to adjust.

## SYSTEM SETTING

 ---


Touch the Main system icon to enter the main setting interface,as the below picture:

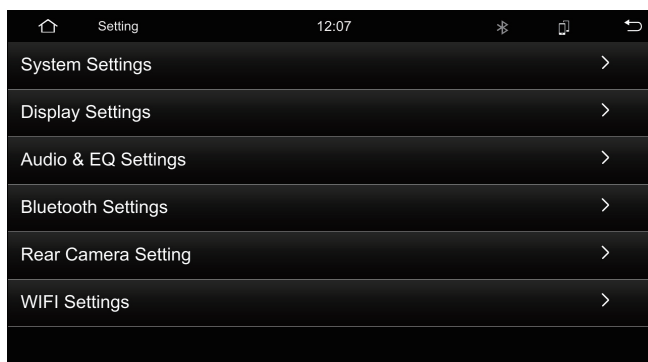

### Brightness Setting:


Adjust screen brightness

 Lighting Detect switch off / on.

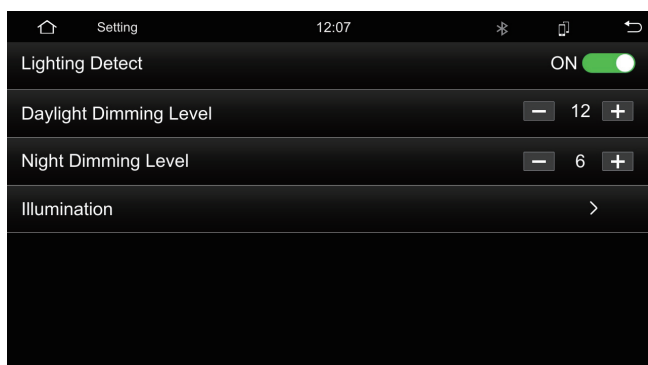

### Language and input method setting:

 The player supports multi-language.End user can choose different language and input method.

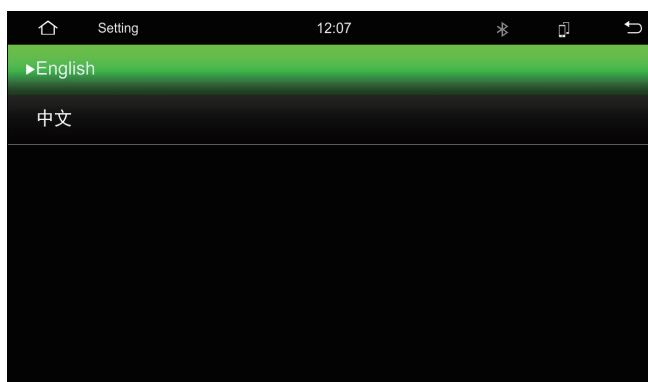

## SYSTEM SETTING

---

### About tablet

 
 
System Update, status, MCU model, SOR version number, Hardware version number, Linux system version number.

### Security Setting:

All the Programs to factory reset.

### Backup and Reset:

If a system problem occurs, the end user can choose to automatically restore or restore factory settings.

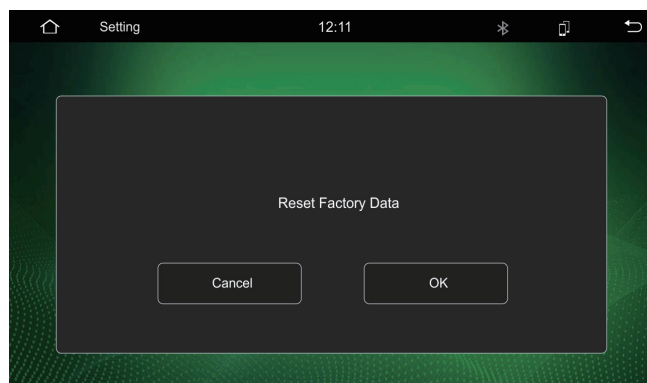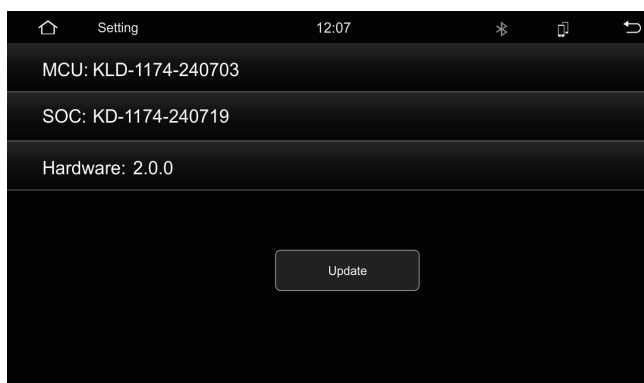

WIRING DIAGRAM

Frequency Range:  
FM:87.5-107.9 MHz  
AM:530-1710KHz

WARNING

POWER SOURCE:DC 12V  
POWER CONSUMPTION:40Wx4

A

15

14

13

12

11

10

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

1. NEAR\_LIGHT

2. R-TURN

3. SPEED PWM\_IN

4. FAR\_LIGHT

5. CAN\_H

6. BRAKE

7. L\_TURN

8. CAN\_L

9. P\_IN

1. ACC

2. REVERSE

3. REAR LEFT SPEAKER+

4. FRONT LEFT SPEAKER+

5. B+

6. ILL

7. REAR LEFT SPEAKER-

8. FRONT LEFT SPEAKER-

9. GND

10. WHL\_K2

11. REAR RIGHT SPEAKER+

12. FRONT RIGHT SPEAKER+

13. NULL

14. WHL\_K1

15. REAR RIGHT SPEAKER-

16. FRONT RIGHT SPEAKER-

C

4

3

2

1

D

4

3

2

1

E

2

1

F

4

3

2

1

H

2

1

I

2

1

C1. F-CAM\_SIGNAL

D1. USB\_GND

E1. GPS

C2. F-CAM\_12V

D2. USB\_DP

E2. GPS\_GND

C3. GND

D3. USB\_DM

C4. NC

D4. USB\_12V

F1. R-CAM\_SIGNAL

H1. RADIO

I1. MIC

F2. R-CAM\_12V

H2. RADIO\_GND

I2. MIC\_GND

F3. GND

F4. NC

9