 
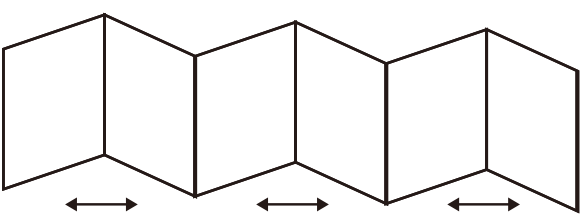 
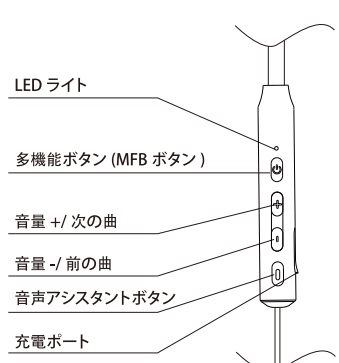 
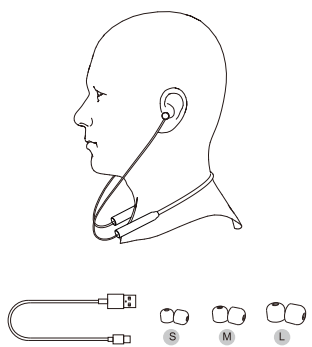 
 
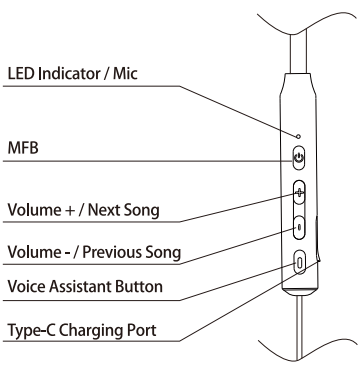 


尺寸: 342x73mm 成品尺寸: 57x75mm

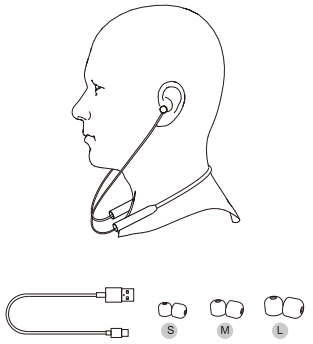

 ワイヤレス イヤホン 取扱説明書 	商品紹介 	着用法  * 着用している間、コントロールボタンが右肩にあることを確認してください。適所にとどまることのできないならば、最も適切なイヤーピースを交換してください。	電源オン 多機能ボタンを 3 秒間長押しします。 電源オフ 多機能ボタンを 5 秒間長押しします。 音楽再生 / 一時停止 多機能ボタンを押して音楽再生になります。 再生してもう一度押すと、音楽が一時停止します。 電話に出る/切る 多機能ボタンを1回押して、着信を受けます。 多機能ボタンをもう一度押して、電話を切ります。 電話拒否 着信する時、多機能ボタンを約 2 秒を長押しして、「Du～」という音が聞こえて、電話が拒否になります。	リダイヤル 多機能ボタンを 2 回押すと、最近通話した最後に電話番号をリダイヤルになります。 音量の調整 音量ボタン「+」を 1 回押して音量を上げる 音量ボタン「-」を 1 回押して音量を下げます。 曲の選択 音量ボタン「+」を 1 秒間長押しすると、次の曲を送ります。 音量ボタン「-」を 1 秒間長押しすると、前の曲を戻ります。 言語を選択 ペアリングモード（電源投入後に他の機器と接続しないことを意味します）で、多機能ボタン「+」を 2 回押すと言語が英語または中国語に変わります（英語の場合は「English selected」という音がします）。 音声ダイヤル 音声アシスタントボタンを1秒間押し続けると、音声アシスタントを有効になります。 注: Samsungの電話を使用している場合は、上記の手順に従って音声アシスタントを呼び出すことができるように、まずアクティブな音声アシスタントのSamsung技術サポートに連絡してください。 ペアリングモードにリセット イヤホンが他の人に接続されている場合、または接続後で音が聞こえない場合は、ペアリングモードにリセットしてみてください。 1. まず、多機能ボタンと音声アシスタントボタンを同時に 5 秒間長押しします。 2. 次に、イヤホンから「Disconnected」と聞こえます。 3. スマホから「W18」の登録を解除してください。 4. スマホに再度ペアリングします。
---	---	--	--	--

ご注意： 1. イヤホンを常温にて保管してください。 2. 損傷を避けるために捨てないでください。 3. 技術者なしでイヤホンを分解しないでください。 4. イヤホンのバッテリーを保護するために、付属の充電ケーブルを使ってください。 5. イヤホンが耳に入らない場合は、交換してください。 小さいイヤークリップまたはイヤークックを装着してください。 6. より多くの売り上げ後のサポートを得るためには、弊社に連絡してください： support@yuwiss.com	ペアリング方法  二台接続 1. イヤホンを最初の機器に接続します。(接続手順は上記の「ペアリング手順」に従うことができます)。 2. 最初のデバイスとの接続に成功したら、最初のデバイスの Bluetooth をオフにすると、W18 イヤホンはペアモードに戻ります。 3. 2 台目のデバイスの Bluetooth を有効にしたら、W18 イヤホンにも接続します。(接続手順は上記の「ペアリング手順」に従うことができます)。 4. 2 台目のデバイスとの接続に成功したら、1 台目のデバイスの Bluetooth をオンにして、W18 イヤホンを選択して再度接続します。接続音が聞こえます。 5. 最後に、2 台のデバイスが同時に W18 イヤホンに接続されています。	Thank You この度は、弊社の製品をお買い上げいただき誠にありがとうございます。 前回、ご注文いただいた商品は問題なく使えますか。もし何か問題がございましたらいつでもご連絡ください。 もし何か不明な点又はご不満等ございましたら、ご返品やレビューをする前に、弊社にご連絡ください。 Support@yuwiss.com 	FAQ Q1: イヤホンがペアリングできない場合はどうなりますか？ A1: 次の操作を行ってください。 1. イヤホンを 10 分間充電してから、再度接続してください。 2. イヤホンが他のデバイスに接続されている可能性があります。リセットしてください。(リセット手順「ペアリングモードにリセット」に従うことができます)。 Q2: イヤホンが落ちてきたらどうしますか？ A2: 次の操作を行ってください。 1. 小さなイヤークリップを変えてください。 2. 耳に正しく装着してください。 Q3: ヘッドセットを充電できない場合はどうなりますか？ A3: 次の操作を行ってください。 1. 安定した電流 (ラップトップなど) でイヤホンを充電してください。 2. イヤホンを 5～30 分間充電してから、再度使用してください。	Q4: ペアリング後に背景/ノイズが多すぎたらどうなりますか？ A4: 次の操作を行ってください。 1. イヤホンを 10 分以上充電してください。 2. イヤホンをスマホに近づけてください。 3. イヤホンを電気または磁気の物体から離してください。 4. イヤホンをペアリングモードに戻し、再接続してください。 仕様: バージョン: Bluetooth V5.0 充電電力: DC 5V 出力 電池種類: 充電式リチウムイオン電池 プロファイルサポート: HSP / HFP / A2DP / AVRCP / APT-X パッケージ内容: 1 x ワイヤレス イヤホン 1 x マイクロ USB ケーブル 1 x 取扱説明書 3 x イヤークリップ
---	---	--	---	---

W18		W18		W18		W18		W18		W18	
Wireless headset User Manual 		Headset overview 		How to wear correctly  *Please make sure the control buttons are on your Right shoulder while wearing them, and please exchange the most suitable ear tips if they cannot stay in place.		Power on Press and hold Multiple-Functional Button (Simplify “MFB”) for 3 seconds. Power off Press and hold MFB for 4 seconds. Play / Pause music After connection, Press MFB once to play and press once again to pause music. Answer / End phone call Press the MFB once to pick up an incoming call. Press the MFB once again to end a phone call. Reject phone calls Long press the MFB for 2 sec until you hear sound “Du~” and the incoming call will be rejected.		Redial last calling number Twice Press MFB quickly to redial last phone number. Turn up / Turn down volume Press the volume button “+” to turn volume up Press the volume button “-” to turn volume down. Next / Previous song Long press the volume button “+” for 1 sec to go to next song. Long press the volume button “-” for 1 sec to go to previous song. Change Language Under pairing mode (Means that do not connect with any devices after power on), and twice press MFB to change language into English or Chinese.		Summon voice assistant Press and hold the voice assistant button for 1 sec to active your voice assistant Please note: Samsung smart phone might require sign up, please contact Samsung official support. Reset to pairing mode If your headphones have been connected by other people or you cannot hear sound from them after connect. Please first try to reset it back to pairing mode: 1.Press “MFB” and Voice Assistant Button at the same time for 5 seconds. 2.Then the headphones will announce “Disconnected”. 3.Clean the connection history of “W18” from your cell phone. 4.Reconnect with your cell phone again.	

Note: 1. Use and keep the headphones at room temperature. 2. Do not throw it away to avoid damage. 3. Do not disassemble the headphones without technician. 4. Use Type-C charging cable that we provided to charge the headphones to protect the battery. 5. If the headphones cannot stay in your ears, please change a smaller ear tip. 6. To get more after-sale supports, contact us at support@yuwiss.com	How to Pair:  1. Turn on the Bluetooth headphones, then the headphones will automatically enter pairing mode. 2. Enable your phone's Bluetooth, search the headphones named "W18" then select and connect with them. Note: If your phone is an Android phone, please allow our headphones to access to your cell phone audio and media audio so that you can use the "W18" normally.	How connect with two devices simultaneously: 1. Connect the headphones with your first device. (Please follow above connection steps "How to Pair") 2. After connected with the first device successfully, turn off the bluetooth of the first device then the W18 headphones will go back to pairing mode. 3. Enable your second device's Bluetooth, then connect with the W18 headphones as well. 4. After connect with second device successfully. Turn on the first device's Bluetooth, and the first device will reconnect the W18 headphones automatically. 5. In the end, you have two devices that connect with W18 headphones.	Thank You Thank you for purchase and support of our products. Your satisfaction is our great honors, therefore we started "Smile project since 2011 Smile project is dedicated to provide the most practical products and the best services to all customers, we have FAQ part to answer the frequent question you may encounter and you also can contact with us by email to get best after-sale sales services Support@yuwiss.com 	FAQ Q1: Bluetooth headphones are unable to pair ? A1: Please do the following: 1. Please charge the headphones for 10 mins first and then connect again. 2. Your headphones probably have been connected by other device, please reset it you can follow the reset steps "Reset to pairing mode Q2: What if the headphones keep falling out ? A2: Please do the following: 1. Change the smaller ear tips or put on an ear hook. 2. Make sure wearing them in your ears correctly. Q3: What if my headphones cannot be charged? A3: Please do the following: 1. Charge the headphones with stable current (Such as laptop) 2. Charge your headphones for 5-10 minutes before use them again.	Q4: Too much background noise after pairing ? A4: Please do the following: 1. Please recharge your headphones for at least 10 mins. 2. Get your headphones closer to your cell phone. 3. Stay your headphones away from electrical or magnetic object 4. Rest the headphones back to pairing mode and reconnect. Specification : Charging power: DC 5V output. Battery type: Rechargeable Li-Ion battery Profile support: HSP/HFP/A2DP/AVRCP/APT-X. Package: 1* Wireless headphones 1* User manual 1* USB charging cable 3* Ear tips
--	--	--	--	--	--

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.