


Massage Chair

Model:U3

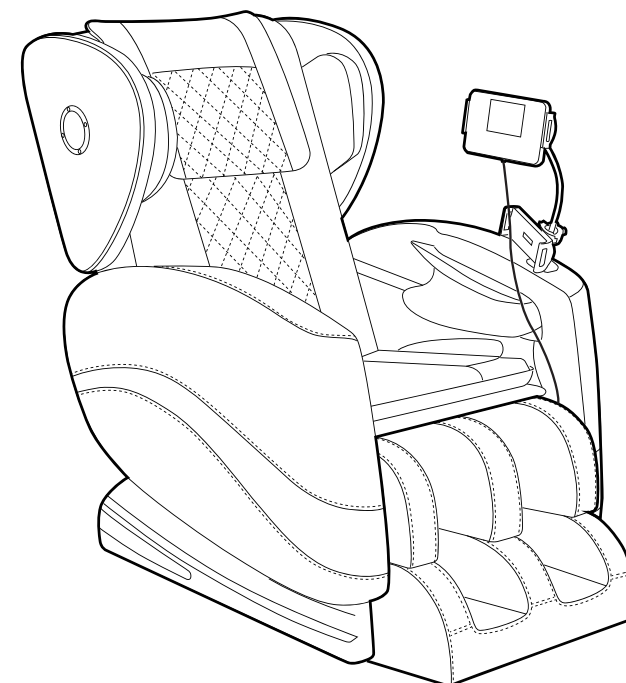

Welcome.

Experience Ultimate Relaxation at Home

Thank you for choosing our massage chair.

We are committed to bringing professional-grade relaxation into your home with high-quality, affordable massage chairs. Your trust and satisfaction drive everything we do. Should you need any assistance, please do not hesitate to contact us.

This manual contains all the instructions you need to properly assemble and safely operate your massage chair. For your safety and to ensure the best possible experience, please read this entire manual carefully before beginning assembly or use.

Prepare yourself for the ultimate relaxation experience — right from the comfort of your home.

Product Registration & Support

Scan to register & activate your warranty.
Watch our assembly video before setup.



SCAN CODE

After-Sales Support

For usage questions, product issues, or spare parts, scan to reach our support team.



SCAN CODE

➤ SPECIFICATIONS

Product Name	Massage chair
Model Number	U3
Rated Voltage	110-220V
Rated Frequency	50Hz/60Hz
Rated Power	80W
Rated Working Time	15min
Security Level	Category I
Executive Standard	GB/T 4706.1-2024 GB/T 4706.10-2024

Note: 15min is the default working time of the massage chair. The working time of the massage chair can be adjusted manually.

➤ WARRANTY

We appreciate your feedback and will do our best to ensure your satisfaction. Within one year of purchase, should the product have any defects, we will provide a refund or resend you a new one. Please email us with your order number or contact the seller via Amazon. Your inquiries will be addressed as soon as possible.

This warranty does not cover normal wear and tear or damage caused by misuse by the buyer.

This warranty only covers orders from authorized Amazon stores and our official website. We are not responsible for any purchases from other distribution channels.

This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.

If you have any questions or concerns, please reach out to us. We hope you enjoy your new massage chair!

➤ TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not turn on / No power	1. Power cord not fully inserted	1. Check and firmly insert the power cord into both the chair and wall outlet
	2. Main power switch is off	2. Turn on the main power switch on the back of the chair
	3. No power at outlet	3. Test the outlet with another device
	4. Fuse blown	4. Replace the fuse with the same type and rating
Remote control not responding	1. Remote cable loose	1. Reconnect the remote control cable firmly and ensure it is fully seated
	2. Remote not powered on	2. Press the Power button on the remote to turn it on
Massage stops suddenly	1. Auto-timer completed (factory default 15 minutes)	1. Press any massage program button to restart
	2. Overheat protection activated	2. Turn off the main power and wait 30 minutes for the chair to cool down before restarting
Airbags not inflating	1. Air tube disconnected or kinked	1. Check all air tube connections, straighten any kinked tubes, and reconnect firmly
	2. Air pump malfunction	2. Contact customer service
Noise during operation	1. Friction between massage rollers and leather cover	These sounds are normal due to mechanical operation and not cause for concern. If the sound suddenly becomes much louder or different, contact customer service
	2. Air pump / inflation sound	
	3. Motor or mechanical parts operating	
Rollers stop during massage	Excessive force applied to massage rollers	Slightly lift your body or adjust your position to reduce pressure on the rollers. The rollers will resume automatically
Backrest or footrest won't raise / recline	Object blocking under backrest or footrest	Clear any objects from under the backrest or footrest, then try again

Table of Contents

Important Safety Instructions	01
Overall Structure	02
Usage Methods	03
Operation Instructions	04
Assembly Instructions	06
Troubleshooting	11
Specifications	12
Warranty	12

▶ IMPORTANT SAFETY INSTRUCTIONS


Read all instructions before using this appliance. **SAVE THESE INSTRUCTIONS.** Household use only. When using an electrical appliance, basic precautions should always be followed, including the following:

DANGER – To reduce the risk of electric shock:


- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:


- 1) Always connect this appliance to a properly grounded electrical outlet with the correct voltage.
- 2) Never operate this appliance if the power cord or plug is damaged, or if the electrical outlet is loose.
- 3) Never plug or unplug the power cord with wet hands.
- 4) After each use and before cleaning, turn off the power and unplug the appliance from the electrical outlet.
- 5) Never use a wet cloth on the power switch, power cord, or any electronic component.
- 6) For indoor use only. Do not use outdoors.
- 7) Do not use this appliance in humid, dusty, greasy, or corrosive environments.
- 8) Do not use this appliance in places where the ambient temperature exceeds 40°C (104°F) or drops below 0°C (32°F).
- 9) Keep this appliance away from direct sunlight, heat sources, and open flames.
- 10) Do not use this appliance during thunderstorms.
- 11) Never drop or insert any object into any opening of the appliance.
- 12) Do not carry flammable or explosive items in your pockets while using this appliance.
- 13) Do not stand on this appliance or place heavy objects on it.
- 14) Do not attempt to repair or adjust any electrical or mechanical parts yourself. Contact an authorized service center for all repairs.
- 15) Do not use attachments or accessories not recommended by the manufacturer.
- 16) Consult a physician before using this appliance if you are pregnant (especially during early stages or immediately after birth), or if you have heart disease, high blood pressure, osteoporosis, spinal fractures, serious circulatory impairment, a pacemaker or other electronic medical device, heat sensitivity, skin disease, fever, malignant tumors, or are under a doctor's care.
- 17) If you feel pain or any physical discomfort, discontinue use of this appliance immediately.
- 18) Do not use this appliance if you are under the influence of alcohol, feel unwell, or have been advised by a physician to rest.
- 19) Close supervision is necessary when this appliance is used by or near children. Do not allow children to play near the appliance, especially during operation.
- 20) Limit each massage session to a maximum of 30 minutes. Discontinue use immediately if pain occurs.

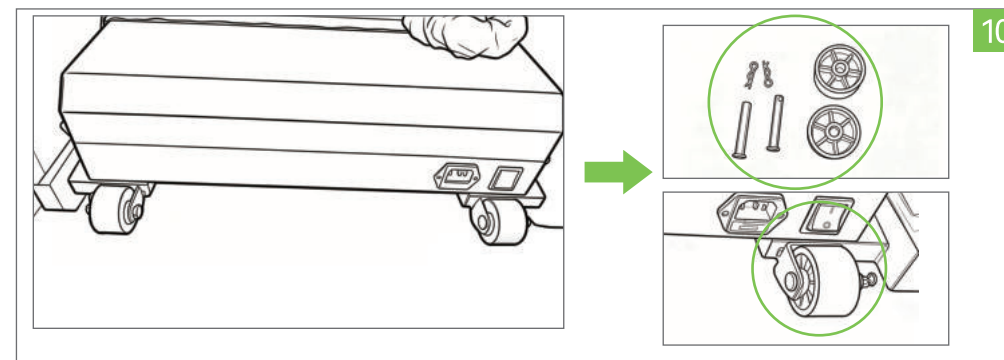


Align each wheel with the hole on the base. Insert the pin through the center hole of the wheel and the base, then secure with the Cotter Pin. Repeat for all wheels (left and right are the same).

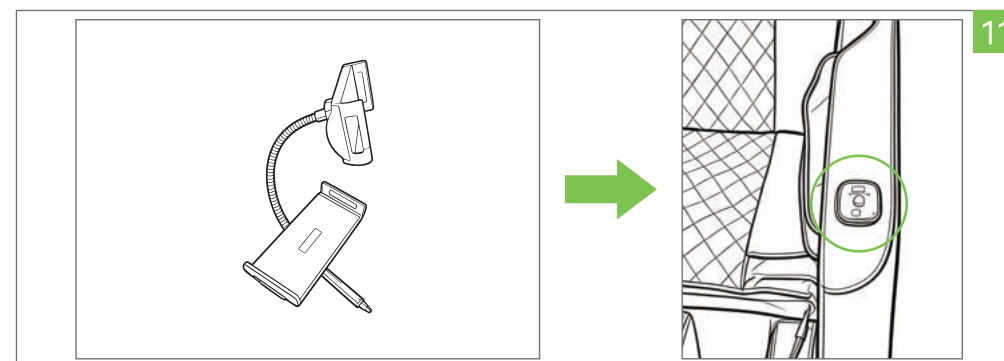

Install the bracket onto the left side of the armrest by aligning it with the corresponding holes and turning it clockwise to secure.

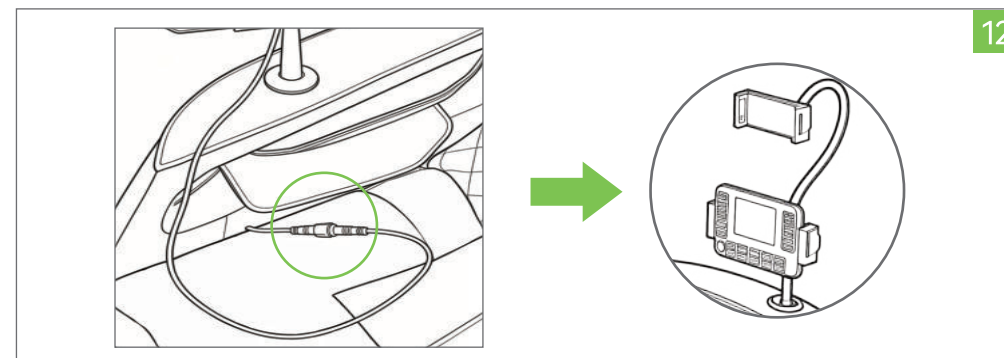


Plug the remote control cable into the matching port on the chair. Place the display screen into the bracket. Ensure it is securely held in place.

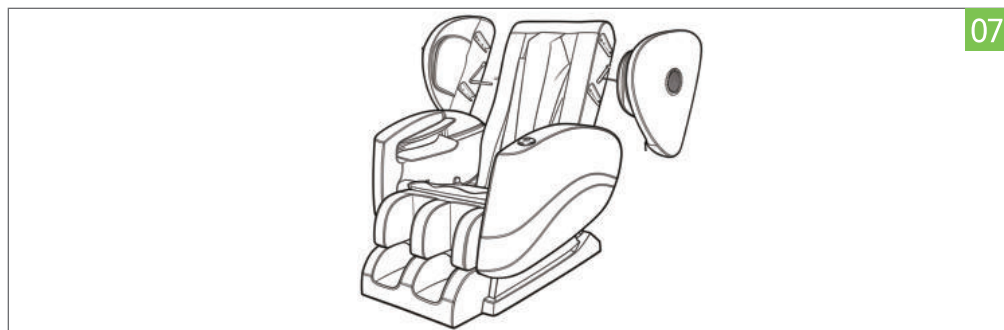


07

Take the left and right shoulder airbag assemblies. Plug the air tube from the shoulder airbag into the matching air port on the upper backrest. Insert firmly until fully connected.
Note: Do not bend or kink air tubes. May block airflow or cause damage.

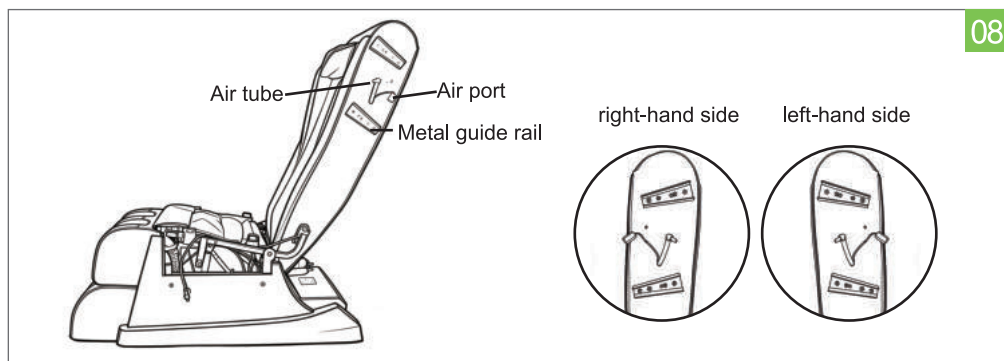

08

Align each shoulder airbag assembly with the two guide tracks on the backrest. Slide the assembly firmly into the tracks until it locks into place. Follow the same steps to install the other shoulder assembly.

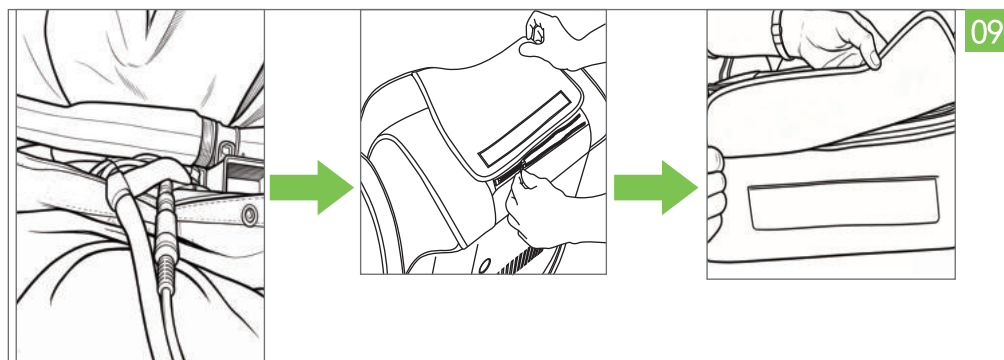


09

Before placing seat cushion, match and connect air tubes and wires by color. Then attach back cape with zipper and headrest cape to Velcro.

Note: Do not bend or kink air tubes. May block airflow or cause damage.


OVERALL STRUCTURE

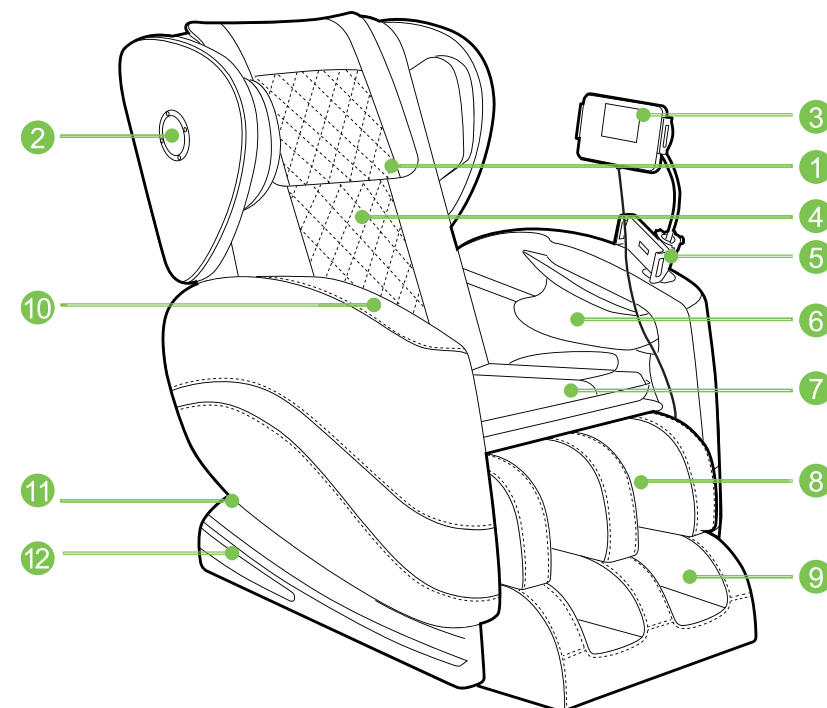

- | | |
|--------------------------|--------------------|
| 1 Shoulder Airbag | 7 Buttocks Massage |
| 2 Bluetooth Speaker | 8 Leg Airbag |
| 3 Large LCD Screen | 9 Foot Massage |
| 4 Back Massage Mechanism | 10 Armrest |
| 5 Phone Holder | 11 Power Switch |
| 6 Hand Airbag | 12 Wheels |


► USAGE METHOD

Connection and installation method

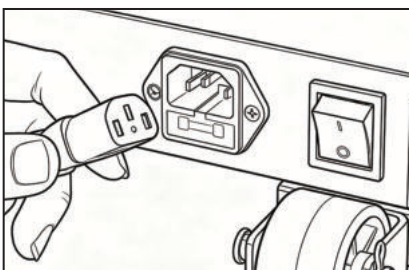

1. First, plug the power cord into the connector outlet located at the back of the massage chair.
2. Then, plug the other end into a properly grounded three-core wall outlet.
3. Press the power switch located on the bottom of the massage chair to turn on the unit.


How to move the massage chair

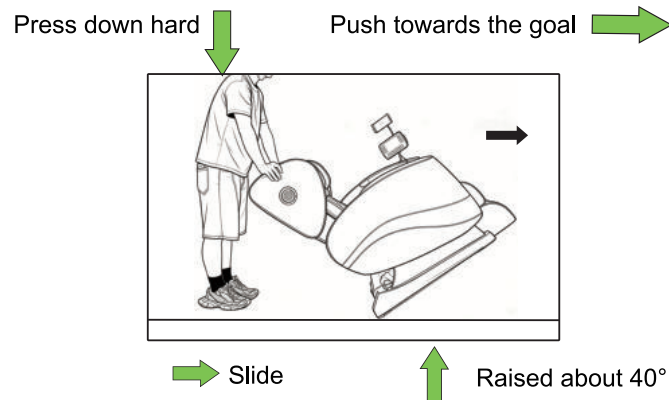


The chair is equipped with two small wheels at the rear bottom for easy maneuvering within a room. Stand behind the chair, press the backrest to raise the front off the floor, and tilt it to approximately 40° for smooth movement.




- Do not apply excessive force when tilting, as over-tilting may damage the chair.
- Never move the chair while a person is seated on it.
- Moving the chair on unprotected floors may cause scratches or damage. It is recommended to place a protective mat underneath the product.

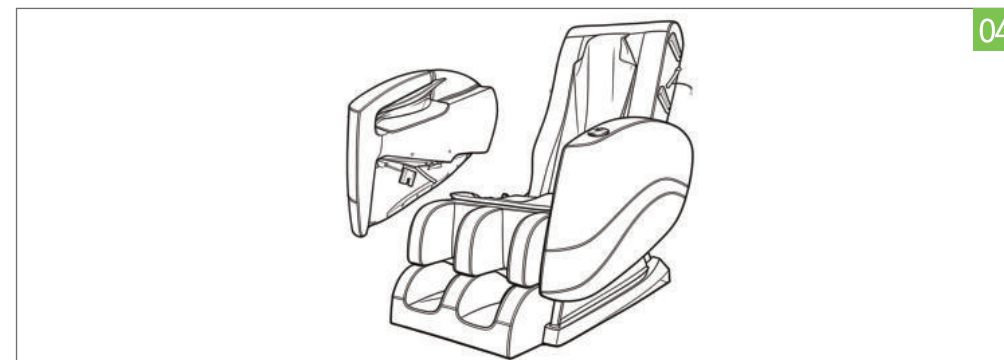

Place the armrest next to the base on one side. Connect the air tube on the armrest to the matching air port on the base. Insert firmly until fully connected.
Note: Do not bend or kink air tubes. May block airflow or cause damage.

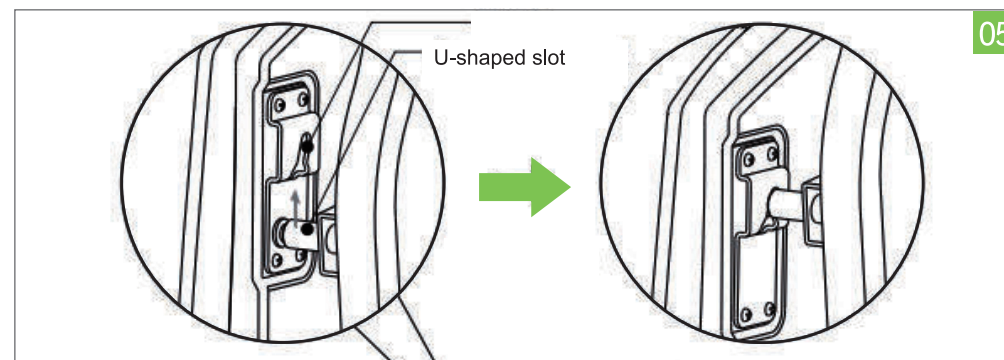


Align the pin on the armrest with the inverted U-shaped slot on the base. Push the armrest downward until the pin snaps into the slot and locks into place.

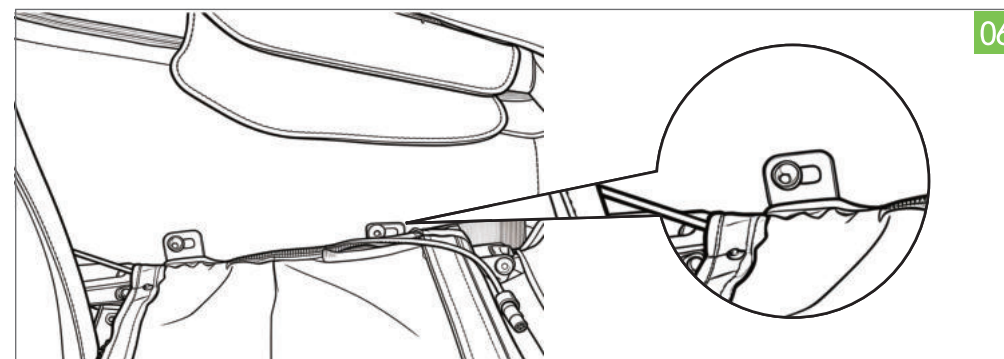



Insert screws from the accessory bag through the two holes on the inner side of the armrest (facing seat). Align front holes first, press down, then tighten rear screws before front screws. Repeat for the other armrest.

OPERATION INSTRUCTIONS

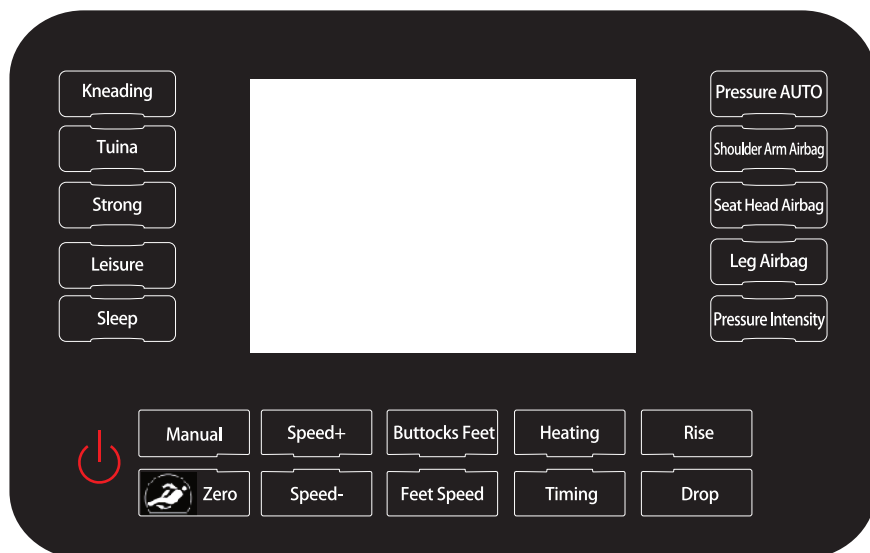


ON/OFF: Turns the massage chair on or off.

The chair will recline to its initial angle. After that, it will run the first automatic program "Leisure Mode" by default, with a default working time of 15 minutes. Press this button again while the chair is operating. The chair will enter standby mode and shut down all functions after 20 seconds.

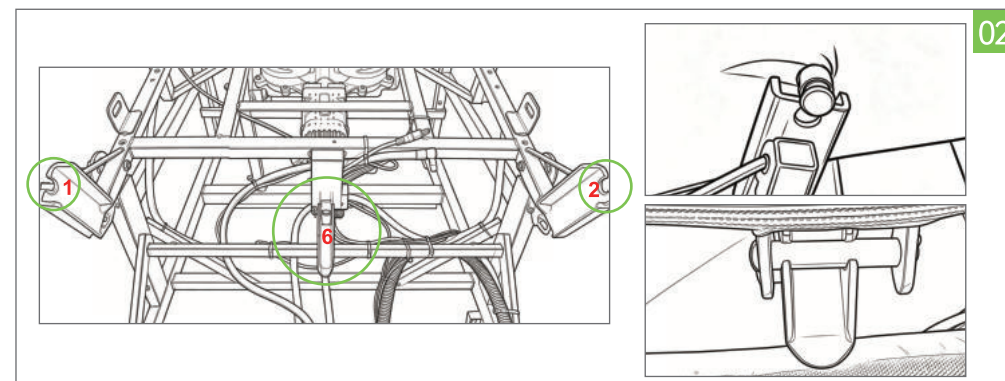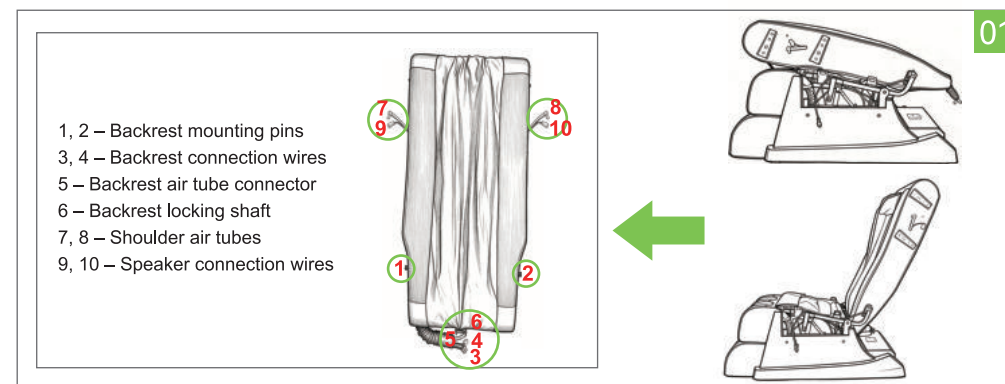

Align the two mounting pins (1 and 2) on the backrest with the U-shaped slot on the base. Insert them into place. Lift the backrest upward. The locking shaft (6) will automatically snap into the locked position (as shown in the right diagram). Ensure the backrest is stable and securely locked upright.

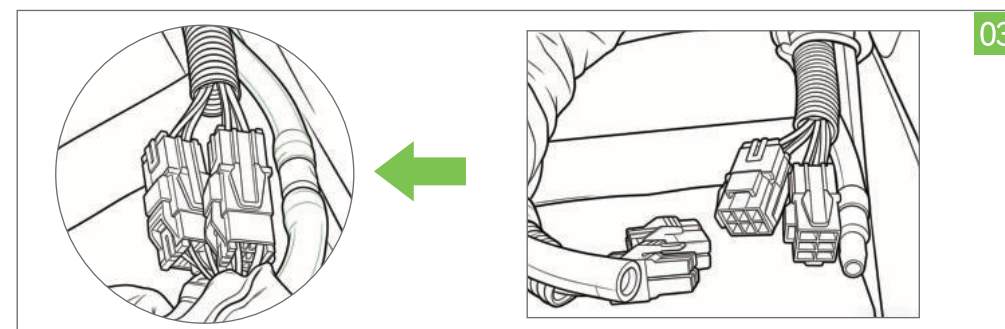

Connect the backrest connection wires (3 and 4) – match by color or connector type. Push until fully connected. Connect the backrest air tube (5) – insert firmly until fully seated.


Button	Description
	Activates kneading massage. Mimics hand kneading to relax tight muscles and improve circulation. Tap to cycle A1/A2/A3 (neck/back): clockwise, counterclockwise, alternating.
	Engages acupressure-style massage. Uses rhythmic pressing to relieve muscle knots and promote energy flow. Tap to cycle b1/b2/b3 (waist/back): clockwise, counterclockwise, alternating.
	Switches to high-intensity mode. Applies deeper pressure for chronic tension and athletic recovery.
	Switches to gentle relaxation mode. Light rolling and vibration ease daily stress without over-stimulation.
	Enters sleep aid mode. Combines zero gravity with soft, rhythmic massage to calm the body.
	Starts automatic full-body airbag massage sequence.
	Press to turn shoulder and arm airbag massage on or off. Airbags inflate and deflate alternately to relieve upper body tension.
	Press to turn seat and head airbag massage on or off. Provides gentle compression to hips and neck to reduce stiffness.
	Press to turn leg and calf airbag massage on or off. Wraps around lower legs, squeezing and releasing to ease fatigue.
	Adjusts overall airbag inflation strength (Levels 1–3).
	Switches automatic mode to manual mode.
	Press to recline into zero gravity position. Press again to return to normal sitting position.
 	Adjusts roller movement speed.
	Activates buttocks and foot massage. Uses rollers or airbags to ease lower body tension.
	Adjusts foot roller rotation speed.
	Turns back and leg heating on or off.
	Sets massage duration: 5, 10, 15, 20, 25, or 30 minutes. Auto-stop when time ends.
	Raises the backrest. Hold for continuous movement; release to lock position.
	Lowens the backrest. Hold for continuous movement; release to lock position.

ASSEMBLY INSTRUCTIONS


Before assembly, unpack all contents and check against the parts list below. Scan the QR code to watch the assembly video.




Box 1: Base & Shoulder Units

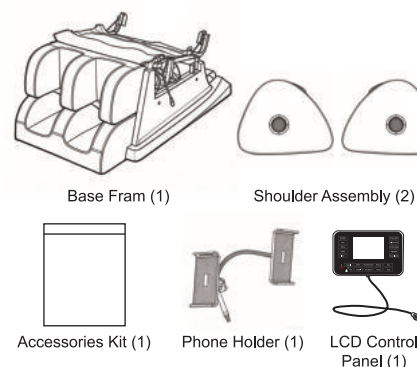

Box 2: Backrest & Armrests

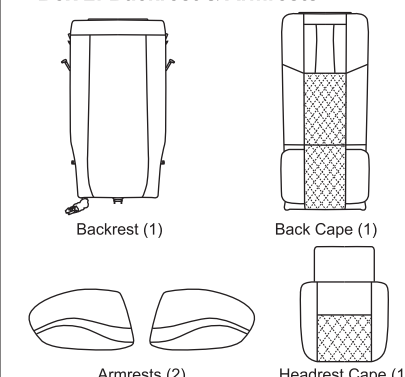

Accessory Kit:

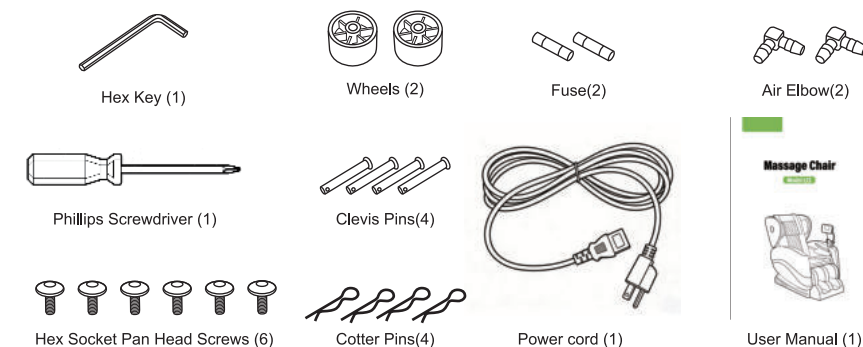

- If any accessories are missing, please email us for replacements. You do not need to return the product, which saves you the hassle.
- Remove all protective wrapping and packing materials. Do not discard packing materials until assembly is fully complete.

FCC Regulations:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.
- Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.