

User 's manual

User Manual




1. Product Safety Information

- (1) This device does not come with a power adapter. When charging is required, please use a power adapter that has obtained a CCC certificate and complies with relevant standards.
- (2) Please use the device within the temperature range of 0°C -35°C, and store the device and accessories within the temperature range of -20°C - +45°C. When the ambient temperature is too high or too low, it may cause device failure.
- (3) Do not expose the device to high temperatures or around heat generating devices such as sunlight, heaters, microwave ovens, ovens or water heaters.
- (4) When charging is complete or not charging, disconnect the charger from the device and unplug the charger from the power outlet.
- (5) The device is equipped with a non-removable built-in battery. Please do not replace the battery by yourself to avoid damaging the device.
- (6) Please dispose of this device, battery and related accessories in accordance with local regulations. Do not dispose of them as domestic waste.
- (7) This device is not waterproof and should not be exposed to water drops or splashes.

Warning: Batteries (battery Packs or Combined Batteries) Must Not Be Exposed to Excessive Heat Such as Sunlight, Fire or Similar Environments;

Note: There is a risk of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

2. Appearance Diagram

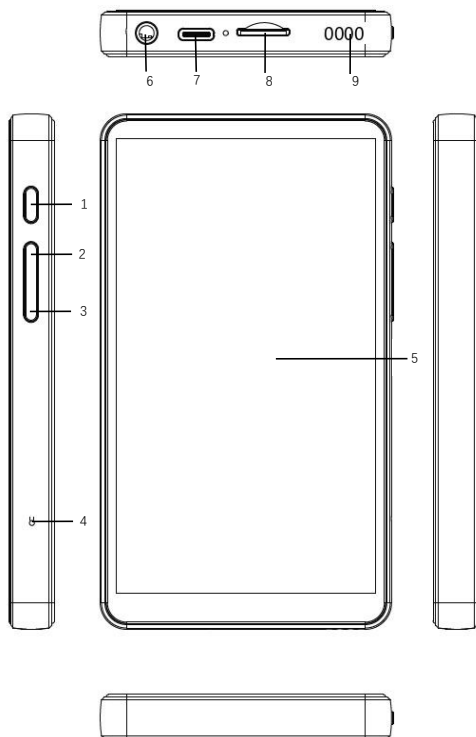

Note: The appearance pictures are subject to the actual product!

3. Button Function

- (1) Power switch
- (2) Volume + key
- (3) Volume-button
- (4) RESET button
- (5) Touch screen display
- (6) Headphone jack
- (7) USB interface
- (8) TF card slot
- (9) External speakers

4.Operation Introduction

4.1 Power On/off/lock Screen

- (1) Power on: In the off state, press and hold the power switch for 3 seconds to turn on the player.
- (2) Shutdown: When the player is powered on, press and hold the power switch for 3 seconds to shut down the player.
- (3) Lock screen: In standby or playback mode, short press the power switch to lock the screen saver button. In screen saver mode, short press again to cancel the screen saver. At this time, touch and slide upward to unlock. (The screen saver will automatically lock after the screen saver)

4.2 Volume Adjustment

When the device is powered on, short press the volume + button to increase the volume, short press the volume - button to decrease the volume. (The volume can also be adjusted directly when the device is locked)

4.3 Introduction to touch gestures

In the main interface state, touch and slide left and right to switch to the main interface; in the file list or menu list state, touch and slide upward to scroll the list down; touch and slide downward to scroll the list up.

4.4 Play/Pause

In the playback state, tap the pause "||" symbol at the bottom of the playback page to pause the current playback. Tap the playback symbol again to resume the current playback.

4.5 Return

When the player is turned on, touch and slide upward from the bottom of the display to pop up the player's return menu;
Tap "◀" to return to the previous layer;
Tap "○" to return to the main interface directly;
Touch "□" to view all background running programs of the player.

4.6 Insert and Remove TF Card

Insert the TF card into the card slot, and the card holder will automatically lock the TF card. When removing the card, push the TF card inwards to the bottom and then let go. The TF card will pop out automatically and you can take the card out.

4.7 Reset System

If the player freezes, please use a fine needle to press the "RESET" reset hole to reset the system and force a restart. If it still cannot be turned on, confirm whether the product is out of power.

5.Function Introduction

5.1 Music

After Turning on the Machine, Enter the Main Interface and Tap the "APlayer Music" Menu. The System Will Then Enter the Music Function. Click the Target File to Start Playing. Click the Next Song on the Playback Page to Switch to the Next Track. Click the Previous Song on the Playback Page to Switch to the Previous Track. The Progress Bar Can Be Used to Fast Forward and Rewind.

5.2 Video

After Turning on the Machine, Enter the Main Interface and Tap the "Video" Menu. The System Will Then Enter the Video Function and Click the Target File to Start Playing.

5.3 Recorder

After the Machine Is Turned On, Enter the Main Interface and Tap the "Recorder" Menu. The System Will Then Enter the Recording Function.

Start Recording: Click the Red Start Recording Button on the Recording Interface to Start Recording;

Stop Recording: During Recording, Tap the Stop Button "■" to Stop Recording. At This Time, Tap the "Save" Function to Save the Recorded File.

Recording Playback: On the Stop Recording Page, Tap the File Preview Button to Enter the Recording File Page, and Tap the Target File to Start Playing.

5.4 Radio

After Turning on the Machine, Enter the Main Interface and Touch the "Radio" Menu. The System Will Then Enter the FM Radio Function and Start Receiving Radio Stations.

Note: To Use the FM Radio Function, You Must Plug in Headphones to Receive Channels.

5.5 APP download and installation

This machine supports the download and installation of APP. After entering the "Google Play Store", you can search for the APP you want to install, click Download, and install according to the guidelines. Note: To download and install the APP, you need to connect to a WiFi network.

Note: You Need to Connect to a WiFi Network to Download and Install the APP.

6.System Settings

After Turning on the Machine, Enter the Main Interface and Tap the "Settings" Menu to Enter the System Settings Function. After Entering, You Can Set WLAN, Bluetooth, Memory, Applications and Notifications, Battery, Display, Sound, Storage, Security, Automatic Shutdown, Scheduled Power on and Off, System and Other Settings.

6.1 WLAN

This Device Supports Wireless WiFi Connection. After Connecting to the WiFi Network, You Can Download and Install Software APK, Play Online, Etc. Enter the WLAN Option in the Settings to Set WiFi on or Off.

WiFi Connection: First Turn on WLAN, Then the Device Will Automatically Search for WiFi Signals. Available WiFi Devices Will Appear in the WiFi Device List. After Sliding up or Down to Find the Target Device, Simply Touch It to Enter the WiFi Connection Function.

After WiFi Is Connected, You Can Browse the Web, Download and Install Software APK, and Play Music or Videos Online.

6.2 Bluetooth

This Machine Supports Bluetooth Connection Function. Enter the Bluetooth Option in the Settings to Set the Bluetooth Function on or Off;

Bluetooth Connection: First Turn on the Bluetooth Function. The Device Will Automatically Search for Bluetooth Devices. Available Bluetooth Devices Will Appear in the Bluetooth Device List. After Sliding up or Down to Find the Target Device, Simply Touch It to Enter the Bluetooth Connection Function.

6.3 Memory

After Entering, You Can View the Usage of the Local Running Memory.

6.4 Battery

After Entering, You Can View the Battery Usage of This Machine, and the Battery Power Can Be Displayed as a Percentage in the Status Bar.

6.5 Display

After Entering, You Can Adjust the Brightness of the Machine, Night Display Mode,

Wallpaper Change, Sleep Time Selection, Automatic Screen Rotation, Font Size Adjustment, Display Size Adjustment and Screen Saver Selection. You Can Set It According to Your Needs.

6.6 Sound

After Entering, You Can Adjust the Playback Volume, Alarm Volume and Notification Volume of the Device.

6.7 Storage

After Entering, You Can View the Storage Usage of the Machine and the Remaining Storage Space.

6.8 Security

You Can Set the Power-On Password of This Machine to Ensure the Safety of Use. You Can Set It According to Your Needs.

Note: After the Password or Pattern Password Function Is Turned On, Please Remember the Password; Otherwise It Will Not Be Usable.

6.9 Automatic Shutdown

You Can Set the Automatic Shutdown Time When the Machine Is Idle. The Options Are: Never Shut Down, 5 Minutes, 10 Minutes, 15 Minutes, and 20 Minutes. You Can Set It According to Your Needs. After Setting It, When the Player Is in Standby Mode, It Will Automatically Shut Down to Save Power According to the Set Shutdown Time.

6.10 Timer Power On/off

The Machine Can Be Turned on and Off at a Scheduled Time. It Can Be Set as Needed.

6.11 System

After Entering, There Are Six Menu Options: Language and Input Method, Date and Time, Developer Options, System Update, Restore Factory Settings, and About Device.

Language and Input Method: This Machine Supports Multiple Languages. You Can Set the Language of the System After Entering. You Can Also Modify the Input Method and Keyboard and Switch According to Your Needs.

Date and Time: You Can Set the Time and Date of This Machine, and You Can Choose According to Different Time Zones;

System Update: This Machine Supports Online System Upgrade. When New System Firmware Is Released, You Can Enter the System Update Menu to Check and Update.

Restore Factory Settings: Restore the Player to Factory Settings;

Note: Restoring to Factory Settings Will Delete All Data on the Player and Restore It to Factory Settings. Please Operate with Caution!

About Device: Enter to View the Software Version Information of This Device.

● Charge

Plug the TYPE C end of the USB cable into the USB port of the player, and the large end into the USB port of the computer or charger. The player battery level will display the charging status during charging. When fully charged, the battery level will display full and stop. The battery can be fully charged in about 3.5 hours.

Note: The selected charger specifications must meet the following requirements:

Input: AC 110-240V 50/60Hz **Max:**150mA

Output: DC 5V/1A

● Connecting to a computer

Use the USB cable that comes with the player, insert the small end of the USB cable into the USB port of the player, and the other end of the USB cable into the USB port of the computer. At this time, the player battery displays the charging symbol and enters the computer reading state. After

opening "My Computer" on the computer, you can view the removable disk device; after double-clicking to open the removable disk device, you can view the memory of the machine and organize or copy files. Please use the normal method to remove the removable disk to exit the USB disk mode to prevent data loss.

7. Attachments

This product includes the following host and accessories. If any of them are missing during purchase, please contact your local dealer.

- | | |
|----------------------------------|-------|
| 1. Host | 1 pcs |
| 2. User manual and warranty card | 1 pcs |
| 3. USB cable | 1 pcs |
| 4. Transparent protective cover | 1 pcs |

Note: If there are any changes to the above accessories, please refer to the actual items in the packaging box!

8. Technical Specifications

Product Name	Digital music player
Dimensions	125mm×78mm×11mm
Display	4.94-inch IPS display resolution: 480×960
TP	G+FF
operating system	Android 8.1
CPU frequency	Octa core 2.0G
Memory	3+32G
Expanded Memory	Support external TF card to expand memory
trumpet	Support external speakers
Bluetooth	4.1 Launch
WiFi	Support dual-mode 2.4G/5G
Language support	Support multiple languages
Battery	676074 5000mAh
Audio Format	MP3、WAV、APE、FLAC、AAC
Video Format	AVI、MKV、RMVB、MP4、MPG、MOV
Image Format	JPEG、BMP、GIF、PNG
Recording Format	AMR
microphone	Built-in silicon microphone
Headphone output	φ3.5 * 1 standard (max 125mW/32Ω)
USB interface	TYPE-C
Charging time	About 4 hours (using 5V 1A charger)
Operating temperature	-5℃→ 45℃
Supported operating systems	WINDOWS XP/VISTA/WINDOWS 10/Windows11 and above

Statement

Please be sure to back up your data during use. Our company is not responsible for the loss or damage of personal data caused by software or hardware misoperation, product maintenance, battery replacement or other unexpected circumstances, nor is it responsible for other indirect losses caused by this. At the same time, we cannot control the misunderstandings that users may have about this manual. Therefore, our company will not be responsible for accidental damage that may occur during the use of this manual, and will not be responsible for third-party claims caused by the use of the product. (The system software of this machine will occupy a part of the capacity space, and it is normal to have a slight difference from the nominal capacity)

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

User 's manual

使用说明书



一．产品安全信息

(1) 本设备不带电源适配器，需充电时，请配套使用已获CCC证书并符合相关标准的电源适配器。

(2) 请在温度0℃-35℃范围内使用本设备，并在温度-20℃- +45℃范围内存放设备及配件，当环境温度过高或过低时，可能会引起设备故障。

(3) 请勿将设备暴露在高温处或发热设备周围，如日照、取暖器、微波炉、烤箱或热水器等。

(4) 当充电完毕或未充电时，请断开充电器与设备的连接并从电源插座上拔掉充电器。

(5) 设备配有不可拆卸的内置电池，请勿自行更换电池，以免损坏设备。


(6) 请按照当地规定处理本设备、电池及相关配件，不可将他们作为生活垃圾处理。

(7) 本机没有防水功能，不应遭受水滴或水溅。

警告：电池（电池包或组合电池）不得暴露在诸如日照、火烤或类似过热的环境中；

注意：如果电池更换不当会有爆炸的危险，只能用同样类型或等效类型的电池来更换；

二．外型图示说明

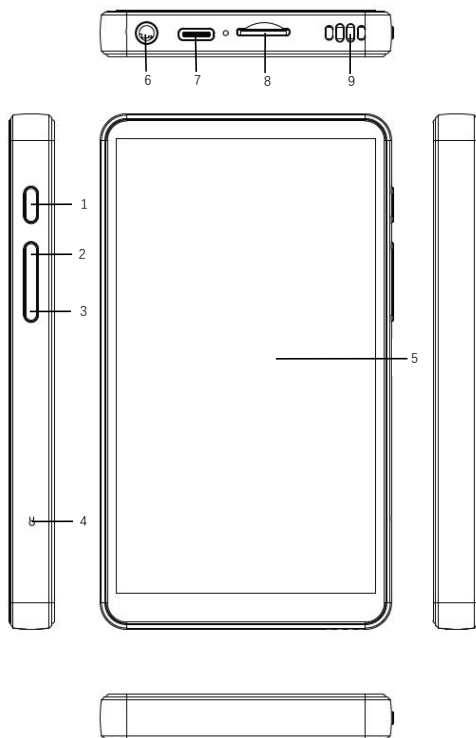

注:外型图片以实物为准!

三. 按键功能

- (1) 电源开关
- (2) 音量+键
- (3) 音量-键
- (4) RESET复位键
- (5) 触摸显示屏
- (6) 耳机接口
- (7) USB接口
- (9) TF卡槽
- (9) 外音喇叭

四. 操作介绍

4.1 开机/关机/锁屏

- (4) 开机：关机状态下，长按电源开关 3 秒后，播放器开机。
- (5) 关机：开机状态下，长按电源开关 3 秒后，播放器关机。
- (6) 锁屏：在待机或播放状态下，短按电源开关为屏保按键锁定，在屏保状态再次短按为解除屏保，此时向上轻触滑动为解锁。（屏保后会自动上锁）

4.2 音量调节

在开机状态下，短按音量+键，是为音量增大，短按音量-键，是为音量减小。
（本机在锁定状态下也可以直接调节音量）

4.3 触摸手势介绍

主界面状态下，左右轻触滑动为主界面切换；在文件列表或菜单列表状态下，向上轻触滑动为列表向下滚动；向下轻触滑动为列表向上滚动。

4.4 播放/暂停

在播放状态下，轻触播放页面下方的暂停“||”符号，即可暂停当前播放。再

次轻触播放符号，即可恢复当前播放。

4.5 返回

播放器在开机状态下，从显示屏的最下方向上轻触滑动即可弹出播放器的返回菜单；

轻触“◀”实现返回上一层；

轻触“○”直接可返回至主界面；

轻触“□”进入查看播放器的所有后台运行程序。

4.6 插拔TF卡

将TF卡插入卡槽，卡座自动锁住TF卡。拔除时将TF卡向内推到底再松手，TF卡自动弹出一截，即可将卡取出。

4.7 复位系统

如果播放器死机，请使用细针按“RESET”复位孔即可复位系统强制重启，如果依然不能开机，确认是否产品没电。

五. 功能介绍

5.1 音乐

本机开机后进入主界面，轻触“APlayer音乐”菜单，此时系统进入音乐功能，点击目标文件即可开始播放；操作播放页面的下一曲即可实现切换下一个曲目；操作播放页面的上一曲即可实现切换上一个曲目；操作进度条可实现快进以及快退功能。

5.2 视频

本机开机后进入主界面，轻触“视频”菜单，此时系统进入视频功能，点击目标文件即可开始播放。

5.3 录音机

本机开机后进入主界面，轻触“录音机”菜单，此时系统进入录音功能；

开始录音：在录音界面直接点击红色的录音开始按钮，即可开始录音；

停止录音：在录音过程中，轻触停止键“■”即可停止录音，此时轻触“保存”功能后，所录制的文件即可保存；

录音播放：在停止录音页面，轻触文件预览按钮进入录音文件页面，轻触目标文件开始播放。

5.4 收音机

本机开机后进入主界面，轻触“收音机”菜单，此时系统进入FM 收音功能，即可开始收音广播电台。

注：使用FM 收音机功能必须要插入耳机才可收台。

5.5 APP下载与安装

本机支持APP的下载与安装，进入“应用宝”后可以搜索您想要安装的APP，点击下载，并根据指引进行安装。

注：下载安装APP需要连接WiFi网络。

六. 系统设置

本机开机后进入主界面，轻触“设置”菜单，此时进入系统设置功能，进入后可设置WLAN、蓝牙、内存、应用和通知、电池、显示、声音、存储、安全性、自动关机、定时开关机、系统等设置。

6.1 WLAN

本机支持无线 WiFi 连接功能，连接上WiFi网络后，可实现软件APK的下载与安装、在线播放等操作。设置中进入WLAN 选项，可设置 WiFi 的开启或关闭。

WiFi 连接：首先将 WLAN 打开，此时设备将自动进行 WiFi 信号搜索，搜索到可用的WiFi 设备将出现在 WiFi 设备列表中，向上或向下轻触滑动找到目标设备后，直接轻触即可进入 WiFi 连接功能。

WiFi 连接后，即可实现上网浏览网页、软件APK的下载与安装以及在线播放音乐或视频功能。

6.2 蓝牙

本机支持蓝牙连接功能，设置中进入蓝牙选项，可设置蓝牙功能的开启或关闭；

蓝牙连接：首先将蓝牙功能打开，此时设备将自动进行蓝牙设备搜索，搜索到可用的蓝牙设备将出现在蓝牙设备列表中，向上或向下轻触滑动找到目标设备后，直接轻触即可进入蓝牙连接功能。

6.3 内存

进入后可查看本机运行内存的使用情况。

6.4 电池

进入后可查看本机电池电量的使用情况，可操作电池电量在状态栏中百分比显示。

6.5 显示

进入后可调节本机的亮度、夜间显示模式、壁纸的更换、休眠时间的选择、自动旋转屏幕、字体大小的调节、显示大小的调节以及屏保的选择。可根据需要进行设置。

6.6 声音

进入后可调节本机播放音量、闹钟音量以及通知的音量。

6.7 存储

进入后可查看本机存储使用情况以及存储剩余空间查看。

6.8 安全性

可设置本机的开机密码，确保使用的安全性，可根据需要自行设置。

注：密码或图案密码功能开启后，请牢记密码；否则将无法使用。

6.9 自动关机

可设置本机空闲时的自动关机时间，分别有：永不关机、5分钟、10分钟、15分钟、20分钟可选，可根据需要进行设置，设置好后，当播放器处于待机状态下，将会根据所设置好的关机时间进行自动省电关机。

6.10 定时开关机

可对本机进行定时开关机。可根据需要进行设置。

6.11 系统

进入后分别有语言和输入法、日期和时间、开发者选项、系统更新、恢复出厂设置、关于设备六个菜单选项。

语言和输入法：本机支持多国语言，进入后可设置本机系统的语言。也可修改输入法和键盘，根据自己的需要进行修改切换。

日期和时间：可设置本机的时间和日期，可根据不同的时区进行选择；

系统更新：本机支持在线升级更新系统，当有新的系统固件发布时，可进入到系

统更新菜单进行检查更新；

恢复出厂设置：可将播放器恢复到出厂时的设置；

注：恢复出厂设置时会删除播放器上的所有数据并恢复到出厂时的设置，请谨慎操作！

关于设备：进入可查看本机的软件版本信息。

● 充电

将随机配送的USB线的TYPE C头一端插入播放器的USB 接口处，大头一端插入电脑或充电器的USB 接口，充电时播放器电池电量显示充电状态，充满后电池电量显示满格并停止走动，大约 3.5小时后电池电量可充满。

注：所选用的充电器规格必须符合以下要求：

输入：AC 110-240V 50/60Hz Max:150mA

输出：DC 5V/1A

● 连接电脑

使用随机配送的 USB 线，将 USB 线的小头一端插入播放器的 USB 接口，另一端大头USB 插入电脑的USB 接口。此时播放器电池显示充电符号并进入到电脑读取状态，在电脑上打开“我的电脑”后即可查看到可移动磁盘设备；双击打开可移动磁盘设备后，即可查看本机的内存并整理或拷贝文件，退出 U 盘模式请用正常的方法移除可移动磁盘，以防止数据丢失。

七 . 附件

本产品包括以下主机及附件，购买时如有缺少，请于当地经销商联系。

5. 主机	1支
6. 用户手册及保修卡	1本
7. USB连接线	1条
8. 保护套	1个

注：以上附件如有变更，请以包装盒内实物为准！

八．技术规格

产品名称	数码音乐播放器
外形尺寸	125mm×78mm×11mm
显示屏	4.94 英寸IPS 显示屏 分辨率：480×960
TP	G+FF
操作系统	Android 8.1
CPU主频	Octa core 2.0G
内存	3+32G
扩展内存	支持外插TF卡扩展内存
喇叭	支持外音喇叭
蓝牙	4.1发射
WiFi	支持双制式2.4G/5G
语言支持	支持多国语言
电池	676074 5000mAh
音频格式	MP3、WAV、APE、FLAC、AAC
视频格式	AVI、MKV、RMVB、MP4、MPG、MOV
图片格式	JPEG、BMP、GIF、PNG
录音格式	AMR
麦克风	内置硅麦麦克风
耳机输出	φ3.5 * 1 standard (max 125mW/32Ω)
USB接口	TYPE-C
充电时间	约3.5小时（使用5V 1A充电器）
工作温度	-5℃→45℃
支持操作系统	WINDOWS XP/VISTA/WINDOWS 10/Windows11 及以上

有毒有害物质或元素名称及含量标识格式

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳料、结构件	○	○	○	×	○	○
PCBA 及处理器	×	○	○	○	○	○
显示屏	×	○	○	○	○	○
USB 线	○	○	○	○	○	○
电池	○	○	○	○	○	○
包装材料	○	○	○	○	○	○
○：表示该有毒有害物质在该部件所有均质材料中含量均在 GB/T26572-2011 规定的限量要求以下。 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572-2011 规定的限量要求。 （企业可以在此处，根据实际情况对表中打“×”的技术原因进一步说明）						

产品标识中标示的环保期限，在对应的期限内正常使用的前提下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害。

注：本产品 90% 的部件采用无毒无害的环保材料制造，含有毒有害物质或元素的部件皆因全球发展水平限制而无法实现有毒有害物质或元素的替代。

声 明

请用户务必在使用过程中自行对资料备份,本公司对于因软件、硬件的误操作,产品维修,电池更换或其它意外情况所引起的个人数据资料的丢失和损坏不负任何责任,也不对由此造成的其它间接损失负责.同时我们无法控制用户对本手册可能造成的误解,因此,本公司将不对在使用本手册过程中可能出现的意外损坏负责,并不对因使用产品而引起的第三方索赔负责。（本机系统软件会占一部分容量空间，与标称容量会有一点差异属于正常现象）

九．产品三包服务条例

一、三包服务期限自购买之日起，以发票开具日期为准。

二、产品的三包服务期限：主机 15 天内保换，十二个月保修，线材配件一个月保换，随产品附送配件不在保修范围内。

三、产品在三包期内正常使用和维护下，由本机元器件所引发的故障,由经销商技术人员检验确认，可免费维修及更换零配件。

四、以上保修内容仅限于三包服务条例所写的三包期内所提供的服务。如有问题请在相应的时间内与经销商联系。

五、以下情况不在三包范围内：

1. 非正品；

2. 超过三包有效期的、涂改三包凭证，序列号与产品本身号码不符，及产品本身无序列号；

3. 一切人为因素损坏，包括非正常情况下使用，未按说明书使用和保管所引起的损坏等；

4. 用户私自拆机，自行维修，改装或者未经制造商授权过的单位维修过的，没有保修卡及有效单据的；

5. 因不可抗力造成的损坏；

6. 购机后自行运输或在恶劣的环境下（油烟、热、尘土液体等）使用产生的故障。

六、制造商不对用户的特殊、意外或间接损失负责。

七、已经停产的产品，可能因配件不足而无法修复，这种情况下，对保修范围内的产品允许置换同等价值其他产品，不在保修范围内产品将无法提供维修服务。

八、制造商对偶然发生的或随之而来的损坏或预计会得到的利益或利润的损失，由于使用或无法使用产品导致的工作停止或数据的损失或损坏等情况不负法律责任。同时，对故障产品的维修过程会造成产品内存储的内容丢失，请客户事先备份，制造商不负责赔偿使用或维修过程中任何因数据丢失而导致的损失，也不对由此而造成的其它间接损失负责。

九、本三包服务条例所有条例解释权归制造商所有。

十、需要送修时将产品及其包装盒与填写完整的保修卡及购货证明（如发票、收据），一起送往或邮寄到制造商指定地区进行维修服务，运输费由用户承担。

本保修条例仅适用于中国大陆。

产品三包凭证：

用户信息：

姓名 _____ 电话 _____

联系地址 _____

SN号 _____

故障描述 _____

购买渠道 _____

订单编号 _____

产品资料



如需售后服务，请先及时联系售后渠道客服或电话联系我们的售后客服解答。
具体操作时，请详细填写此卡，并随同产品一起寄回。