

OPERATION MANUAL

FCC ID: 2A4IN-SX-5513

BT/USB/TF/MMC/MP3/WMA PLAYER WITH RADIO RECEIVER




This picture is for reference only,
Please take the actual prototype

Panel function

1. Switch button Up and down tuning knob Function conversion key
2. Volume knob Sound adjustment
3. SD card
4. Answer button Band switching
5. Hang up / time
6. Pause playback
7. Browse Play
8. Single cycle
9. Shuffle Playback
10. Decrease by ten
11. Add ten to the front
12. USB
13. AUX
14. RESET

3. Rapid Track Select Function

If there're hundreds of songs in 1 USB drive, suppose you want to listen to the 100th track, you won't have to press 100 times to get there. Under Music Mode, short press BAND/APS to enter rapid track select status. 4 zeros will display on the LED panel, the 1st zero on the right blinks; adjust the VOL button to get the single digit. After that, press BAND/APS to get the cursor to tens digit, also adjust the VOL button to the tens digit. Similarly, press BAND/APS to get the cursor to hundreds digit, adjust the VOL button to it, press the middle of VOL to confirm, voila, you get to listen to the 100th track.

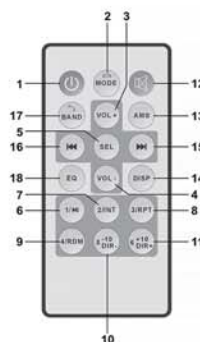

Remote function

- | | |
|-----------------------------------|--|
| 1. The power switch | 2. Mode conversion/Phone Hand up |
| 3. Volume increase | 4. Volume reduction |
| 5. Multi functional selection Key | 6,7,8,9,10,11: digital key |
| 12. Mute function | 13. Search for stations a AMS |
| 14. Sound settings DISP | 15. Scan feature selections |
| 16. Scan feature selections | 17. Band conversion BAND/Phone Pick up |
| 18. Equal loudness | |

WELCOME

Thank you for purchasing our products, Read all "manual" to understand the correct operation of this type product method, Keep reading after the completion of, To service future reference.

Important Reminder

If your car in direct sunlight where, Cause excessive heat in side the car, Should enable the unit to cool before use.

If your car on the outside a very cold place, Should first start the car, To betemperature before using the machine.

If the machine does not power supply, Please check the connection status. If everything is normal, Check the fuse.

Play USB, Please be careful not to crash, Cause the machine to prevent damage, For a long time when not, Remove the USB or TF card.

To prevent a short circuit, Do not place metal objects (Screws, conins, tools) and other components falling into the device.

To protect traffic safety, Please do not concentrate on driving the process of regulating the product.

Before installatiion, Refer to wiring diagram. Note that connection, Avoid short circuit.

The unit accepts music format MP3/ WMA, Do not download pictures and video files to play on this unit, Or can not play or slowdown play back, If the current player is the MP3 format, Display shows MP3, If the WMA format will be displayed as WMA

In the USB or TF card, please be careful not to other line of wool or hair into the UBS or TF tilting deck, TO avoid poor cinctact.

Connect the computer to add, delete files, please make full use of the rear computer USB port.

Audio Files:

1. Perfectly Supports All Lossless Music, FLAC, APE, WAV for instance;
2. MP3, WMA

MP3 formats detailed description as below:

1. Sampling Frequency: 8K-48K

2. Bitrate: 8Kbps-448Kbps

3. Bitwide: 16bits

Sound Track: Mono, Stereo. Supports MPEG1/ MPEG 1/MPEG2,(layer1,2,3) MP3 CBR/VBR/AB

max encoding rate 448kbps; supports MP3 ID3V2; supports WAV ima/microsoft ADPCM;

supports WAV PCM; supports WMA(V7/V8/V9); supports WMA,

bitrate>=5 kbps; supports MP3/WAV/WMA sampling rate (K):8/11.025/12/16/22.05/24/32/44.1/48

FLAC 16BIT, sampling rate (K):8/11.025/12/16/22.05/24/32/44.1/48

Bluetooth instructions

Device Name : CAR BT

PIN N umber : 0000

Bluetooth connection method : When the machine is powered on, the phone turns on the Bluetooth function, click on the search device. When [CAR BT] is displayed in the list, click [CAR BT] to connect.

Bluetooth play mobile music : After the Bluetooth connection is successful, open the music player software on the mobile phone to play music, increase the volume of the mobile phone, and press the MODE button repeatedly until the BT AUDIO (Bluetooth mode) is displayed, it is already playing.

* Bluetooth name can not be searched or searched for connection unsuccessful?

Solution: Cancel all other Bluetooth devices connected to the phone, and then click again to search for the device. If the problem is still not solved, you can search/connect several times. If it still doesn't work, unplug the host and wait for 1 minute, then power on again, and then search for connections.

New Functions:

2. Folder up/down Function. For example, if there are 3 folders in 1 USB drive, 10 tracks in each folder. Long press #6 is folder up, i.e., the 1st track of the 2nd folder can be read; long press #5 allows you to go to the 1st track of the previous folder.

