

- beelink EQ13产品说明书
- 1、成品尺寸:119x85mm (只能小, 不能大)
- 2、材质:普通书写纸.
- 3、印刷:黑白印刷
- 4、装订方式:骑马订



Facebook Group



Reddit



Official Website

Power-on and Wake-on-LAN,setting guide file storage path (Select the corresponding file according to the machine model): C:\Power On and WOL

System drive file storage path: C:\Driver

After service

- Email:
 - Mini PC:Support-pc@bee-link.com
 - TV BOX:Support-box@bee-link.com
 - Sales : Wholesale@bee-link.com
- Call us! +86-755-36633117



MADE IN CHINA



EQ

User Manual V3



Thank you for choosing Beelink products.
Please read this User Manual carefully and keep it for future reference.

Vielen Dank, dass Sie sich für Beelink entschieden haben.
Bitte lesen Sie das Benutzerhandbuch sorgfältig durch und bewahren Sie es zum späteren Nachschlagen gut auf!

Gracias por elegir los productos de Beelink.
Lee atentamente este manual de usuario y guárdalo para futuras consultas.

Grazie per aver scelto i prodotti Beelink.
Si prega di leggere attentamente il manuale d'uso e di conservarlo per riferimenti futuri.

Merci d'avoir choisi un produit Beelink.
Veuillez lire attentivement ce manuel d'utilisation et le conserver pour référence ultérieure.

Благодарим вас за выбор продуктов Beelink.
Пожалуйста, внимательно прочитайте руководство пользователя и сохраните его для дальнейшего использования.

この度はBeelink製品をお買い上げいただき、誠にありがとうございます。
取扱説明書をよく読みの上、正しくお使いください。お読みになった後はいつでも見ることできる場所に保管してください。

Connect to a wonderful life

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.Caution Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating



Before using this product, please read and make sure you understand the instructions ("User Manual"), and other safety guidelines to ensure your safety and prevent unnecessary harm resulting from improper use. Your use of this product will be considered as your acceptance of all the terms related to this product.

[User Manual]

Dear user: Thank you for using this product. To ensure your safety and benefits, please read the instructions carefully before use.

[Disclaimer]

- Be sure to use the product with the original AC power cord and at a voltage of 100-240V. Beelink shall bear no liability for any issues or failures caused by your use of a third-party AC power cord.
- Users may utilize music, videos, pictures, and software provided by a third party, but Beelink shall not be held responsible for any copyright issues or software failures.
- In case of a product failure, Beelink will strictly adhere to the warranty terms. However, Beelink shall not be liable for any property or economic loss that may arise during use.
- The device is shipped with pre-installed software, which can be used after your proper testing. The uninstallation of the software during compatibility or other issue checks will not impact the quality of the device.
- Beelink reserves the right to improve the products at any time. Specifications or design of the actual products are subject to change without notice.

[Disclaimer for the Built-in Battery]

 
 
Please charge the product strictly in accordance with the instructions and do not remove or replace the built-in battery. Please also be aware of the following:

- Avoid squeezing or piercing the battery.
- Prevent the battery from getting in contact with water or other liquids.
- Keep the battery away from fire.
- Please cease using this product immediately if:
 - the battery is damaged.
 - there's any liquid leaking from the device.
 - there are foreign objects accumulating on the leads.

[Product Description]

With an operating system installed, this product can be used for home entertainment and office purposes when connected to the internet. It can be connected to a variety of display devices, such as monitors, TV sets, and projectors.

[Buttons and Ports]



1. USB	2. Type-C	3. 3.5mm audio jack
4. Power button	5. Ethernet jack	6. HDMI
7. AC power cord port	8. Power indicator light	9. CLR CMOS

 
[Quick Setup Guide]

1 Connect the device to a monitor using an HDMI cable.

Connect a keyboard and mouse to the device through the USB ports or via Bluetooth (Note: mice or keyboards are not included in the retail package).

2 Connect the device to a power socket with the provided AC power cord and boot it up.

4 Use an Ethernet cable or Wi-Fi to connect the device to the Internet. Note: You need to configure the Wi-Fi settings on the device for wireless network connection.

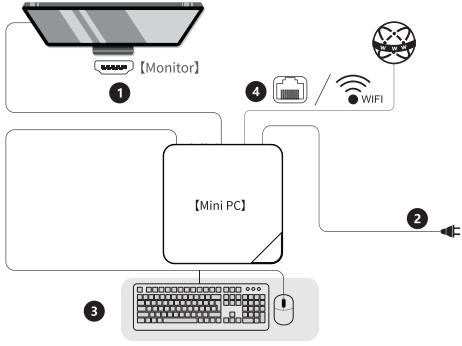


[How to Switch the Audio Playback Device in Windows]

If your Windows Mini PC is connected to multiple audio playback devices (e.g. speakers, headphones, webcams with built-in microphones, and Bluetooth headsets) simultaneously, you will need to choose one of them for audio playback.

1. Simply click the sound icon in your notification area (also known as the "system tray").



 2. Click "Select an audio playback device".

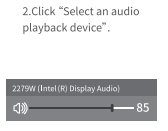


3. Choose a device from the list for audio playback.



[DDR SDRAM and SSD Installation]


Note: The following installation operations should be performed when the power is disconnected (as illustrated in the picture).

 Align the DDR SDRAM module with the RAM slot, then gently push the module into the slot at a 30° angle.

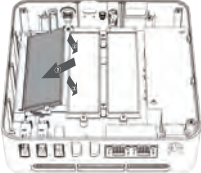

SSD Installation (as illustrated in the picture).

 - Align the plug of the SSD and that of the M.2 slot on the motherboard.
- Gently push the SSD in and use the screw to fix it in place.

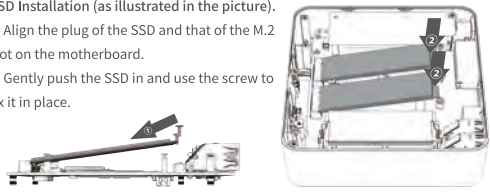

[Precautions for Use]

In order to continuously improve the user experience, Beelink may occasionally update applications and firmware.

 
- Do not use strong chemical solvents to clean the product, and we recommend you wipe it with a soft cloth.
- Please keep this product away from fire.
- Please do not try to open the case or perform repairs yourself. If a failure occurs, please contact Beelink's customer service.
- When cleaning the electronic product, please keep it dry and be cautious of electric shocks.
- Please check whether any cables or plugs are worn or damaged.
- Do not dispose of the product carelessly. Be mindful to protect the environment.
- Working environment temperature: -10°C-45°C; humidity: 30%-85%.
- Storage environment temperature: -20°C-60°C; humidity: 10%-90%.

[Waste Recycling Instruction]

Users intending to dispose of a Beelink product are recommended to comply with local laws and regulations on waste electrical and electronic equipment recycling. Please send the product to a local organization certified by the government for recycling.

[USB Power Supply Settings]

The default setting for the jumper is on pins 2 and 3. There is power supply via USB after the device is switched off, allowing users to wake the device from sleep. To cut off power to the device after it is switched off, users may set the jumper to pins 1 and 2 (as illustrated in the picture).





With power supply after the device is switched off (default state)



Without power supply after the device is switched off



The terms "HDMI" and "HDMI High-Definition Multimedia Interface", the HDMI trade dress, and the HDMI logo are all trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE