



The diagram shows the front panel of the device with the following components labeled with numbers 1 through 7:

- 1. USB port
- 2. Type-C port
- 3. MIC headphone jack
- 4. power button
- 5. LAN port
- 6. HDMI port
- 7. DC in port

Wall-Mounted bracket

 
 
fix bracket on MINI PC with screws

fix bracket on the back of display with screws

⚠ Failure to use the included power adapter may violate regulatory compliance requirements and may expose the user to safety hazards.
 * specifications are subject to the physical product.


DDR Memory Installation. (As shown in the picture)

- 1.Align the memory module key along with the memory socket key and insert the memory at a 30 degree angle,Slide the module into place.

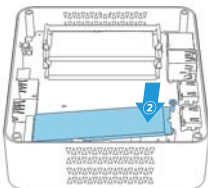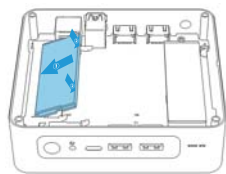

SSD Card Installation. (As shown in the picture)

 - 1.Align the notches on the SSD with the tabs in the M.2 slot on the mother board.
- 2.Slide ssd in then secure the SSD with screw.



Note: The HDD installation guide is inscribed on HDD cover.

 
1. Connect the power supply
2. Connect to the monitor with HDMI cable
3. Connect the keyboard and mouse

Connect speakers, headphones, a webcam with a built-in microphone, a Bluetooth headset, or another audio devices to your Windows PC and you'll need to choose which devices Windows actually uses.

1. Just click the sound icon in your notification area (also known as the system tray).
2. Click the "Select playback device" option.
3. Select the playback device you want to use from the menu.

In order to continue to improve the user experience, we may occasionally update app and firmware.

- Do not use harsh of chemical solvent, cleaning products. We recommend using a soft cloth to wipe.
- Do not throw product into fire, avoid having fire accident.
- Do not attempt to open the housing or to repair, if a failure occurs, please contact the customer service.
- Please note seepage while clean electronics, be careful of electric shock.
- Check for any frayed or damaged cords or plugs.
- Don't arbitrarily discard the product, we should protect the environment.
- Operating environment: -10°C-45°C, 30%—85% humidity.
- Storage environment: -20°C—60°C, 10%—90% humidity.

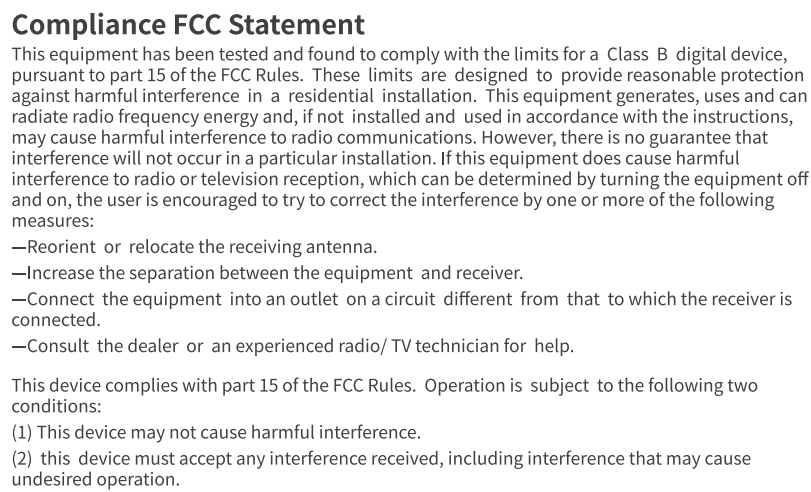

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure com

 Email: Mini PC:Support-pc@bee-link.com
 Trial BOX:Support-box@bee-link.com
 Sales : Wholesale@bee-link.com
 Call us! +86-755-36633117/36633118

Manufacturer : ShenZhen AZW Technology co.,Ltd
Address : 4th Floor,Building 18,Longjun Industrial Park,
 Bujiuwo,Longhua New District,ShenZhen,China

