

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



GUARANTEE

Non-human damage
12-month warranty

产品基础

PRODUCT BASIC INFORMATION

- 尺寸: 404(L)x144(W)x32(H)±2mm
Size: 404(L)x144(W)x32(H)±2mm
- 键数: 100 keys
Number of Keys: 100 keys
- 版本: 有线/2.4G/BT
Version: USB-C Wired/2.4G Wireless/BT
- 背光: RGB
Backlit: RGB
- 轴体: 机械轴体
Key Switches: Mechanical switches

指示灯

 
INDICATORS

- 1 Num Lock
- A Caps Lock

充电指示: 充电常亮, 充满熄灭, 低电量闪烁。
Charging: Steady light during charging, extinguishes when fully charged, flashes when low on power.

旋钮功能

KNOB FUNCTION

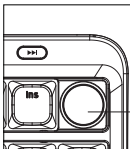

长按旋钮三秒切换旋钮模式
Long press knob for 3 seconds to switch knob mode

- 音量模式 (默认):
Volume Mode (Default):
顺时针: 音量+
Clockwise: Volume+
逆时针: 音量-
Anticlockwise: Volume-
按压: 静音
Press: Mute
- 背光模式:
Backlight Mode:
顺时针: 背光亮度+
Clockwise: Backlight Brightness+
逆时针: 背光亮度-
Anticlockwise: Backlight Brightness-
按压: 切换灯效
Press: Switch Lighting Effect

按键功能

BUTTON FUNCTION

- 1 轻触开关: 显示桌面功能
Tap this key: Quick desktop view switch

(出厂默认为显示桌面, 如果想要更换其它功能, 可自行用驱动程序自定义更改按键功能)
(The factory default is to display the desktop, if you want to change other functions, you can use the driver to customize the function of the key)

- 2 上一曲
Last song
播放/暂停
Play/Pause
下一曲
Next song

- 3 短按计算器, 长按进入官网 (支持驱动自定义)
Short press calculator, Long press access the official website (Supports custom driver configuration)
<http://www.kzzi.com/>

有线模式

WIRED MODE

- 1 连接USB型设备, 开关拨到 "OFF" 为有线模式。
Connect the USB to the device, then slide the switch to "OFF" for wired mode.
- 2

(建议: 使用5V 1A额定电源为键盘充电)
(Recommended: Use a 5V 1A power supply for keyboard charging)

BT连接

BT CONNECTION

- 1 开关拨到 "ON" 状态。
Switch to position "ON".
- 2 长按任意一组Fn+Q/W/E/3秒不动时间, 比如Fn+Q, 此时Q键持续快闪, 表示已进入配对状态, 慢闪烁表示键盘在回连状态。
To pair the keyboard, press and hold any of the key combinations of Fn+Q/W/E for 3 seconds. take Fn+Q for example, the Q key will quickly flash to indicate pairing mode, while a slow flash indicates reconnection mode.
- 3 打开手机/电脑, 搜索并连接设备, 搜索显示的名称: 8007 (连接Windows 8以上系统版本, 移动设备等)。
To connect the device, open your computer or mobile device's BT settings and search for 8007. Select it to establish the connection. Note that it is compatible with Windows 8 and above systems, as well as mobile devices.
- 4 以此类推: 重复以上步骤, Fn+Q/W/E可同时对3组BT设备, 短按Fn+Q/W/E, 即可在不同BT设备之间切换。
Similarly, Repeat the previous steps to connect and pair each desired BT device using the Fn+Q/W/E key combinations. Short press Fn+Q/W/E to switch between the stored devices.

(温馨提示: 使用切换前, 请先配对好3组BT)
(kinder reminder: Please pair the 3 BT devices before switching between them.)

2.4G连接

2.4G CONNECTION

 
- 1 开关拨到 "ON" 状态, 即2.4G模式。
Switch to position "ON", Enter 2.4G mode.
- 2 长按 Fn+P 对码, P键快闪时插入接收器, P键停止闪烁即对码成功。
Long press Fn+P to pair, insert the receiver when the P key rapidly flashes, and successful pairing is indicated when the P key stops flashing.
- 3 P键慢闪表示键盘在回连状态。
Slow flashing P key indicates keyboard in reconnection mode.

(温馨提示: 出厂时已配对, 无需再次配对)
(Friendly reminder: Paired at the factory, no need to pair again)

电池电量提示

KEYBOARD BATTERY LEVEL INDICATION AND CHECK

键盘背光可显示当前电池电量状态 (无线模式下查看)
The keyboard's lighting can display the current battery level status. (View in wireless mode)



按 Fn+Enter 查看电池电量情况
Pressing Fn+Enter allows you to view the battery level status. Each key from "1" to "0" represents a specific battery level range.

 
比如:
For example:

11 背光同时亮, 表示此时电量10%的电量
The backlight of the "1" key is illuminated, indicating that the keyboard's current battery level is at 10%.

11 ~ 20 背光同时亮, 表示此时电量20%的电量
The "1" and "2" keys are both illuminated, indicating that the keyboard's current battery level is at 20%.

以此类推
Similarly

11 ~ 01 背光同时亮, 表示此时电量100%的电量
When the backlighting illuminates from 1 to 0 simultaneously, it indicates that the keyboard battery is at 100% charge.

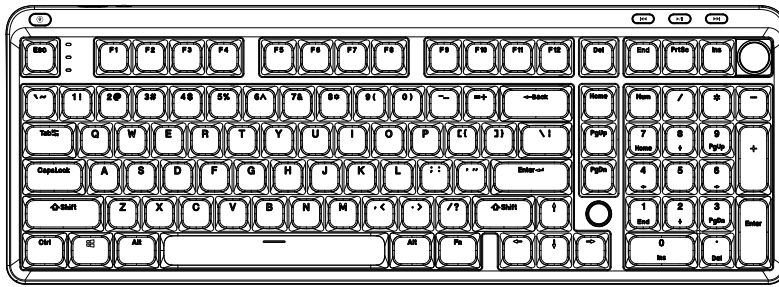

WHEN USING A KEYBOARD

1. Maintain proper posture and avoid excessive force on the keys.
 2. Take regular breaks to prevent hand fatigue.
 3. Clean the keyboard regularly to remove dust and dirt.
 4. Avoid exposing the keyboard to liquids.
 5. Keep the keyboard in a suitable environment, free from extreme temperatures or humidity.
- Remember these tips for a comfortable and durable keyboard experience.

BATTERIES

1. Warning: That batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
2. Recharge the battery with an approved charger.
3. Dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
4. Avoid exposing the battery to an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
5. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



GUARANTEE
Non-human damage
12-month warranty

自定义背光源制

CUSTOM BACKLIGHT RECORDING



Fn+2@/3# 为固定灯效，不可录制。
Fn+2@/3# Fixed light effect, not recordable.



第一步：按 Fn+1! 选择一组将要自定义的背光。
Step 1: Press Fn+1! to customize backlight.



第二步：按 Fn+Back 进入背光源录制模式。
Step 2: Press Fn+Back Enter backlight recording mode.



 
第三步：按下想要录制背光的按键，重复此步骤，录制自己想要的背光。
Step 3: Press the keys which you want to record the backlight, and repeat this step.




第四步：完成后，再次按 Fn+Back，将保存并退出背光源录制模式。
Step 4: When done, press Fn+Back again, will save and exit backlight recording mode.

背光控制

BACKLIGHT CONTROL



背光亮度+
Backlight Brightness+

 


背光亮度-
Backlight Brightness-




背光单色切换
Switch Backlight Color



 多种动态背光模式切换
Backlight Mode Switching



背光速度+
Backlight Speed +

 

背光速度-
Backlight Speed -



按键灯效切换
Key Illumination Effect Switching

第二组合功能键

SECONDARY COMBINATION FUNCTION KEYS



 
切换到Mac系统
Switch to Mac system



窗口锁定
Win Lock




ScrLK



切换到Windows系统
Switch to Windows system



 长按3秒，恢复出厂设置
Press and hold for 3 seconds to restore factory settings



Pause

 
WINDOWS多媒体键

WINDOWS MULTIMEDIA KEYS

Windows系统 (Fn+A: 切换到Windows系统) Windows System (Fn+A: Switch to Windows System)



屏幕亮度-
Screen Brightness -



计算器
Calculator



 
上一曲
Last song



静音
Mute



屏幕亮度+
Screen Brightness +



播放器
Player



 
播放/暂停
Play/Pause



音量-
Volume -



邮箱
Email



停止
Stop



下一曲
Next song



音量+
Volume +

MAC多媒体键

MAC MULTIMEDIA KEYS

Mac系统 (Fn+S: 切换到Mac系统) Mac System (Fn+S: Switch to Mac System)



屏幕亮度-
Screen Brightness -



搜索
Search



上一曲
Last song



静音
Mute



屏幕亮度+
Screen Brightness +



Siri



 
播放/暂停
Play/Pause



音量-
Volume -



多屏显示
Multi-Screen Display



勿扰 (仅在有线模式下支持)
Do Not Disturb (only supported in wired mode)



下一曲
Next song



音量+
Volume +

我们的珂芝产品有问题吗？

Do you have questions about our products?

请联系我们，我们会尽快回复，以确保您的所有需求都能得到解决

Feel free to contact us with any product issues or questions.
We will reply as quickly as possible to ensure that all your needs are met.



微信公众号

安装和使用 INSTALLATION AND USE

启动电脑，第一次使用键盘，需等待电脑自动安装驱动程序后方可正常使用。
When you turn on your computer and use the keyboard for the first time, wait for the computer to automatically install the drivers before using it normally.

服务热线: 400-0221-288

邮箱: kzz@kzzi.com

官网: www.kzzi.com

品牌方: 珂芝(惠州)电子科技有限公司

执行标准: GB/T 14081-2010

Hot-line: 400-0221-288

Email: kzz@kzzi.com

Official Website: www.kzzi.com

Brand: Kechi(huizhou)Electronic Technology Co., Ltd

Executive standard: GB/T 14081-2010

166-800701-001