

R87Pro 说明书折页：128g双铜四色印刷

正面

反面

RK ROYAL KLUDGE R87Pro MECHANICAL KEYBOARD

PRODUCT BASIC

Manual: [RK7701181000100010](#)
Switch and Keycaps Puller: [RK7701181000100010](#)
Keyboard: [RK7701181000100010](#)
USB Type-C cable: [RK7701181000100010](#)
2.4G Dongle: [RK7701181000100010](#)
Switch: Mechanical Switch

INDICATOR LIGHTS/KNOB FUNCTION

KNOB FUNCTION

Pluggable knob (can be used instead of Function key)

- Clockwise: Volume+
- Anticlockwise: Volume-
- Press: Mute

BATTERY REMINDER

In BT 2.4G mode, Press and hold **Fn+Enter** to view the battery level indicator

For Example:

- The backlight is bright, indicating that the keyboard is 10% of the power at the time
- The backlight is on at the same time, indicating that the keyboard is 20% of the power at the time
- Similarly
- The backlight is on at the same time, indicating that the keyboard power is 100% at the time

Wired Mode

Place the switch to "WIRED MODE" side.

BT CONNECTIVITY

Place the switch to "B" side.

Short press **Fn+QWERTY** to change BT channel.

Long press **Fn+QWERTY** to enter pairing mode.

Turn on the Bluetooth of computer/other device, find and link to the keyboard whose name on the list shows as RK87Pro.

2.4G CONNECTIVITY

Place the switch to "G" side.

Short press **Fn+F12** to change 2.4G channel.

File the P key below shows, it indicates that your device is successfully linked to the computer. Please remember: The receiver is battery-powered and does not need to be charged again.

DFU MODE

There are two methods to enter dfu mode (development Firmware upgrade) on the keyboard:

Method 1: Press and hold the switch located under the space bar, and then connect the keyboard to the computer.

Method 2: Connect the keyboard to the computer first, and then simultaneously short press **Fn + Right Shift + Esc**.

These methods allow you to activate the DFU mode on the keyboard, enabling firmware upgrades and development functionalities.

The keyboard can support VIA drivers: <https://vialabs.io/>

BACKLIGHT CONTROL

In USB mode, the backlight brightness is brightest by default.

In wireless mode, the backlight is slightly dimmer by default.

Backlight Brightness +

Backlight Brightness -

Backlight Speed +

Backlight Speed -

Pause

Backlight Monochrome Switching

Supports Multiple Backlight Effect Switching

Windows Lock

Side Light Color Switching

Turn off the light

Turn Off Backlight And Side Lights

Switch To Windows System

Switch To Mac System

Switch Between Six-key Rollover And Full-key Rollover

Press And Hold For Three Seconds To Restore Factory Settings

RK ROYAL KLUDGE R87Pro MECHANICAL KEYBOARD

CUSTOM BACKLIGHT SET

Step 1: Press **Fn + F12** to customize backlight

Step 2: Press **Fn + F12** to enter backlight recording mode

Step 3: Press the keys which you want to record the backlight, and repeat these steps

Step 4: When it is done, pressing **Fn + F12** again will save and exit the backlight recording mode

MULTIMEDIA KEYS FOR WINDOWS

Windows system (Fn + A: switch to Windows system)

Fn + F1 Computer	Fn + F2 Browser	Fn + F3 Calendar	Fn + F4 Calculator	Fn + F5 Email	Fn + F6 Play / Pause
Fn + F7 Last Song	Fn + F8 Play / Pause	Fn + F9 Next Song	Fn + F10 Mute	Fn + F11 Volume-	Fn + F12 Volume+

MULTIMEDIA KEYS FOR MAC

MAC system (Fn + S: switch to Mac system)

Fn + F1 Screen Brightness-	Fn + F2 Screen Brightness+	Fn + F3 Keyboard Backlight Brightness-	Fn + F4 Keyboard Backlight Brightness+	Fn + F5 Last Song	Fn + F6 Play / Pause
Fn + F7 Next Song	Fn + F8 Mute	Fn + F9 Volume-	Fn + F10 Volume+	Fn + F11 Volume-	Fn + F12 Volume+

Have an issue with one of our RK products?

Feel free to contact us with any product issues or questions. We will reply as quickly as possible to ensure all your needs are handled. For better technical support, please contact rkgameing@rkgameing.com

RK ROYAL KLUDGE

Executive standard GB/T 14281-2010
Made in China www.rkgameing.com
Download Driver Address: www.rkgameing.com/Download/