



USER MANUAL sound machine

W0236

Thank you for purchasing the elesories Sound Machine.
Please read this guide carefully and keep for future reference.

The elesories sound machine is designed to help create an ideal sleeping environment.


The 24 sounds mask nighttime noises.

Fall Asleep Easier
Wake-Up Refreshed

Sleep Better
Get A Good Nights Rest

4 SOUND MODELS (24 SOUNDS)

- 5 Fan sounds
- 5 White noise
- 7 Nature sounds
- 7 Unique Sounds

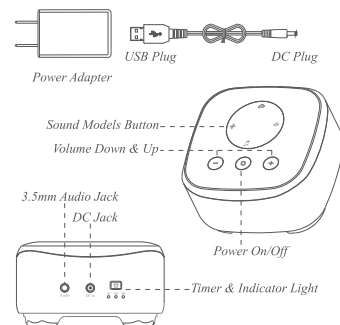

CONNECT AC POWER

1. Plug the USB cable into the power adapter.
2. Plug the DC Plug into the DC Jack, be sure that the DC Plug fits firmly in the DC Jack.
3. Plug the Power Adapter into an AC wall outlet.
4. Tap the Power On/Off Button to turn on the sound machine.

Note: The USB cable can also be plugged into a PC or Laptop to power the unit.

PICK YOUR SOUND

Press the Sound Models Button to play sounds. Tap it again to play the next sound.

NATURE SOUNDS

1. Rain
2. Thunderstorm
3. Brook
4. Surf
5. Summer Night
6. Forest Birds
7. Frog

FAN SOUNDS

1. Mellow Fan
2. Vent Fan
3. Oscillating Fan
4. Box Fan
5. Industrial Fan



WHITE NOISE

1. Brown
2. Cinnamon
3. Amber
4. Pink
5. Pure White

UNIQUE SOUNDS

1. Lullaby no.1
2. Lullaby no.2
3. Lullaby no.3
4. Piano&Water
5. HeartBeat
6. Airplane
7. Playing Cat

CONTACT US

Thank you for your purchase!
Register your product now at
www.elesories.com/pages/pr
and get one **FREE** year of extended
warranty coverage.



Scan code registration

- VOLUME DOWN & UP**
Tap it to decrease/increase volume. Press and hold to decrease/increase volume continuously.

- POWER ON/OFF**
Press it to turn the unit on. Tap it again to turn off.

- 3.5mm AUDIO JACK**
Connect with your earphone for private listening.

- DC JACK**
Plug the DC Plug into the DC Jack.

- TIMER & INDICATOR LIGHT**
Keep it on all night or set it to gently turn off(30/60/90 minutes optional as the indicator light show) while you sleep.

CUSTOMER SERVICE

- www.elesories.com
- support@elesories.com

LIMITED TWO-YEAR FACTORY WARRANTY:

elesories warrants its products, to the original purchaser, to be free of defects for a period of two year from the date of purchase. This limited warranty covers all parts and/or workmanship against defects or breakages in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling, or misuse of the product.

We really do care about your enjoyment of our products.

We want to hear from you any time you think our product has disappointed you.

Please contact us: support@elesories.com

We will make every reasonable effort to make you happy.

Copyright©2020 XiaoYi Technology Co., LTD.
All right reserved.

Need Assistance?

Contact us at: support@elesories.com



/elesories



/elesoriesOS



/elesories



/elesories

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.