 


Wireless doorbell
Manual

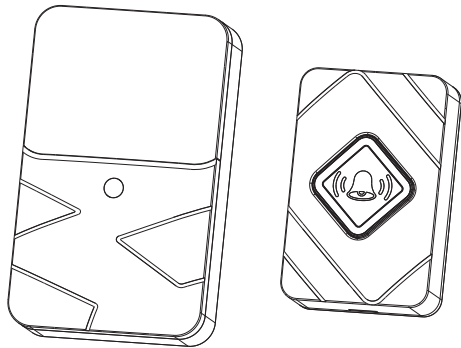

Thank you for purchasing this product, please read the manual carefully before use.

product description

The wireless AC doorbell consists of two parts: the receiver and the transmitter. The receiver is the indoor unit, plug and play, and the transmitter is the outdoor unit, without wiring, and the installation is simple and flexible. This product is mainly suitable for family residences, companies, hospitals, hotels, factories and other environments.

Features

- 58 polyphonic ringtones are optional: users can set any music as the doorbell ringtone according to their personal preferences
- Warm night light: comfortable and warm light color temperature, caring for your night, professional optical design, do not disturb the sleepiness of family members in the middle of the night
- Learning code: Users can flexibly increase or decrease receivers and transmitters according to their needs, and the pairing method is simple and easy to operate
- Memory function: After the power is turned off, the set ringtone can be locked by memory, and the set ringtone will still ring after the power is turned on.
- The working distance can reach 300 meters in an open and barrier-free environment: long-distance remote control, stable signal and no interference with each other
- Transmitter waterproof grade IP6: built-in waterproof silicone cover, it can work normally even in rainy days, never miss any visitors
- 5-level volume adjustable: 0-110 decibels, unique mute and do not disturb mode, giving users a better home experience


Specifications

Operating temperature	-30°C to +70°C
working frequency	433.92MHz±280KHz
Transmitter battery	23A12V
receiver voltage	AC110~260V

Precautions

- * Please test the working distance between the receiver and the transmitter before installing and fixing it!
- * Do not install the transmitter on the security door, the metal will weaken the signal and affect the remote control distance!
- * Do not install the receiver near TVs, induction cookers, microwave ovens and other electrical appliances with electromagnetic waves!

 Product Diagram

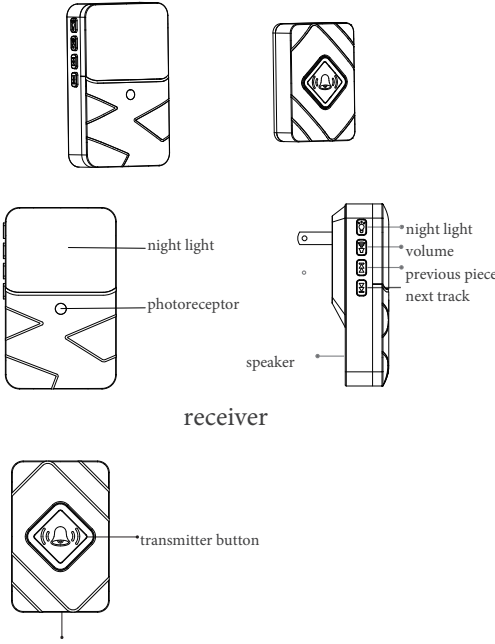

receiver

 
transmitter

installation step

1. Take the product out of the box
2. Unplug the battery insulator on the transmitter
3. Plug the receiver into the socket, and the default ringtone "Ding Dong" will sound, and the warm white night light will automatically turn on
4. Press the transmitter button, the receiver emits the default ringtone "ding dong", and the blue LED light flashes
5. Transmitter installation method (choose one of two):

(1) Double-sided tape method: After determining the proper installation location, please clean the dust on the wall first; Tear off the sticker on one side of the double-sided tape, stick the double-sided tape on the back of the transmitter, and then tear off the other side Sticker, put the button end of the transmitter on the wall, press firmly for about 10 seconds until it is firmly attached, and the installation is completed.

(2) Screw method: prepare an electric drill, take out the expansion tube and screws in the accessories, first press the back plate on the wall to select a suitable position to put it right, use a pen on the screw, first press the back plate on the wall to select Put a suitable position in the right position, use a pen to draw a mark in the round hole, remove the back plate and use an electric drill to drill a round hole at the two marks, the size of the hole is the same as the expansion pipe and the depth is the same as the length of the expansion pipe. Then insert the expansion tube into the round hole on the wall, attach the back plate and move it so that the two holes on the back plate are aligned with the hole on the wall with the expansion tube plugged in, insert the two screws through the back plate hole into the expansion tube, use a screwdriver Tighten the screws to the wall to secure. Finally, take out the transmitter and align it with the buckle position of the back panel on the wall and fasten it to the wall to fix it. Finally, take out the transmitter and align it with the buckle on the back panel on the wall. Make sure that the bell symbol on the button on the transmitter is facing down.

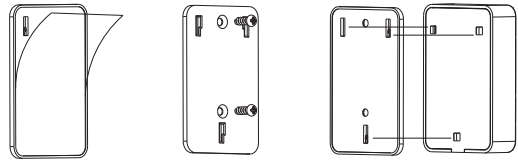

Double-sided tape method

 
screw method

Instructions

1. Night light button: By default, the night light is an automatic photosensitive switch, which turns on the light in the dark and turns off the light in the daytime; press the night light button to turn off the photosensitive mode, and the light will not automatically turn on at night.
2. Volume button: Each short press of the volume button on the receiver will increase the volume by one level. After adjusting to the maximum volume, press it again, the next level is the minimum volume, that is, zero decibel mute mode, only the LED light flashes red, a total of 5 cycles.
3. Change the ringtone button / learn to match the code:

- (1) Press and hold the previous button on the receiver for about 5 seconds, until the LED light of the receiver flashes and the prompt sound of ascending ladder sounds, enter the pairing mode (the pairing mode only lasts for 8 seconds, and then it will automatically exit) (as shown in the figure) step 2);
- (2) In the pairing mode, quickly press the button on the transmitter, and the receiver will make two bird calls of "chirp", which means the setting is successful (step 3-4 in the figure);
- (3) This method is suitable for changing ringtones and adding transmitters at the same time; multiple transmitters can correspond to the same ringtone or different ringtones. To set the same ringtone, please press the buttons of multiple transmitters at the same time in learning mode, and set to For different ringtones, please tune to different music after completing the pairing of the first transmitter, and complete the pairing of other transmitters one by one;
- (4) If the code matching operation is not completed within the learning time, please refer to the above steps and perform the operation again.

4. Clear code/reset: long press the receiver's next music key until the receiver's LED light flashes and emits a prompt sound of descending stairs, complete the code clearing; the code matching between the transmitter and the receiver will be cleared.




step 1

step 2

step 3-4

 5. Replace the battery:
(1) Insert a small screwdriver into the notch at the bottom of the transmitter, open the cover and remove the waterproof silicone cover (as shown in Figure 1);
(2) Remove the old battery and dispose of it properly; install a new battery into the groove of the battery compartment, paying attention to the positive and negative poles (as shown in Figure 2);
(3) Cover the battery compartment with the waterproof silicone sleeve, and then align the transmitter cover to the battery compartment
Press the buckle on the top and close it to complete the replacement (as shown in Figure 3).

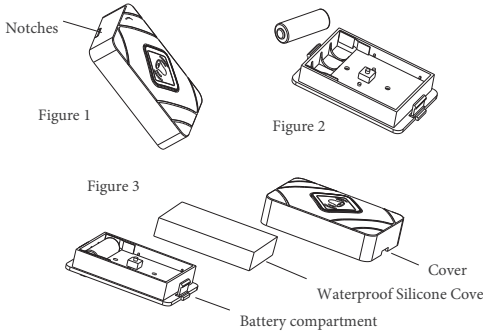

Warning:Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.