




QUICK GUIDES

Please read this quick guide carefully and store it properly for the future use.

Product Overview

- Speaker
- USB charging cable
- AUX IN audio cable
- Quick Guides
- Hanging rope

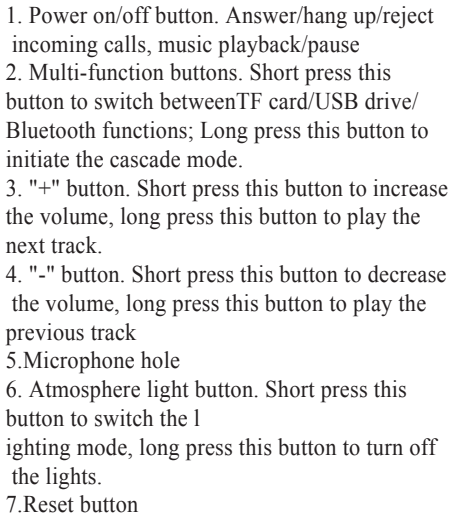

- 8.USB interface
- 9.TF card slot
- 10.Indicator light
- 11.AUX IN input interface
- 12.Charging interface

Power/Charging

To achieve a better user experience, please fully charge this product before using the speaker. A USB charging cable is included in the product packaging. Through this cable, this speaker can be charged by connecting to a USB port on the computer or other standard charging plugs that are compatible with USB ports. Only the adapters of 5V/1A or above (not included) can be used for charging. When the speaker is being charged, the red LED indicator light will remain on. After being fully charged, the LED indicator light

of 5V/1A or above (not included) can be used for charging. When the speaker is being charged, the red LED indicator light will remain on. After being fully charged, the LED indicator light will be off automatically.

Note: Only the USB voltage output of the computer or the standard 5V power adapter can be used to charge the speaker. If a non-standard 5V USB power adapter is used to charge the speaker, the speaker may be damaged. Do not charge if the connector or device is damp or damaged.

ON/OFF

In shutdown mode, press and hold "ON/OFF" for approximately 2 seconds to turn on the speaker, accompanied by a power on prompt. Please press and hold "ON/OFF" again for

approximately 2 seconds to turn off the speaker, with the shutdown prompt sound.

Bluetooth connectivity

When the speaker is first used and turned on, it will automatically enter pairing mode. If you need to connect your phone through Bluetooth function, please enable the Bluetooth function of your phone and search for a Bluetooth name named "A1" to connect in advance.

Volume control

Short press the "+" or "-" button for volume adjustment to increase or decrease the volume.

Music

Play/Pause: In the play mode, short press the " ON/OFF " button to play/pause music. Next track: In the play mode, press and hold the volume adjustment "+" button for 2 seconds to go to the next track. Previous track: In the play mode, press and hold the volume adjustment "-" button for 2 seconds to go to the previous track.

Call

Answer incoming calls: Short press the 'ON/OFF' button. Reject incoming calls: Double click the 'ON/OFF' button. End the call: Short press the 'ON/OFF' button.

card play

When the TF card is inserted into the device and the speaker is turned on, the music in the TF card is prioritized for play. If the users need to play music through Bluetooth function, please press the "Multi-function button" to switch the audio source

USB play

When the USB flash is inserted into the device and the speaker is turned on, the music in the USB is prioritized for play. If the users need to play music through Bluetooth function, please press the "Multi-function button" to switch the audio source.

AUX (external audio input)

When turning on the phone, insert a 3.5mm audio

When turning on the phone, insert a 3.5mm audio cable and switch to AUX mode to play the music from the phone, MP3, and computer.

Atmosphere light

Short press the 'Atmosphere Light' button to switch between multiple lighting modes. Press and hold this button for 2 seconds to turn off the ambient light.

Power saving settings

After the speaker is turned on, if it is not connected to a Bluetooth device, it will automatically shut down after 10 minutes.

Reset paired device list

After turning on the phone, press the "+" and "-" buttons simultaneously for 3 seconds without

any music playing or incoming calls.

Reset device

If a product malfunction occurs, please press the reset button.

Cascade function of multiple speakers (limited to the same model)

1. Open a Bluetooth speaker and connect it to a Bluetooth device (such as a phone).
2. Press and hold the 'Multi function button' to activate the cascade mode. When two devices are successfully connected, a prompt tone will be heard.
3. Open another Bluetooth speaker and long press the 'Multi function button' to activate the cascade mode. When two speakers come close, they will be automatically connected between them.

Reminder tone guide

Status	Voice/sound prompts
Power on	Startup prompt tone
Shutdown	Shutdown prompt tone
Bluetooth pairing	“Discovering”
Bluetooth connected	“Your device is connected”
Low battery	“Battery _{low} ”
Cascade on	“Broadcast mode”
Cascade off	“Broadcast move exit”

Note

- It is not recommended to replace the battery privately without permission.
- Batteries [battery packs or battery combinations] should not be exposed to the overheating environments such as sunlight, baking, etc.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.