

CONTENTS AND GETTING STARTED

Contents

 
 
- 1 Flip Stunt Rally
- 1 Remote Control
- 1 USB-A Charging Cable
- 2 Rechargeable Batteries

Getting Started

The remote control requires a 9V battery (not included) and the vehicle features a removable rechargeable battery (included).

Vehicle

1. Make sure the power switch on the back of the vehicle is in the off position.
2. Use a Phillips-head screwdriver to loosen the screw in the battery cover on the bottom of the vehicle and then open the battery cover.
3. Remove the rechargeable battery.
4. Connect the small end of the charging cable to the power input on the rechargeable battery.
5. Plug the USB-A end of the charging cable into a powered USB-A port or a USB-A power adapter (not included). The status light on the charging cable will glow while the battery is charging and will turn off when the battery is fully charged.
6. Wait for the rechargeable battery to fully charge and then disconnect the charging cable.
7. Install the fully charged battery back into the battery compartment as indicated and secure the door on the battery compartment.

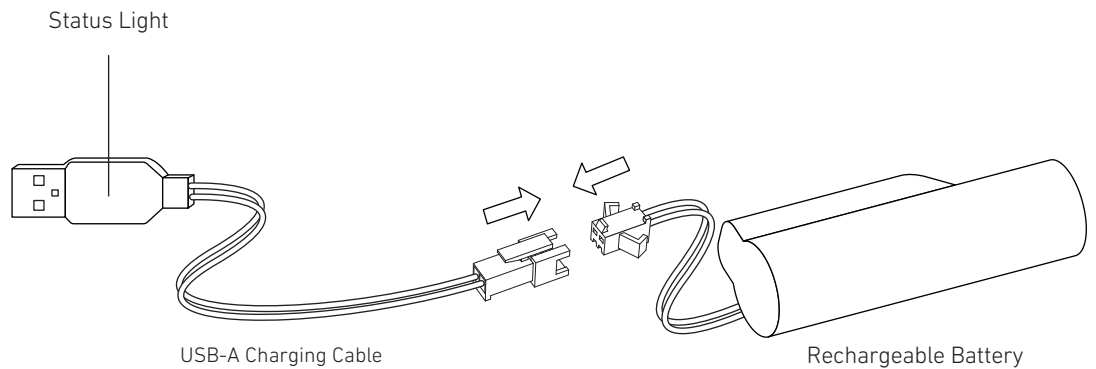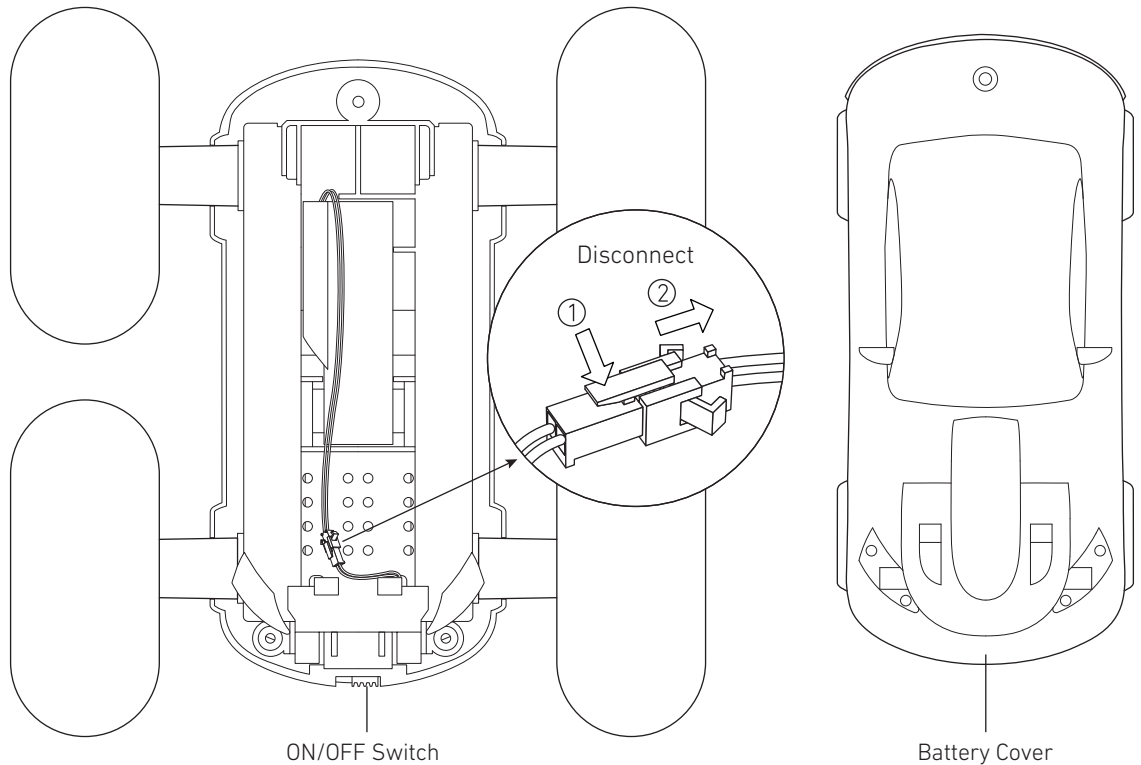


Remote control

1. Use a Phillips-head screwdriver to loosen the screw in the battery cover on the back of the remote control and then open the battery cover.
2. Insert a 9V battery into the battery compartment according to the battery diagram.
3. Replace the battery cover and screw and then secure the screw.



Switch both vehicle and remote control buttons to "ON" position. For best result, use the vehicle on hard surfaces such as wood or tile. For best flipping performance, use on asphalt or carpeted surfaces.

 Note: Your stunt vehicle works best in large, open areas.


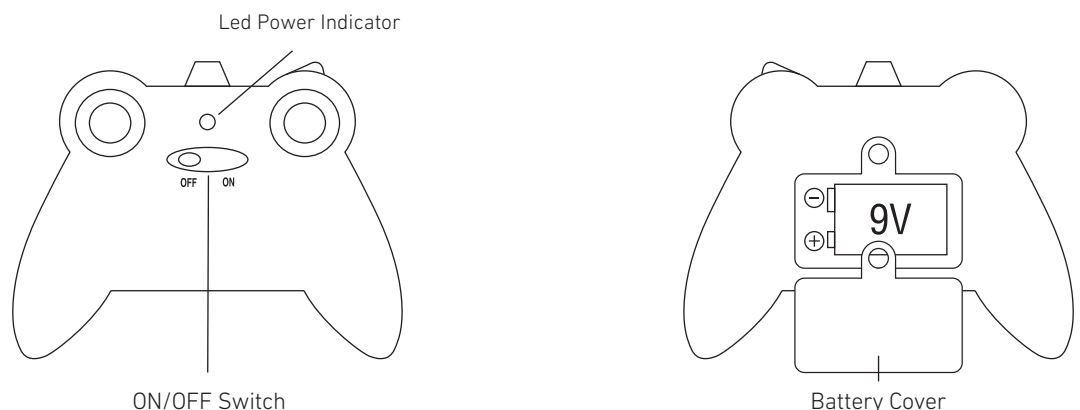


HOW TO PLAY

 
 
Forward

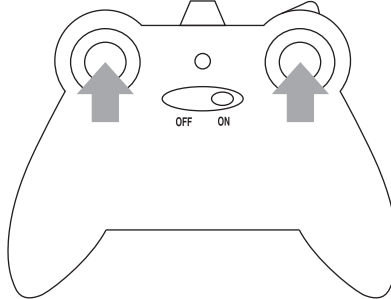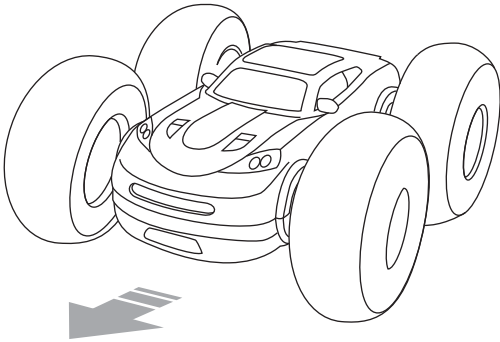



Reverse

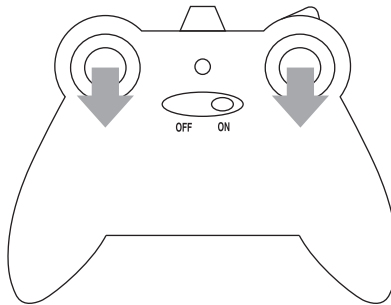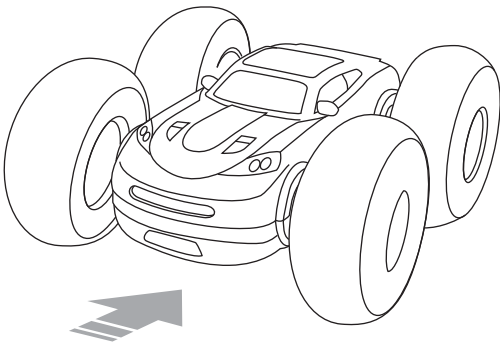  


Spinning Action

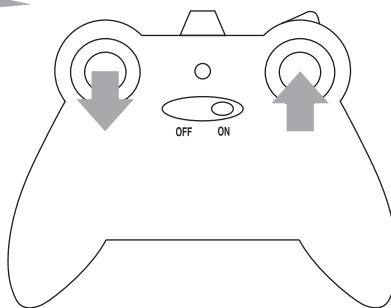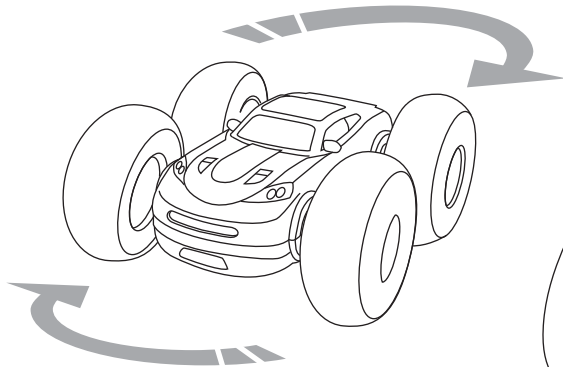  

Flipping Action

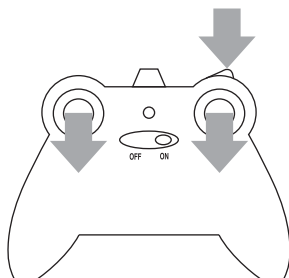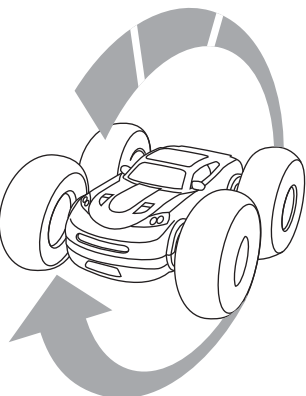  

OR

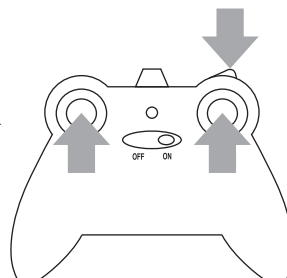 

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating vehicle.
- Do not submerge vehicle or controller in water.
- Never operate your vehicle on the street or highway.
- Never operate your vehicle in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your vehicle into furniture, objects or hard surface, as this will cause damage to both the objects and your vehicle.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the vehicle is switched to "ON".
- Do not leave vehicle or transmitter near source of heat or under direct sunlight for long periods of time.
- Do not leave vehicle or transmitter outside overnight. Dampness is harmful to interior components.
- Remove all batteries when not in use to avoid accidental operation.
- Adult supervision is recommended when operating this vehicle.

RECHARGEABLE BATTERY WARNINGS

- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

ALKALINE BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Sharper Image® name and logos (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2025 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Model No.: 1020976



WARNING:

CHOKING HAZARD – Small Parts.
Not for children under 3 years of age.

BC

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

Printed in China

For customer support, please visit
www.msccustomercafe.com or call

1-800-374-2744