




T89 Magic

USER MANUAL

Thank you for purchasing and using this product, In order to bring you a better experience, please read the manual carefully and keep it for future reference.

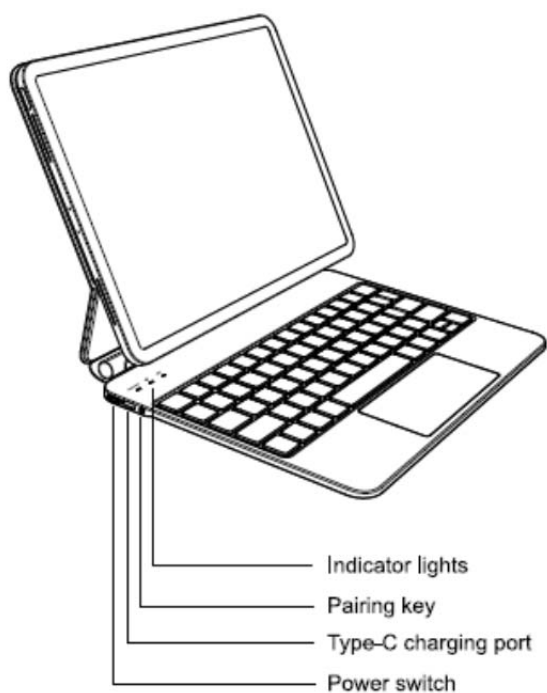

Product Features

- Magnetic installation
- Slim design, easy to carry
- Useful touchpad
- Wireless connection
- Sleep function, saving energy

Maintenance



Store at room temperature. Charging with normal voltage. If no use for a lone time, you need to charge the keyboard every 2 months.

Power on and Power off



- Switch to "ON" power on
- Switch to "OFF" power off


Product Parameter

Model: T89 Magic
Operating distance: <10m
Size: 248mm*194mm*16mm
Working current: <10mA
Weight: 680g
Main material: PU+ABS+Aluminum alloy
Charging time: < 3h


Product function: Keyboard input/touch gestures
Standby time: About 90 Days
Connection mode: BLE 5.2
Battery capacity: About 300mAh
Interface type: Type-C
Charging current: 240mA
suitable for : 11 inch iPad Pro (1 / 2 / 3)
iPad Air4

Wireless Connection

- ❶ Toggle the power switch to ON. The ON/OFF indicator goes off after one second.

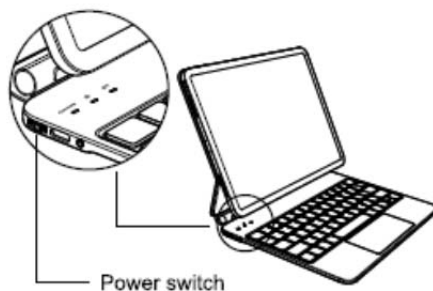

- ❷ Press the matching key. The BT indicator flashes.

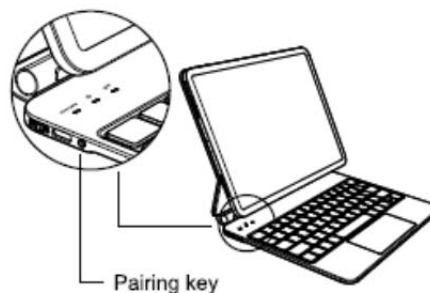

- ❸ Enter the settings of your tablet, turn on the Bluetooth in your tablet, and leave the Bluetooth in "ON" or green.



- ❹ In "OTHER DEVICES", click "T89 Magic", Click "Pair" after entering the window. When pairing is successful the blue light goes off.



* Note: After successful pairing, the next time you use the keyboard, it will automatically connect to the tablet.

Indicator Lights and other Description

1. Low power status: ON/OFF red light flashes
2. Charging: ON/OFF red light always on
3. Fully charged: ON/OFF green light always on
4. Request pairing: BT blue light flashes
5. Upper and lower case: the yellow indicator light always on; Lower case: the upper and lower case indicator light off
6. Sleep: the keyboard will stand by for 10 minutes to enter the sleep mode
7. Connect back after sleep: press any key to connect back,
8. Touch the pairing button by mistake: re pairing is required.
9. If more than one "T89 magic" appears in "MY DEVICE" on the Bluetooth interface, click ⓘ on the right, and then click "Forget This Device" to eliminate it,
10. Most unknown use faults can be solved by restarting the tablet or keyboard.

Keyboard Identification



IOS Touch Gesture

 Tap: Press with one finger until it feels a little bit pressed.	 Tap and hold: Press and hold with one finger.
 Drag: Tap and hold the item, then slide your finger on the touchpad to move it.	 Wake up iPad: Tap the trackpad or if you are using an external keyboard, press any key.
 Open the Dock: Swipe the pointer across the bottom of the screen with a single finger.	 Go to the home screen: Swipe the pointer across the bottom of the screen with one finger. After the Dock appears, swipe the pointer across the bottom of the screen again.
 Pull the display sideways: Swipe the pointer across the right edge of the screen with a single finger. To hide the side pull, swipe right again.	 Open the "Control Center": Move the pointer with one finger to select the status icon at the top right, and then tap, or select the status icon at the top right, and then swipe up with one finger.
 Open "Notification Center": Use one finger to move the pointer to select the status icon at the top left, and then tap, or use one finger to move the pointer near the top center of the screen.	 Scroll up or down: Swipe up or down with two fingers.
 Scroll left or right: Swipe left or right with two fingers.	 Zoom in: place two fingers close together, spread to zoom in, or pinch to zoom out.
 Go to the home screen: Swipe up with three fingers.	 Open the APP switcher: Swipe up with three fingers, pause for a moment, and then lift your finger. Or pinch your fingers together, pause for a while and then lift your fingers.
 Switch between open apps: Swipe left or right with three fingers.	 Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.
 Open search from the home screen: Swipe down with two fingers.	 Auxiliary tap: Two-finger tap the icons on the home screen, the mail in the mailbox, and the "Camera" button in the "Control Center" to display its quick operation menu. You can hold down the Control key and tap the trackpad

Shortcut Key

⌘ Fast switching language and typewriting

control + space Switching input method
control + arrow Switch window
control + tab Switch labels
control + cmd + space Call up emoticons and symbols
cmd + Z Undo
cmd + X Cut
cmd + C Copy
cmd + V Paste
cmd + a Select all
cmd + s Save
cmd + F Find
cmd + shift + 3 Capture all screens to file
cmd + shift + control + 3 Capture all screens to clipboard
cmd + shift + 4 Capture the selected screen area to a file
cmd + shift + control + 4 Capture the selected screen area to the clipboard

In the application:

cmd + H Hide the current application window
cmd + option + H Hide other application windows
cmd + Q Exit the previous application
cmd + shift + Z Redo
cmd + tab Go to the next recently used application

Text processing:

cmd + B Toggles the bold display of the selected text
cmd + right arrow Moves the cursor to the end of the current line
cmd + left arrow Moves the cursor to the beginning of the current line
cmd + down arrow Moves the cursor to the end of the document
cmd + up arrow Moves the cursor to the beginning of the document
option + right arrow Moves the cursor to the end of the next word
option + left arrow Moves the cursor to the beginning of the previous word
control + A Moves to the beginning of a line or paragraph

In the finder:

cmd + option + V Cut file
cmd + Shift + n Create new folder
cmd + Shift + G Call up the window, and you can enter the path directly to the folder
cmd + O Open the selected item
cmd + up arrow Opens the folder containing the current folder
cmd + delete Move files to the wastebasket
cmd + shift + delete Clear the wastebasket

In the browser:

control + tab Go to the next tab
cmd + L Jumps to the address bar
control + shift + tab Go to the previous tab
cmd + = Enlarge page
cmd + - Shrink page

Shortcut symbol

option + R: ®
option + G: ©
option + =: ≠
option + >: ≥
option + <: ≤
option + /: ÷
option + P: π
option + V: √
option + J: Δ
option + Z: Ω
option + X: ≈
option + M: μ
option + S: β
option + W: Σ
option + 5: ∞

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

