

P11 children's audio and video intercom Chinese manual

Material : 105g Coated paper

Manufacturing process : Double-sided printing/organ page

Folded size : 73 * 105 mm

Instruction Manual

Instruction Manual



Before using the product, please read the instruction manual carefully!

Preface

I. Thank you for using our products. In order to better understand and use our products, it is recommended that you carefully read this manual before using them, and keep it well for future reference. Please abide by the matters needing attention.

II. This user manual is based on the latest information of this product when it is manufactured. If there is any change in the product, we will not give further notice.

3. The power interface of this product is designed for charging the built-in battery. Please use a computer USB port or a national standard-compliant, CCC-certified DC 5V/1A power adapter to charge the device. Do not connect other power devices, as this may result in irreversible consequences such as charging failure, data loss, or hardware damage. The company shall not be held liable for any such consequences.

IV. Users must not attempt to repair or disassemble the product. We cannot guarantee the provision of necessary after-sales services. The company shall not be held liable for any editorial errors or omissions in this document. To continuously improve our products, we reserve the right to modify specifications without prior notice. No reproduction, copying, or dissemination of this user manual is permitted without prior written consent from the company.

1

User Guide

1. Start and close:

Turn on the power switch at the bottom of the radio, and then press the power button for a long time to open it.

Long press the power button to turn off the intercom.

2. Charge the walkie-talkie before use:

When the voltage is low or the device automatically shuts down, please use a 5V/1A adapter to charge. Connect the adapter to the smart intercom with a Micro USB charging cable. When charging, the battery symbol will show that it is being charged. After full charge, the battery symbol will show that it is fully charged.

Note: This product does not support fast charging.

Installation of TF card and matters:

1. Insert the TF card into the TF card slot in the correct direction until the TF card is fixed in the slot. When removing the TF card, press down the TF card gently until the TF card pops out.

The TF card must be a high-speed card above C10 to use. Please do not plug the TF card when the machine is working, so as to avoid damage to the machine and memory card!

2. Please pay attention to the insertion direction of the TF card. If inserted backwards, it may damage the machine, TF card and card slot.

3. When you insert the TF card into the machine, the machine will set this TF card as the preset storage device. The data in the original TF card may not be readable. Please make a backup of the data first.

2

Attention

1. The walkie-talkie shall not be provided to children under the age of 3.

2. Check the integrity of the walkie-talkie regularly. If any obvious damaged parts appear, stop using it and put it away from children. Do not let children play with the disassembled, broken or deformed walkie-talkie to avoid danger such as swallowing or choking.

3. The built-in non-detachable battery can only be used and charged under the supervision of adults; the battery is not detachable or replaceable, and should contact after-sales service for maintenance if damaged.

4. The walkie-talkie can not be charged by an adapter above 5V; only the recommended adapter (recommended specification: DC5V=1000mA) can be used; the adapter is not a toy.

5. The charger should be used by adults or under the supervision of adults; the wires, plugs, casings and other parts of the adapter should be checked regularly for damage. If damage is found, stop using it until it is repaired.

6. Children should not be near the fire when playing;

7. Do not store near fire and high temperature, humidity.

8. If the speed is slow or abnormal, please charge it in time.

9. The power switch must be turned off after each use.

10. When it is not convenient to use the machine for a long time, please charge the battery and then turn off the power switch.

maintenance method :

Do not immerse in water or place in a humid environment. Pay attention to cleaning and dustproof, and wipe with dry cloth.


3

Product parameters

product name	Children's video intercom
Master model	TWX818 / 2.4G wifi
outline dimension	
Software Language	
Product weight	
display screen	2.0 inch
screen resolution	320 * 240
key	Physical buttons
cell	1000mAh
Charging specifications	5V/500mA input
power dissipation	3.7V / 220mA
juggle	Type-C , USB2.0
Audio format	
Recording format	
working temperature	-5 ~ 40°
Support system connectivity	WIN7 and above systems

4

Key instructions

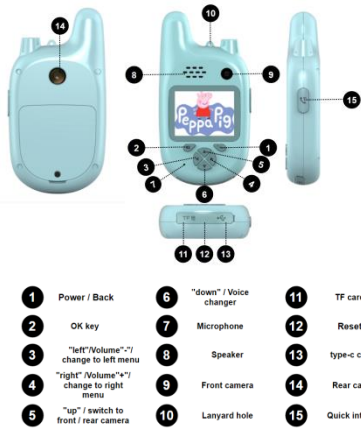

5

Function Introduction

1. Turn on

When the walkie-talkie is off, press the power button for 2 seconds to start the device. After the device is started, it will automatically enter the pairing interface.

3. Pairing walkie-talkies

When radio transceivers A and B are powered on, they automatically enter the pairing interface. Within normal operating parameters, the devices will attempt automatic pairing. Upon successful pairing, the system enters the main interface. If pairing fails, a disconnection icon appears on the screen. During regular operations, when paired devices exceed their operational range, the interface will display a disconnection icon.

5. Send voice main interface

On the main interface, select the voice function icon by scrolling up and down or pressing a button. Long press the OK button to send the voice. Press the left and right buttons to switch between the main interface and the left sidebar. Click OK to play the voice again. (Note: The duration of a single voice should not be too long, less than 15 seconds)

2. Shutdown

When the walkie-talkie is on, press the switch button for more than 15 seconds to shut down the device.

4. Main interface

After successful pairing, enter the main interface device

6. Send emojis

On the main interface, select the emoji function icon by moving up and down and pressing a button. Select the emoji by pressing a direction button, and press the "OK" button to send the emoji.

6

7. Posting pictures

On the main interface, select the "Send Image" icon using the up and down arrow keys and buttons. Select the image to send by pressing the direction keys. Press the "OK" button to send the image. Use the left/right keys to switch between main interfaces and the sidebar. To zoom in on an already sent image, click the "OK" button.

8. Photo-taking

On the home screen, select the camera icon by scrolling up and down or pressing a button. Press the "OK" button to take a picture. If the device is paired, the photo will be sent to the other person immediately. If the device is not paired, the photo will automatically be stored on the SD card. Press the button to switch between front and rear cameras for taking photos.

9. Video intercom

In the main interface, select the video intercom function icon by going up and down and pressing the button.

10. Quick video intercom

On the home screen, press a button to make an instant video and voice call.

11. Voice changes

In the video call interface, long press the button to switch voice.

12. Device reset restart

At the bottom of the device, press the button to reset the device to factory Settings. After resetting, enter search and pairing.

7

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.