

1.字体颜色: 黑色 Pantone Black 3 C
橙色 Pantone 1505C


2.单页尺寸: 140x144mm, (七折页) 展开尺寸: 980x144mm

3.材质: 128G双铜, 双面彩色印刷

折页首页

Automatic Pet Feeder

User Manual **Video Edition**

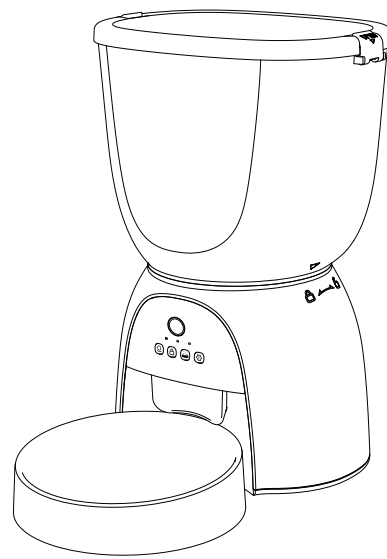

Please read the instruction manual carefully before using the product

Safety Guide

- When children use this product, please use it under the company of their parents.
- Do not use the feeder for pets that cannot reach the food tray or have any physical disabilities.
- Do not immerse the main unit in water, as this will damage the control panel and other electronic components.
- Do not place any foreign objects in the pet feeder.
- Do not use spoiled or moist food.
- Do not disassemble the device by yourself.
- Do not modify the device.
- If the device fails or is damaged, do not try to repair the pet feeder by yourself, contact the dealer or customer service immediately and solve it.
- Always unplug the power plug when not in use and before cleaning.
- If the power plug of this device is damp, turn off the power to the socket. Do not try to unplug the power plug.


Notice

- Do not allow your pet to chew or swallow any part. If you are concerned about the power cord, purchase a wire conduit (hard plastic protector) at any hardware store to protect the power cord.
- Do not install or store the pet feeder in areas that are susceptible to weather conditions. The normal operating ambient temperature for this device is 0 ~ 40°C.
- Powered by alkaline D batteries. Do not use rechargeable batteries.
- Check the batteries regularly. Always replace with new batteries before leaving for a long time.
- Do not lift the pet feeder by the lid, food bucket or food tray. Lift and carry the base with both hands while keeping the unit in an upright position.
- For dry food only, the size range is 3-10mm in diameter. Larger food may get stuck in the food outlet.
- Please read and comply with all important instructions listed on the device and packaging.


Packing List

After taking out the product, please confirm that the pet feeder and the accessories are complete or not.

Host

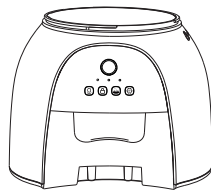


Accessories

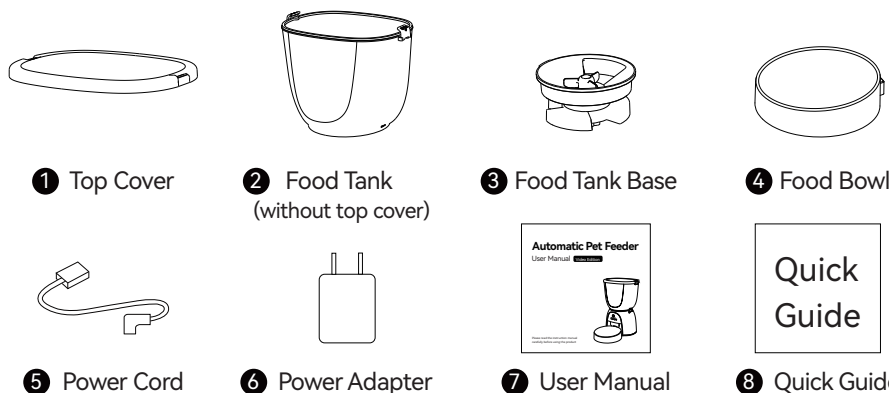


*In order to provide better products, we will regularly improve our products. If the product image is different from the actual product, please refer to the actual one.

Product Image

Exploded View

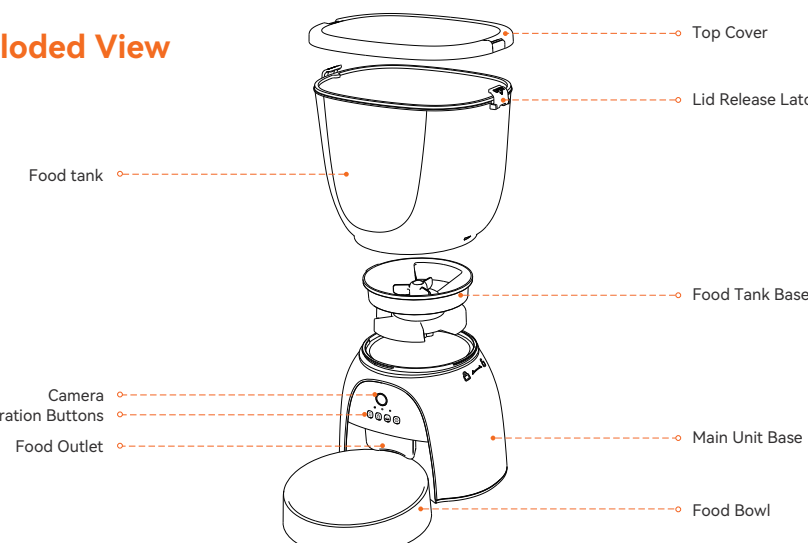


Bottom View

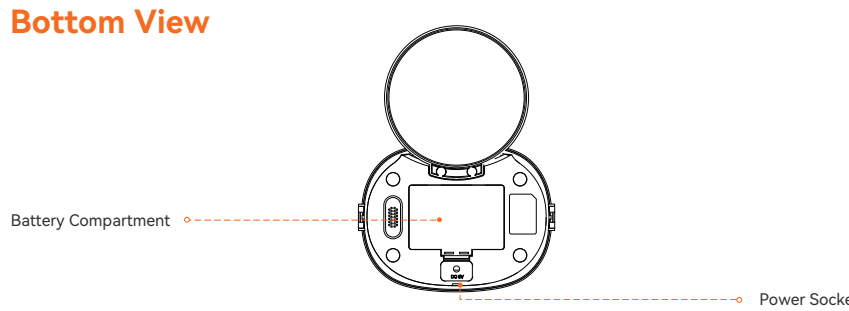

Assembly Sequence


1. Assemble the Food Tank Base

Please place the food tank base correctly into the main unit base as shown in the diagram.

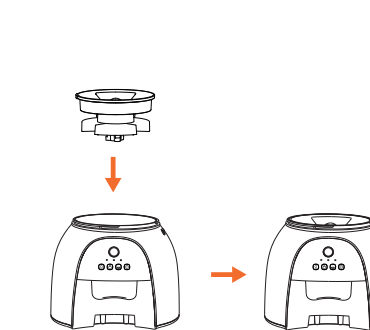


2. Assemble the Food Tank

a) Pay attention to the large (A) and small (B) alignment ports. Align the food tank with the corresponding numbered positions on the main unit as shown, with the ▼ at the bottom of the food tank housing aligned with the unlock symbol on the main unit base housing.

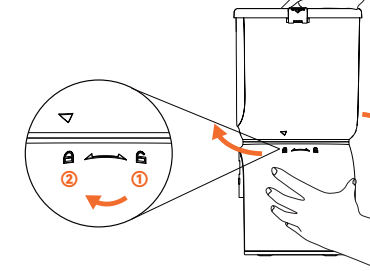


3. Install the Top Cover

Align both sides of the top cover with the food tank latches, and fasten both latches to complete.

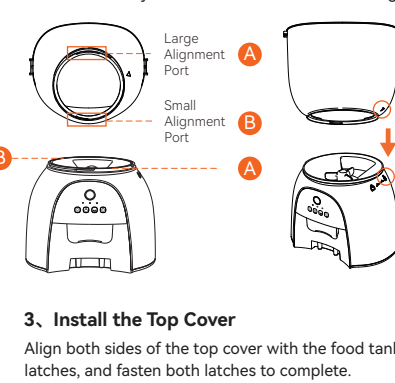

4. Place the feeder base on a horizontal surface, with the food tray stuck on the base.

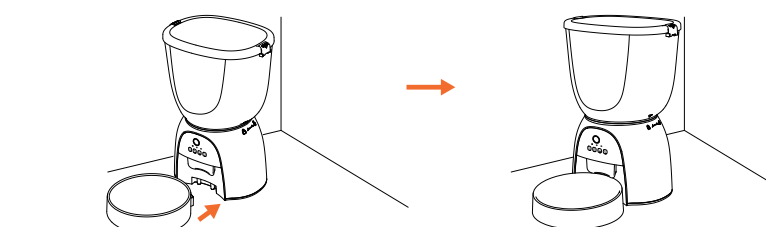

Buttons and Indicator Lights Description

- Record Button:** Press and hold for 1 second to start recording with a beep, when hear two beeps to end recording. The feeder only support up to 10 seconds recording. Delete recording: Long press for 1 second to make a beep, release the recording button for 1 second, and end the recording when you hear two beeps. (In fact, a short period of blank recording is to replace recording)
- Lock/Unlock:** Under unlock state, long press for 6s and the red indicator light flashes twice, lock the device. Under locked state, long press for 6s and the red indicator light flashes twice, unlock the device.
- Feed Button:** short press to serve 1 portion, there are recordings and 2 recordings are played at the same time. Under locked state, long press for 6s and the red indicator light flashes twice, unlock the device.
- Settings Button:** Press and hold for 7 seconds to make a "ding dong" sound, and the device will automatically restart after restoring the factory settings (the red light flashes quickly for 7 to 10 seconds and then goes out, the blue light is always on for 10 to 15 seconds and then flashes).

Indicator Light Color	Indicator Light Signal	Device Status
Blue	Flashing	Waiting for the distribution network
	Constant Brightness	The network connection is successful
Red	Power on	WiFi quick connection/WiFi mode switch always on for 6 seconds
	Flashing	Warning: detection of tank switch (motor does not rotate)
	Flashing twice	Lock / Unlock
	Power on	WiFi quick connection/WiFi mode switch always on for 6 seconds

Note: Button usage is only effective when the buttons are in the unlocked state.

Simple troubleshooting

Problem solution

- Q: Cannot be configured**
A: 1)WiFi name and password do not use Chinese, no more than 12 digits, please use a combination of numbers and letters, 5G WiFi signal is not supported, please use 2.4G WiFi signal.
2)Some software conflicts in the phone also cause the connection to fail. Please restart the phone, close the non-system software started with the phone, turn on the phone's location, and try to reconnect.
- Q: The feeder is inaccurate or unable to feed**
A: Please check whether there is too much food in the food pan and whether the food passage is blocked, and clean the food outlet and food passage. When using battery power, please check whether the battery is dead or leaking.
- Q: The feeder is offline**
A: Please check the distance between the feeder and the router at home, not more than 10 meters, and try not to divide the wall in between. According to the WiFi characteristics, the WiFi signal of the partition wall will drop sharply, causing the connection to be unstable and offline.
- Q: No response after boot**
A: First check whether the power is plugged in and whether the switch is turned on. If they are all plugged in, please check whether the power adapter and power cord are damaged, and contact customer service.

折页尾页

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

Specification

Food Tank Capacity : 5L
Power Supply: DC 5V/1A power adapter; 3pcs alkaline D batteries
Power Supply: AC100-240V input, DC5V output
Product Weight: 1.37±0.1kg
Size: 22.6*17*33.4cm
BE-081-D

Instructions

01 | Installation


Complete assembly in the order of installation.



03 | Pouring pet food

- Open the desiccant box on the top cover and place the desiccant inside.
- Pour dry pet food into the food tank, close the food tank lid, and fasten the latches on both sides.



Note:
1) Do not place wet or spoiled pet food.
2) The recommended pet food size range is 3-10 mm.

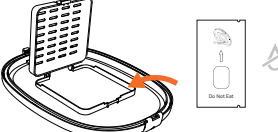

02 | Connect the power supply

- Plug the 5V/1A power adapter into a wall socket and connect the device.
- Open the battery compartment on the bottom of the unit and install 3 alkaline D size batteries (not required) in case of power failure.

Note:
1) Subsequent battery replacement needs to be purchased by yourself.
2) Before connecting to the power supply, make sure all parts are clean and completely dry.

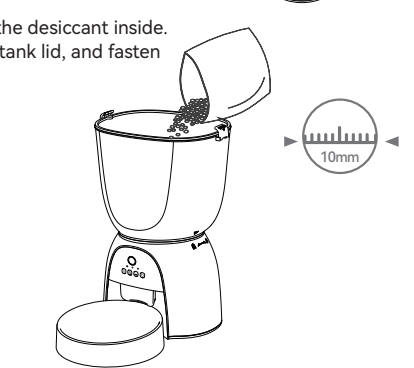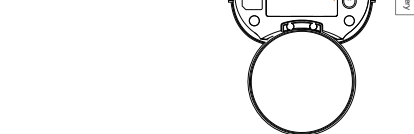

04 | Lock/Unlock

- Long press for 6 seconds the red indicator light flashes 2 times to lock the button, and long press again for 6 seconds the red indicator light flashes 2 times to unlock the button.
- In the locked state, you can press and hold the [Feed] button to restore the factory settings.

Note:
1) Pressing the recording and feeding buttons in the locked state does not work, and it must be unlocked for normal use.
2) The operation of the APP is not affected when it is locked.



06 | Recording

Press and hold the recording button for 1 seconds until you hear a beep and start recording, and hear two beeps to end the recording. The feeder support up to 10 seconds recording, and you can repeat this process to change your recording.


Note:
1) It will play only when it is pressed when there is recording.
2) When the feeding time it will play the recording back.



05 | Feeding

Manual feeding: short press to serve 1 portion, and will play the recording 2 times at the same time.

Note:
The feeding plan will not be affected.

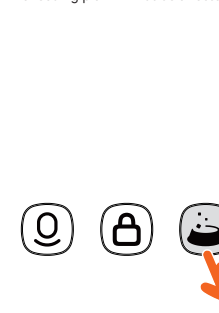



07 | Factory Reset

Press and hold for 7 seconds to make a "ding dong" sound, and the device will automatically restart after restoring the factory settings (the red light flashes quickly for 7 to 10 seconds and then goes out, and the blue light stays on for 10 to 15 seconds before flashing).

Note:
1) It will play only when it is pressed when there is recording.
2) When the feeding time it will play the recording back.




Smart Life APP Specific Operations

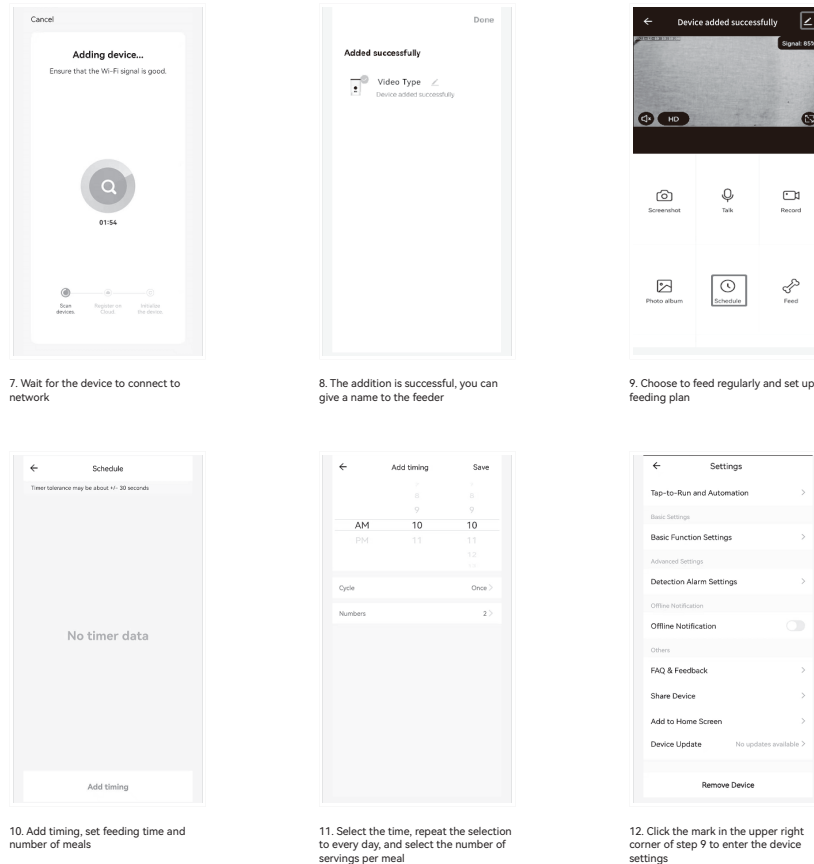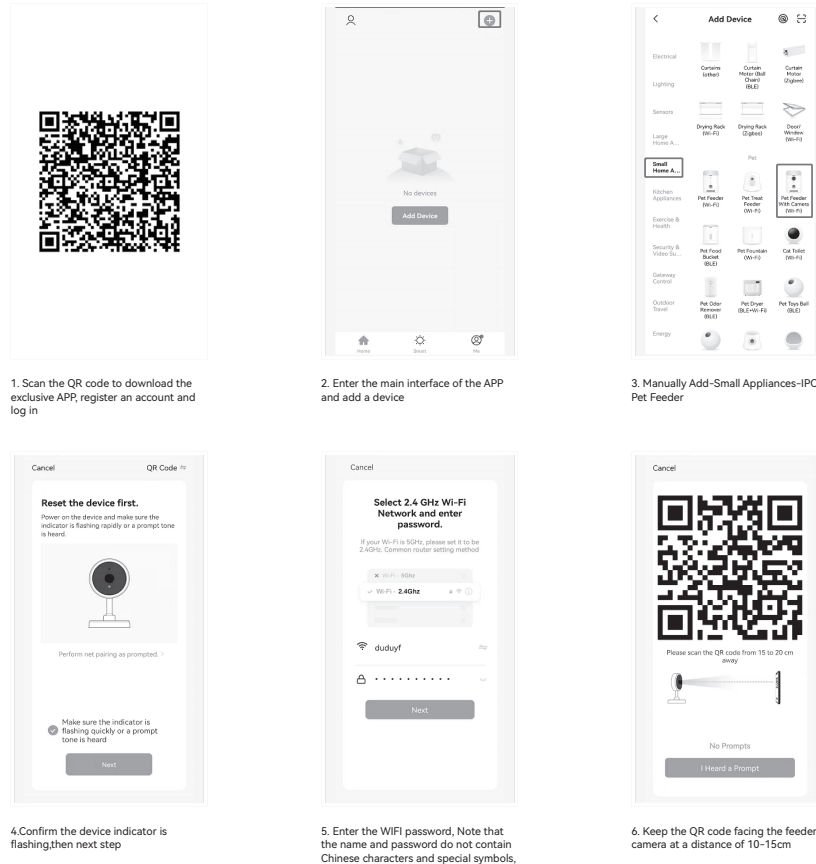


Cleaning Instructions

Clean the device following these steps:


- Remove the food tank lid, empty all food from the tank (essential).

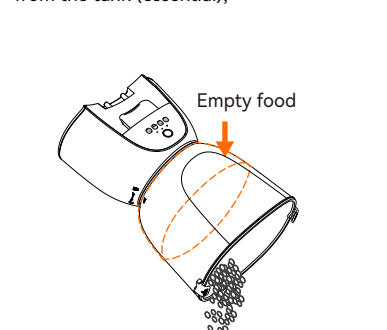

- Remove the food tank base;

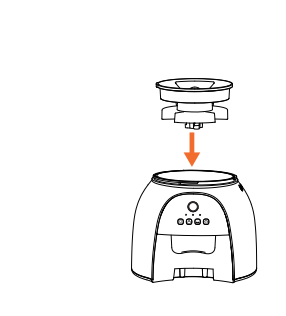


- Remove the food tank; grasp the food tank with your hand, hold the base, rotate counter-clockwise, and remove the food tank;

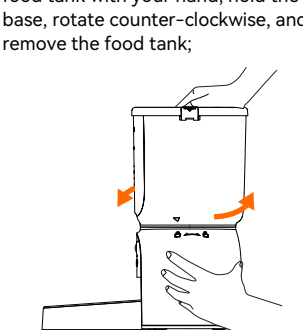


- Empty the food from the food tray, remove the food tray;




- Rinse with clean water or clean with food-grade detergent, and wipe dry or air dry.

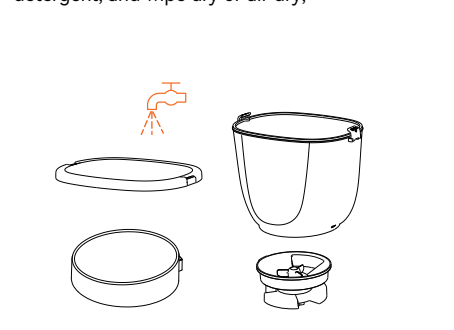

- Reassemble: After the device is dry, assemble the device according to the [Assembly Sequence];

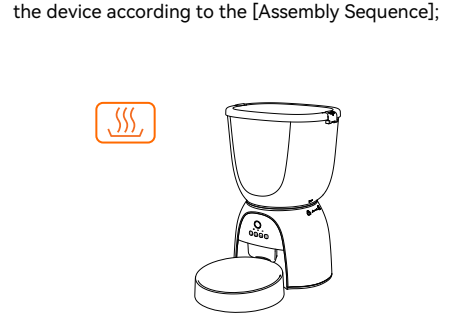

- The main unit can be wiped with a damp cloth, do not rinse with water.

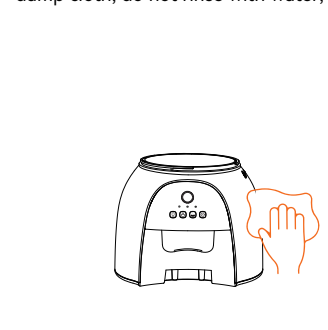

- Do not put the feeder in the dishwasher, otherwise it will be permanently damaged!

