

buways

Cordless Electric Mop



User Manua for Cordless Electric Mop

Thanks for your purchase from buways shop

Any questions please don't hesitate to contact us, we will handle al your problems ASAP.Your feedback is vital to us! And we will always try to do better.

For more details,please contact us by frienda-direct@hotmail.com

(Please Write your Order on the subject of the email, so that we can find your order and better assist your issue).

Catalog

Specifications & Types of Mopping Pad	1-2
Product Parts and Name	3
Product Assembly Method	4
Product Use Method	5
Safety Warnings&Trouble Shooting	6-7
Product Warranty	8

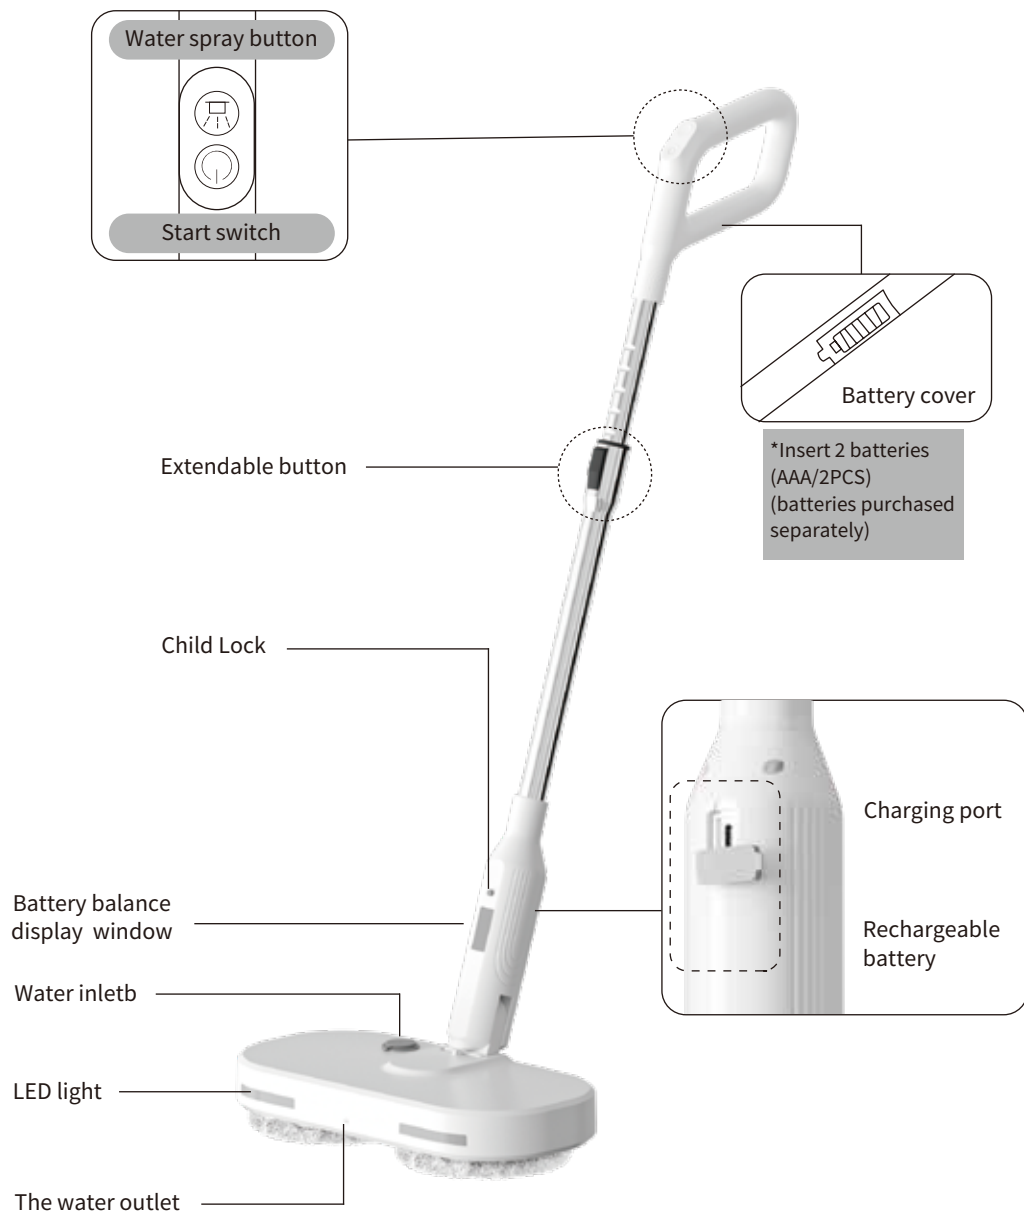 
Specifications

Product Name:	Cordless Electric Mop	Model:	CEM-01
Adapter Rated Voltage:	100-240V, 50/60HZ, 0, 5A	Run Time:	Up to 80 mins
Rated power:	11.1W	Water Tank Capacity:	380ML
Rotating speed:	High Speed : 220±30RPM/ Low Speed : 180±30RPM	Product Size:	36.8*18*115CM
Product Weight:	4.4LB	Battery Capacity:	4000mAh
Charging Time:	4-5hours	Waterproof Rating:	IPX6
Original:	China	Package Contents:	Electric mop*1 Instruction manual*1 USB charger*1 200ML Measuring cup*1 Mopping pads*6

3 Types of Mopping Pads

	■ Orange Mopping Pads: For daily deaning and waxing, sach as dust and dirt.
	■ White Mopping Pads: For deep cleaning and spot cleaning, specially for larger dirtystains.
	■ Pink White Mopping Pads: For hair deaning and wet cleaning, specially for edge cleaning.

Product Parts and Name



Product Assembly Method

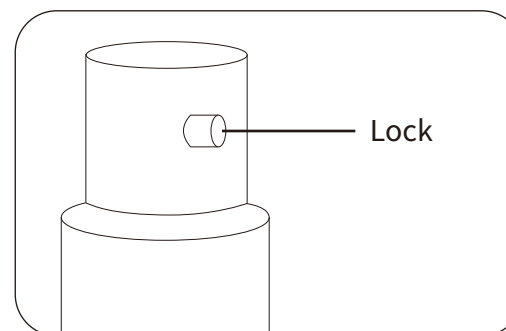


Due to the characteristics of assembled products, please pay attention to breakage when assembling products.

NOTE

01
The package contains the mop host and the adjustable lever, please take out the handle and remove the plastic bag.

02
Combine the handle with the adjustable lever(- make sure that it protrudes exactly from the connection slot).

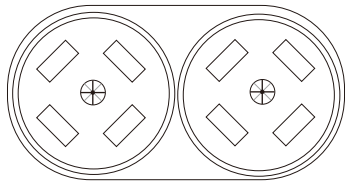
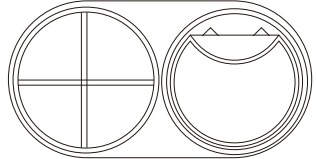
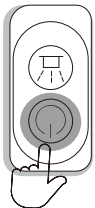
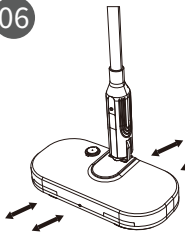


03
Please assemble the mop host and adjustable lever part;
※ The length of adjustable lever be as short as possible for easy mounting.



Product Use Method

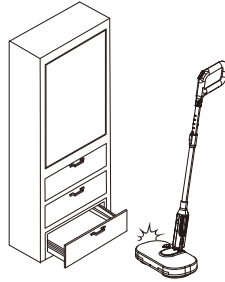
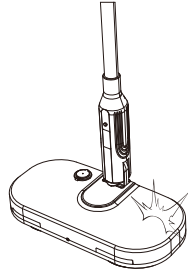
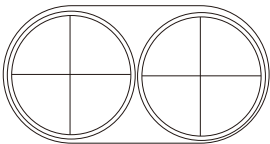
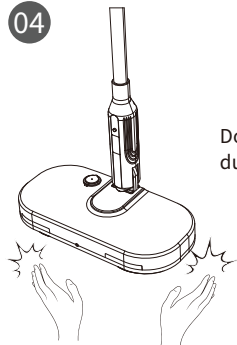
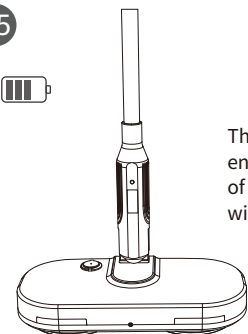
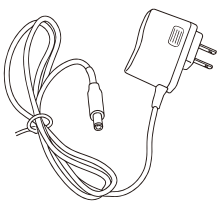
The cloth material is a special chemical fiber material, which produces less dust, bacteria and dust mites are not easy to reproduce and are very clean

01  After fully wetting the microfiber wipe, squeeze out the water with appropriate force (roll the microfiber cloth inward)	02 Please fixed rotating panel facing 
03  Please stick the cloth pad in the center of the turntable (otherwise it may rub on both sides and cause a malfunction)	04  Make sure that the floor is free (foreign objects can cause malfunctions or accidents)
05  Press and hold the child lock button until the battery indicator lights up and grasp the handle and press the power button to use	06  Hold the mop handle with a gentle pushing and pulling action to clean repeatedly
07  When cleaning, if there is a lack of water, please press the water spray button to use	08  After working, charge it with the original adapter (charging time is approx 4-5 hours, check the power level of the LED display before using it)



!!! Please keep it well after use, do not lose it

Safety Warnings

01  During use, please do not repeatedly bump into furniture, sofas, beds, etc., repeatedly bumping will cause damage to the appearance or injury to the motor	02  Do not drop the product or hit it hard
03  When placing the cloth pad on the turntable exactly (otherwise it may rub on both sides)	04  Do not touch the turntable during operation
05  The use of different environments, the use of time and battery life will be different	06  Always use the certified adapter (Using non-certified adapters may cause product malfunction, fire, or damage.)

Trouble shooting

► Confirm them before requesting repair or services:

In this case	The reason and places to check	Repair method
Nothing works when the switch is turned on	● Battery depletion and weak power? ● Does not work after charge	Please use after fully charging Please replace the battery in the control box on the backside of the handle
Don't charge	● The wrong voltage? ● Is there any foreign matter ● Is the operating time shortened?	Please connect the charger to a 100-240V power supply Please use a cotton swab or soft cloth to remove foreign charging port Go to the call center to purchase new batteries
Mop host shakes	● The mop pads are installing correctly?	Check the mop pads if they are correctly installed,incorrect installation may cause shaking during use.

■ Warranty Period

The warranty period of the product is 1 year from the date of purchase.

■ Paid Services(customer bears the cost)

- 1.Injecting foreign substances into the product when it fails,such as water,drinks,coffee, adhesives,etc.
- 2.Breaks or malfunctions due to dropping
- 3.When appearance damage or deformation occurs due to thinner,benzene and other organic solvents
- 4.This product is not genuine products or accessories failure
- 5.Use in the state of improper voltage causes the product to malfunction
- 6.When the customer disassembles the product at will,resulting in the loss or breakage of accessories
- 7.When the failure is caused by natural disasters (lightning,fire,wind and water damage,- gas,earthquake,etc.)
- 8.Failure to comply with the product instructions safety precautions of this product when a malfunction occurs
- 9.Consumable accessories,(blades,batteries,etc.)problem
- 10.Not provide product warranty
- 11.When the failure occurs due to the fault of the customer.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.