

For More Information



“SJCAM X”
App Download



Video
Tutorials




User
Manual



<https://www.sjcam.com/support/c100pro/index.html>



Product Overview

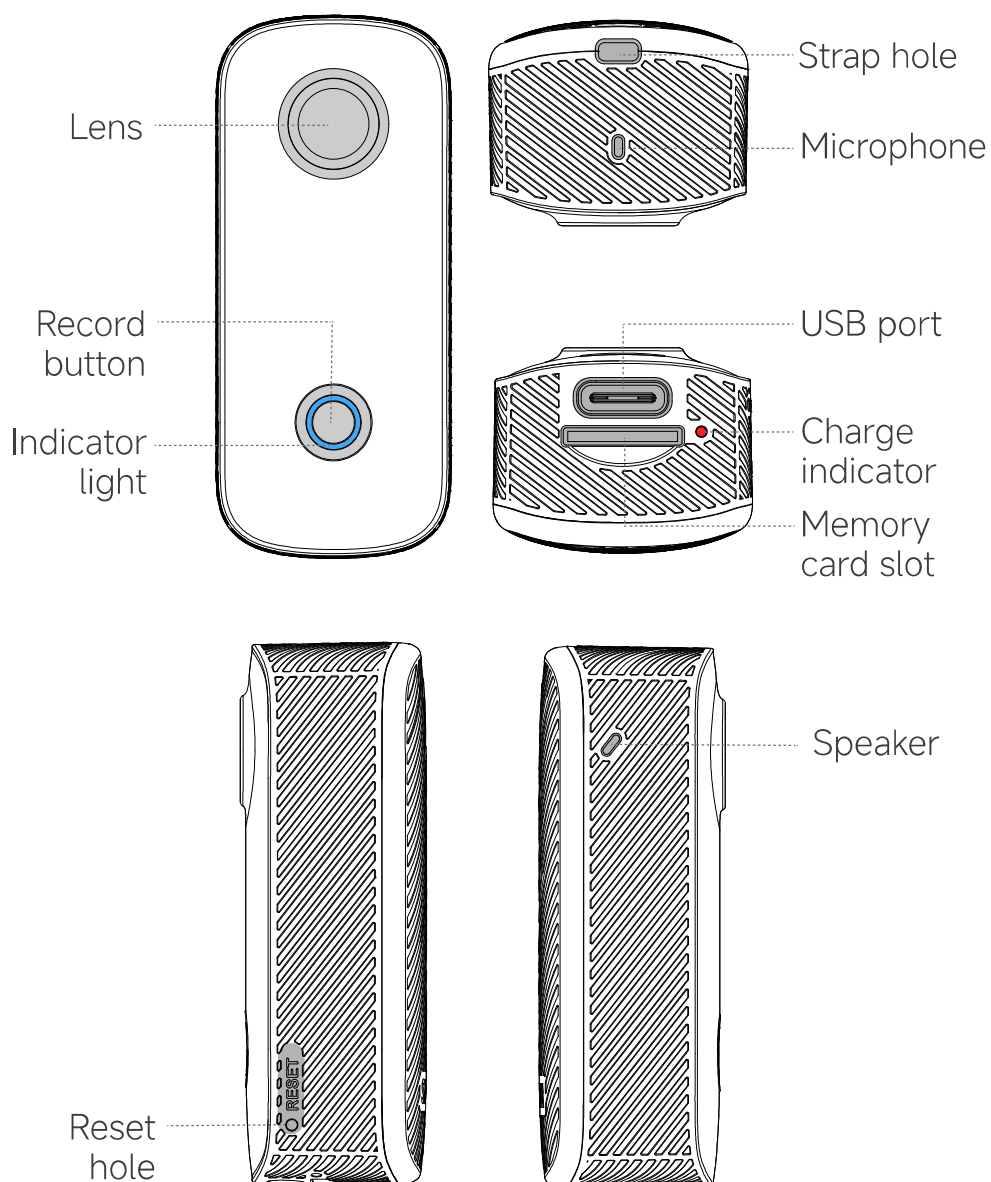

Status indicator


Indicator status		Description
  —	Blue light flashes once, then stays on	Power on
	Blue light flashes	Recording
	Blue light flashes once	Taking a photo
 	Blue light flashes quickly, then turns off	Power off
 	Blue and green light flash quickly	Wi-Fi on, waiting to connect
 —	Green light stays on	Wi-Fi connected



microSD card Installation

Insert the SD card with the metal contacts facing inward into the card slot and push it all the way in.


Note: The microSD card need be purchased separately.

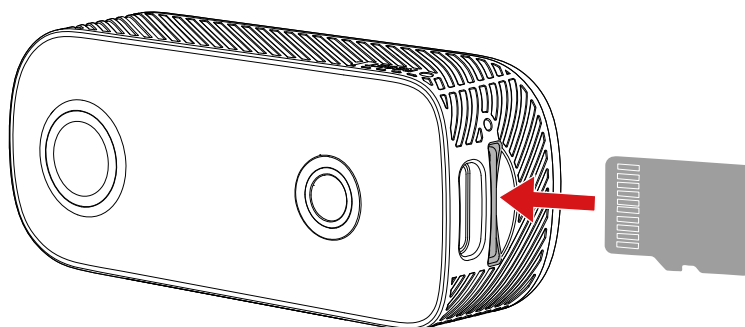

ON and OFF


Power ON: Press and hold the power button for 4 seconds to turn on

Power OFF: Press and hold the power button for 4 seconds to turn off

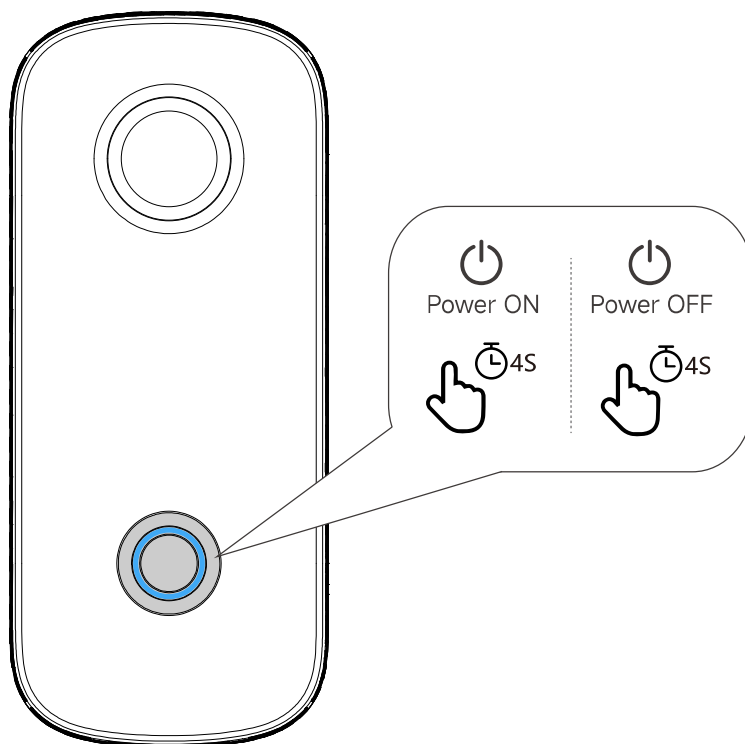




Button Functions

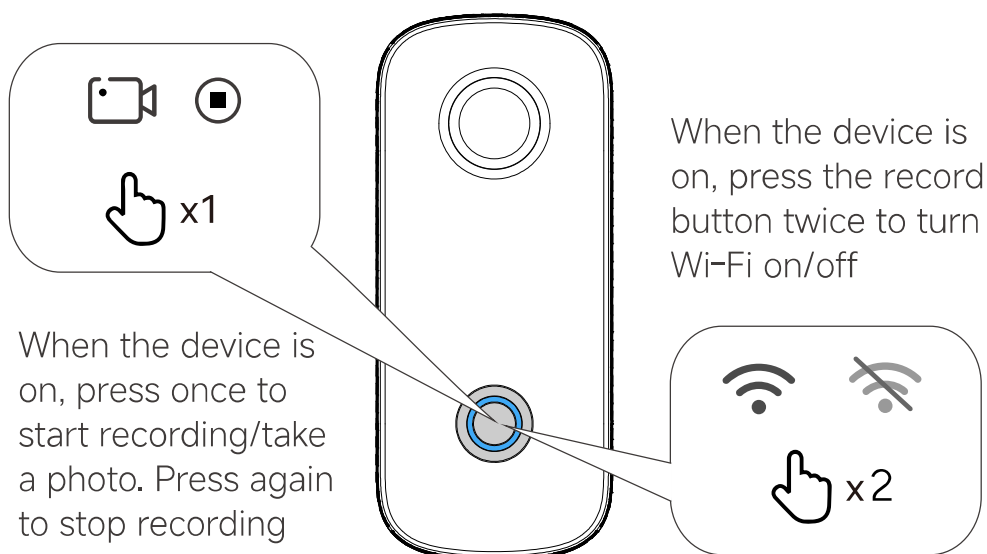

Charging and Data Transfer

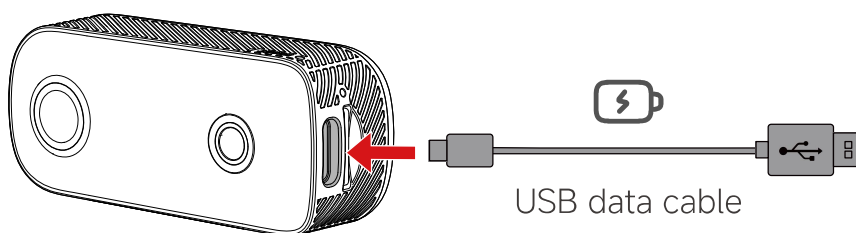


Charging



Fully charged – light off

Connect the camera to your computer to transfer data.

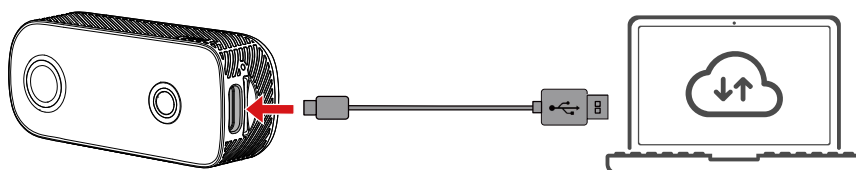


With an SD card inserted: The computer recognizes the camera as a removable disk. You can directly access and copy files.

Without an SD card inserted: The camera functions as a PC webcam.



Download and Install the SJCAM X App

Scan the QR code below, or search “SJCAM X” on the App Store or Google Play.

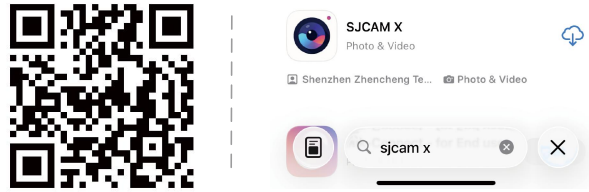


Bluetooth Quick Connection (Recommended)

1. Ensure the C100 Pro is powered on.
2. Open your phone, go to the Settings app, find the Bluetooth option, and enable Bluetooth.
3. Open the SJCAM X app and authorize the relevant permissions.

Follow the steps below, and wait for automatic connection

*Permissions are only used to connect the app and camera, and for no other purposes.

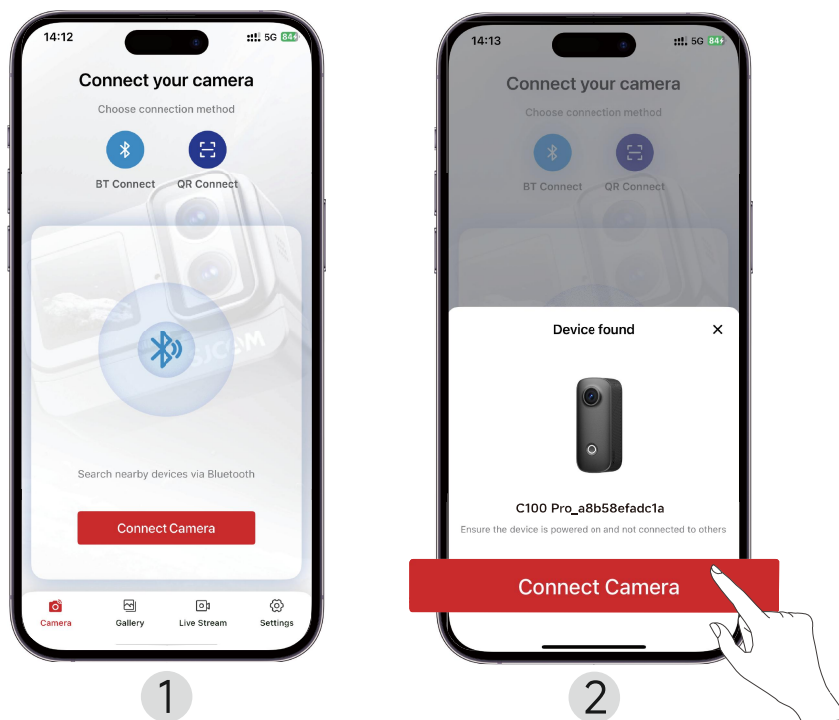


Scan the QR code to learn about more connection methods:







Back clip

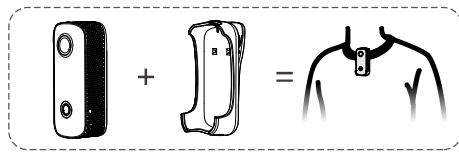


1

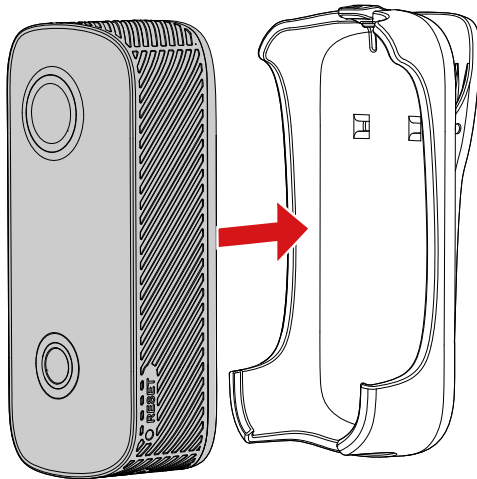


2

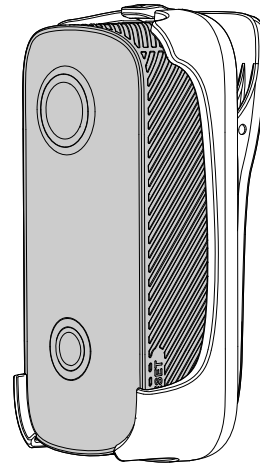


3

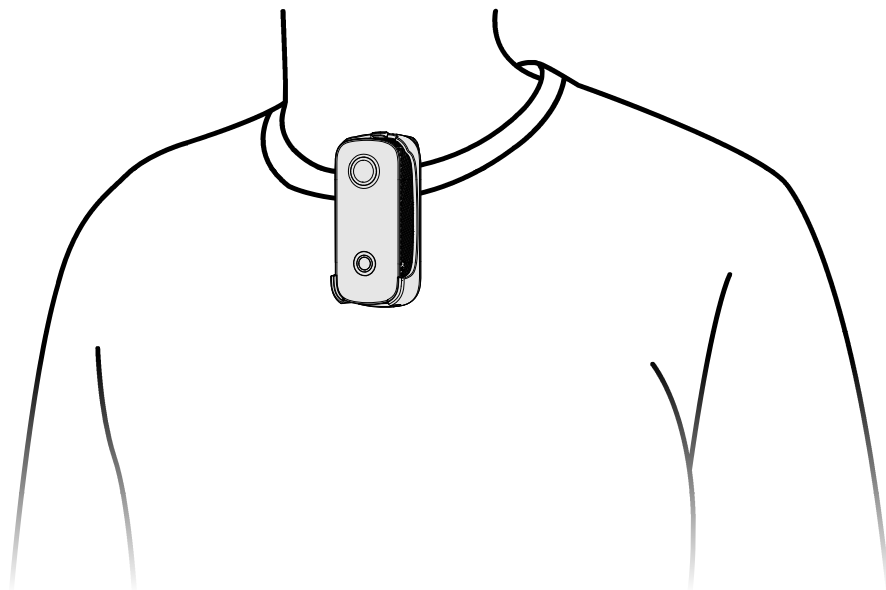


Magnetic lanyard

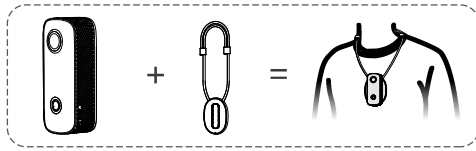


1

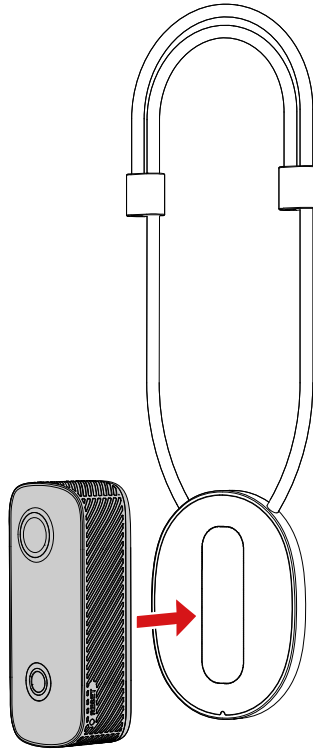


2

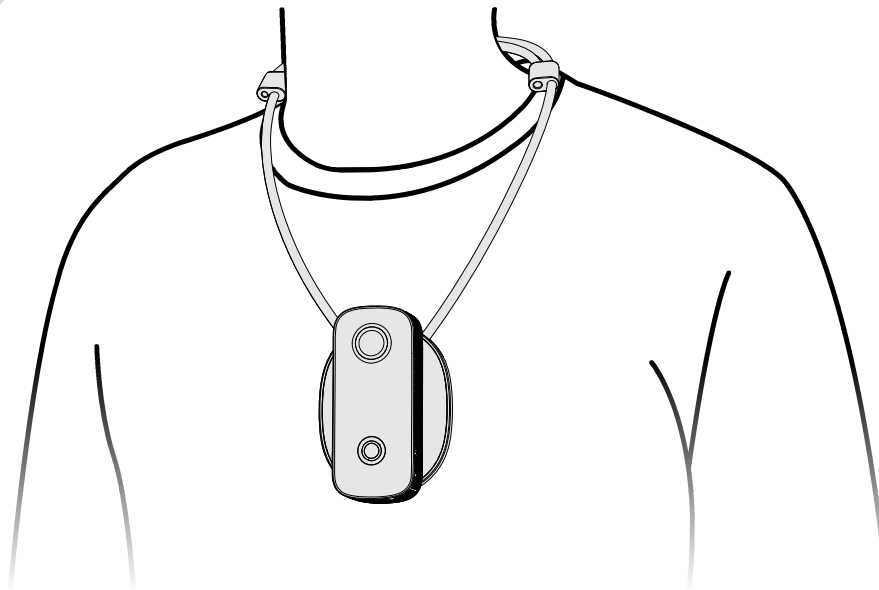


Frame mount

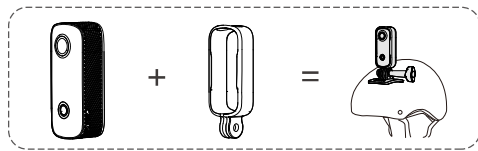


1

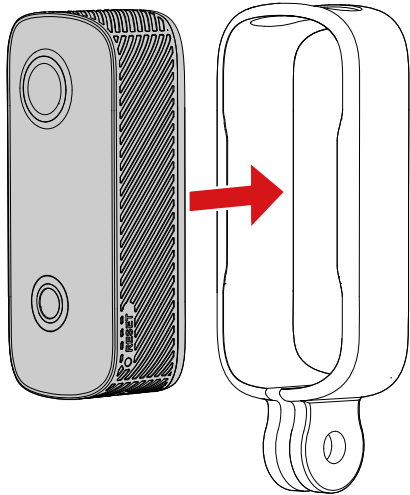


2

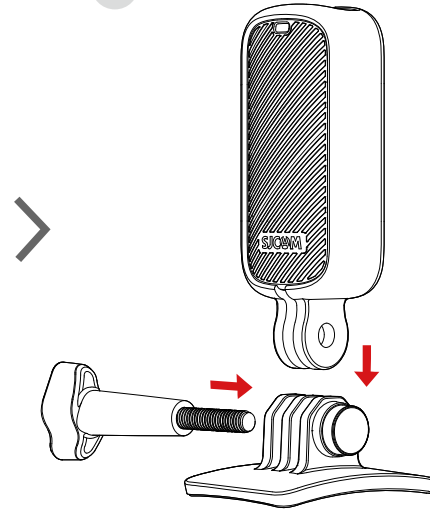


3

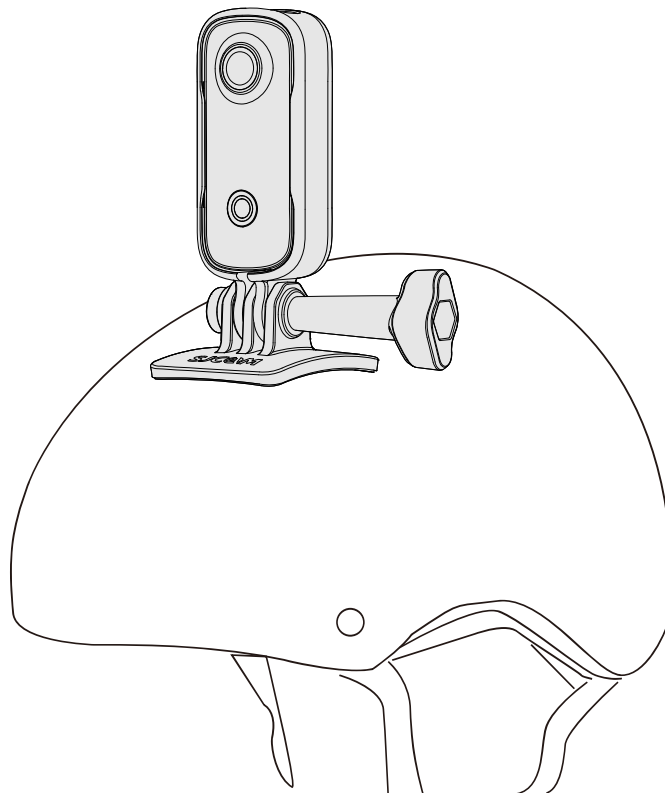


Waterproof case

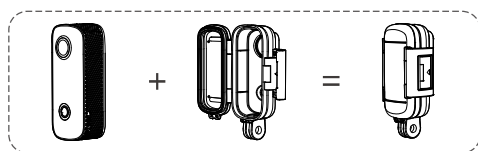


1

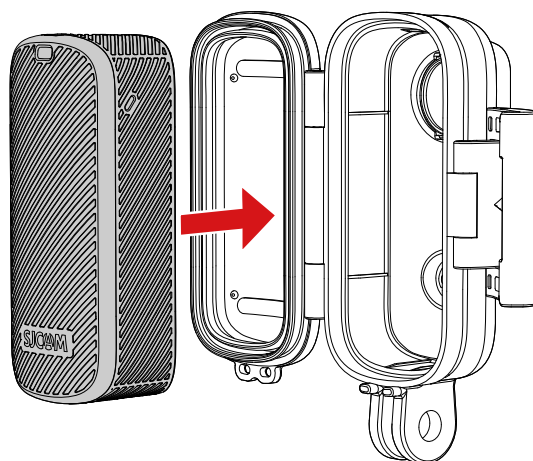


2

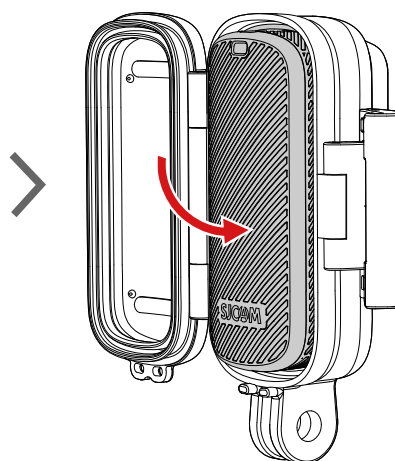

3

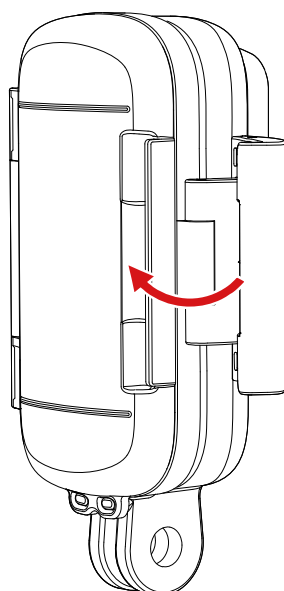


4

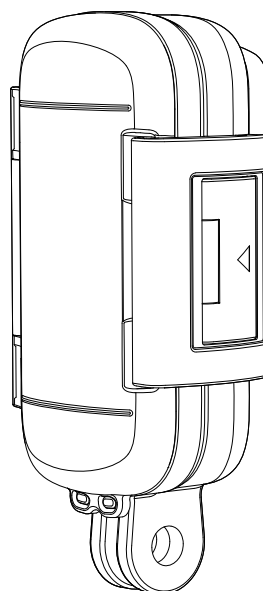



SJCAM C100 Pro

Quick Start Guide

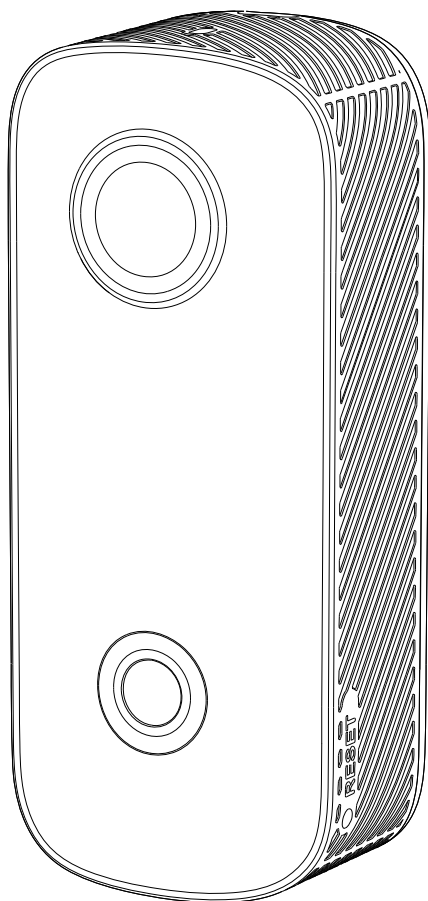

Technical Support: support@sjcam.com

Website: sjcam.com

v1.0

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.