



M4 Wireless Microphone

Please carefully read this manual before using the device

Contents

Precautions -----	1
Product Overview -----	2
Pairing Instructions -----	3
Wearing Instructions -----	4
Furry windscreen Installation -----	5
Charging -----	5
Warranty Terms -----	6

Precautions

1. Waterproof Guidelines

This product is not waterproof. Avoid using or exposing it in rain, snow, fog, or any humid environment. Prevent the device from contact with liquids or splashing.

2. Safety Instructions

Avoid impact, dropping, or placing heavy objects on the device. Do not disassemble the product yourself, as this may damage the battery and cause safety hazards. Avoid using or storing the device in extremely high or low temperature environments.

3. Additional Notes

Due to continuous product improvements and upgrades, the packaging appearance, operation, or functions described in this manual may differ slightly from the actual product.

Product Overview



Status Indicator

Indicator Status		Description
	Blue light flashing	Device powered on but not paired with the camera
 —	Blue light solid on	Successfully paired with the camera
	Blue & green lights flashing alternately	Pairing mode activated, waiting for pairing
 —	Red light solid on	Charging; red light turns off when fully charged

Pairing Instructions

* Note: The M4 wireless microphone supports pairing only with selected SJCAM action camera models. Please confirm that your SJCAM camera supports the wireless microphone function before purchasing.

1. Enable Microphone Pairing Mode With the microphone powered on, press and hold the Pairing Button for 3 seconds. The status indicator will flash blue rapidly, indicating that the microphone has entered pairing mode.

2. Enable Wireless Microphone Pairing on the Camera.

2.1. Enter the camera Settings menu.

2.2. Locate and enable the Wireless Microphone option.

2.3. After enabling, the camera will automatically search for the microphone. When the microphone indicator shows a solid blue light, pairing is successful and the camera will capture audio via the wireless microphone.

* Notes: The wireless microphone features a memory function. Once successfully paired, it will automatically reconnect when powered on again, without requiring repeated pairing.

For detailed connection instructions, please scan the QR code to watch the tutorial video.



<https://www.sjcam.com/support/m4mic/index.html>


Wearing Instructions

The microphone can be securely attached to clothing using the back clip. For optimal audio pickup, it is recommended to attach the microphone to your collar during use.



Furry windscreen Installation


When using the microphone outdoors or in windy environments, it is recommended to install the Furry windscreen to reduce wind noise. Align the wind muff opening with the microphone port and press it firmly into place.

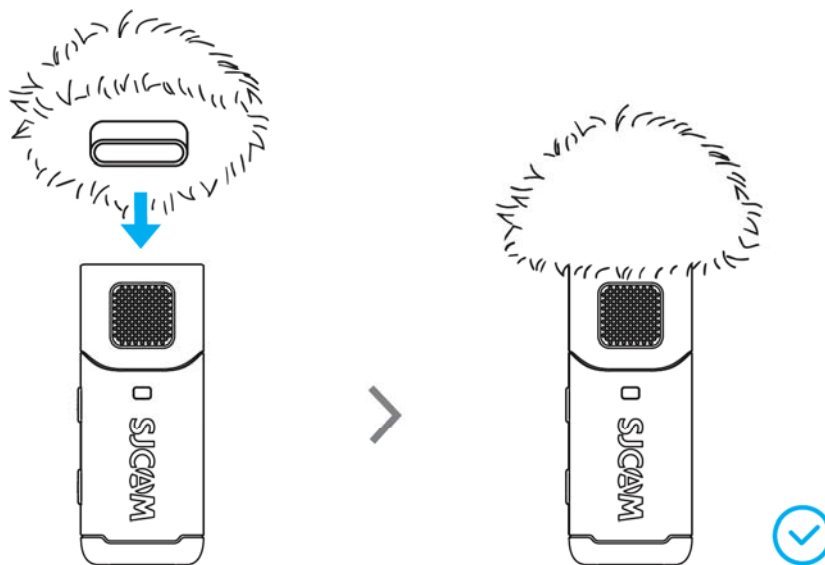

Charging

Connect the microphone to a charger using a USB Type-C cable via the USB port to begin charging.

* Use a 5V power adapter (not included).

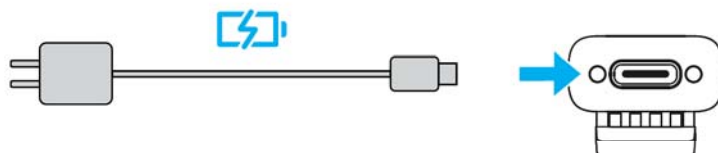

Warranty

1. The warranty period for the wireless microphone is one year from the date of purchase, or longer if required by applicable local laws. If any quality issues occur within the warranty period, users are entitled to free repair service.
2. When providing warranty services, all replaced main units, parts, components, and accessories shall remain the property of SJCAM. Before returning the product for warranty service, make sure to back up any data stored on the product and delete any confidential information or personal data. SJCAM shall not be liable for any losses caused by data loss or disclosure.
3. The following circumstances are not covered under the warranty:
 - 3.1. Product malfunctions or defects not caused by SJCAM (including but not limited to improper use, maintenance by the consumer as per the product manual; unauthorized disassembly, repair, or modification by the consumer or unauthorized service centers; use of components or accessories not approved by SJCAM; use for purposes other than photography; liquid or food ingress; use in high-temperature or harsh environments; damage caused by human factors or personal negligence such as squeezing or dropping).
 - 3.2. Natural wear and tear of the product (including but not limited to the casing, buttons, accessories, etc.), and any periodic inspections, maintenance, repairs, or part replacements resulting therefrom.
 - 3.3. Discrepancies or alterations between the contents of the valid invoice and warranty card and the actual product.
 - 3.4. Unclear, altered, damaged, removed, or illegible product serial numbers, barcodes, SN codes, etc., or damaged or removed anti-tamper labels or waterproof labels on the main unit.
 - 3.5. Machine malfunctions caused by continued use after battery casing damage or short circuits due to human factors.
 - 3.6. Human-induced damage, including but not limited to accidental drops, liquid ingress, improper use, etc.
 - 3.7. Damage caused by force majeure events such as natural disasters.

4. The following circumstances will void the warranty:

- 4.1. Failure to use the product correctly in accordance with the product manual.
- 4.2. Unauthorized disassembly, repair, or modification.
- 4.3. Intentional damage or misuse of the product.
- 4.4. Use of the product in violation of relevant laws and regulations.

5. Important Notes:

During the warranty period, users must keep the product purchase receipt properly and provide it when necessary.



Made by Shenzhen ZhenCheng Technology Co.,Ltd.

3/F Building C, NO.2 Road 1, Shang xue Industrial Area

Ban tian, Long gang District, Shen zhen, China

Technical Support Email : support@sjcam.com

Official Website : sjcam.com

Made in China

V1.0

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.