 
 


C66 Wireless Bluetooth Headset
Instruction manual

Packing list

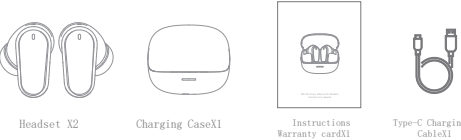

Product diagram



Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any other liquid. The earbuds are not waterproof.
- If any liquid enters the product by accident, please disconnect and remove the connection immediately.
- Please make sure there is no water on your hands when installing or uninstalling the product to avoid electric shock.
- Do not put the product near a heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product specifications

Bluetooth version: V5.4
Transmission distance: ≤10M
Music time: 5-6 hours
Horn size: Φ13mm
Charging time: 1 hours±0.5 hours
Battery capacity: 38mAh
Rated input: 5V === 30mA
Standby time: 12 hours

Charging case specifications

Battery capacity: 300mAh
Charging time: 1 hours±0.5 hours
Rated input: 5V === 220mA
(All technical information is subject to actual performance)

Charge the charging bay. Connect the charging bay to the 5V power adapter with a Type-C charging cable.
(Warm tip: low voltage warning if the voltage is lower than 3.4V (once every 60 seconds) (Voice prompt: **battery low**)




Rated input: 5V === 30mA (headset) Rated input: 5V === 220mA (charging case)

LED Indicator Status

Power On	The white lights flash
Power Off	Turn off the light
Power-on automatic pairing	The main headset flashes white
Pair left and right earphones	The main headset flashes white
Successful connection	Turn off the light
disconnect	The main headset flashes white
Earphone charging	The white lamp keeps on

Product Operation Instructions

 - Turn on: Take out the headset and turn it on or (manually press the Touch button for 5 seconds to turn it on).
- Turn off: Turn off the headset in the warehouse or (manually press the Touch button for 5 seconds to shut it off).
- Pairing and joining:
 - Open the cover of the charging cabin and take out the earphones. The left and right earphones will start automatically.
 - When the headset is connected to the mobile phone, the headset automatically enters the pairing state after manually turning off the Bluetooth of the mobile phone. Headset Connect to mobile phone: When the headset is paired, select "C66" in the Bluetooth list of mobile phone to pair. After the pairing is successful, the earphone will play "TFS Connected/TFS Connected successfully".
 - If the headset pairing state is not connected to the mobile phone, press Touch button of any ear four times to switch the English and Chinese prompt tone.
(Note: headset pairing status is not connected to the device, it will automatically shut down after 3 minutes)




Link back:
1. After the left and right earphones are turned on, they will be connected back automatically.
2. After the headset is successfully paired with the mobile phone, the headset will automatically connect to the mobile phone after it is turned on when the Bluetooth of the mobile phone is enabled.

Touch operation


■ SILENCE



 ■ MUSIC MODE



■ CALL MODE

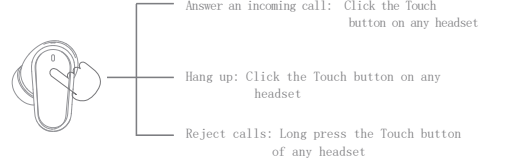 

The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PEDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○
This form is compiled in accordance with SJ/T 11364. O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit required by GB/T 26572. X: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds the limit requirements specified in GB/T 26572. The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances. Printed circuit board components: Including printed circuit boards and their parts, electronic components, etc., and depending on the product model, the earbuds you purchased may not contain all the above components.						
Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.						



Warranty statement

Disclaimer:
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired. Free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13(13) months.
If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:
1. Exceeding the validity period of the three packs;
2. Altering the warranty card and product code does not match the product body;
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident bad;
5. The zipper and tower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product;
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.