 
 


Installation Notes

 
Step 1: Cut a 4.7inch hole and make sure there is 5.5inch depth under.




Step 2: Remove the lock ring from the socket, then put the socket into the hole.

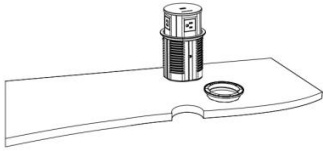

Step 3: Turn the clasp to tighten to the back of the desktop.



 Step 4: Complete installation.



More reliable, CE certification

Suitable for workstation, supervisor desk, shift desk, conference table, negotiation table, leisure sofa, etc

Notes

Avoid debris, dust and other foreign matter into the socket, USB hole and according to the bomb moving slot;

Do not contact with water, corrosive liquid, flammable and explosive materials during the use of this product.

This product please avoid strong knocks, collisions or drops;

This product is strictly prohibited to be exposed to overheat, undercold or humidity. The ambient temperature is -10℃ ~ 40℃.

When using, it is strictly prohibited to tie the wire to avoid abnormal overheating;

Keep out of reach of children in a safe place in case of danger;

This product is suitable for safe use in areas with altitude of 5000m and below.

Tech Specification		What this Warranty Covers	What This Warranty Does Not Cover
Item	OEUP021	We warrant that each product that you purchase is free from defects in materials and workmanship under normal use during the warranty period. The duration of this warranty is then offered as a return to base service. Only the cost of the parts and labor involved in servicing any eligible repairs under the return to base warranty are covered. How to Obtain Warranty Service If the product does not function as warranted during the warranty period, you may obtain warranty services by contacting us directly or our authorized dealer. Replacement of a Product or Part Before we replace a product or part, you agree to: 1. Remove all features, parts, options, alterations, and attachments not under warranty service; 2. Original invoice or other proof of purchase; 3. Valid warranty card;	This warranty does not cover the following: • Out of warranty period; • No warranty card, invoice or other proof of purchase; • The warranty card model does not match the product model or has been altered; • Failure to use, maintain, or use non-original accessories in accordance with the requirements of the "Instruction Manual"; • Unauthorized repairs, alterations, and misuse, collision, drop, squeeze, fluid in, corrosion; • Periodic damage, alteration, or inability to identify product labels, seals, and serial numbers (SN); • Damage caused by force majeure such as flood, fire, lightning strike, etc.; • Defects caused by normal wear or aging of the product; This warranty is voided by removal or alteration of identification labels on the product or its parts
What is in the BOX -Socket -Instruction manual			

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses

and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for WPT device:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15cm surrounding the device and 20 cm above the top surface of the device must be respected.