

 



## 6 EC Declaration

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the points where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never pull liquid of any kind on the product.
7. Do not attempt to service the product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

- 1 x Main Unit
- 1 x AC adaptor
- 1 x Line in Cable
- Instruction Manual
- Guarantee Card

- O Line out**  
Use to connect the turntable audio output to active external speakers.
- P DC-In socket**  
Used to connect the turntable speaker to the mains power supply.

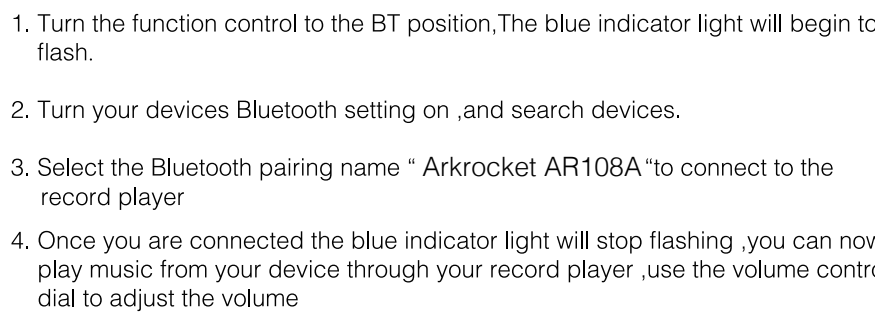

| Problem                                              | What to do                                                                                                            |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Power does not come on when the unit is switched on. | Plug the AC adapter into a wall outlet.                                                                               |
| No sound comes out of the speakers.                  | Adjust the volume.<br><br>Re-select the desired input source using the mode button                                    |
| The unit does not respond.                           | Remove the power cord and all other power supplies from the device, and then plug in the unit again after one minute. |
| The sound is distorted when playing the record.      | Place the stylus in the centre.                                                                                       |
| Unit gets warm after extended play at high volume.   | Turn the unit off a period of time or lower volume.                                                                   |

### Installing Needle

1. Position the needle with its tip facing down.
2. Line up the back of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.

|                   |                      |
|-------------------|----------------------|
| Model number      | AR108A               |
| Bluetooth version | JL 5.0               |
| Input             | AC 100-240V ~50/60Hz |
| Power supply      | 5V $\pm$ 100mA       |
| Speaker driver    | 40 x 70mm, 4OHM      |
| Speaker power     | 2 x 3W               |
| Dimensions        | W355 x D120 x H278mm |
| Weight            | 2600g                |

For proper treatment, recovery and recycling, please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

